

PARTS CATALOG
FOR
Standard Typewriter



Remington Rand
INC.

315 FOURTH AVENUE

NEW YORK, N. Y.

REMINGTON STANDARD TYPEWRITER

FOREWORD

This Catalog illustrates and lists Service Parts for the Remington Standard Typewriter. The illustrations are arranged in groups showing the parts as they are related to one another. By doing this, some parts appear in more than one group illustration.

The index to illustrations on page 3 may be used as a guide to the illustration covering the subject part. For example, if a part is desired for the back space mechanism, the index refers to the illustration on page 9. If an aligning scale is desired, the index refers to the illustration on page 18, etc. Each illustration from page 5 thru page 26 is represented in the index on page 3.

Some Special Equipment parts are not illustrated. The index on page 4 may be used as a guide to locate Special Equipment parts as they are arranged in individual numerical groups.

A numerical price list of parts, Form No. PL-94 is furnished apart from this catalog which contains part numbers and list prices of parts appearing in this catalog.

If, for any reason, a part required cannot be found in this catalog, or if doubt exists as to the correct part, please send a sample part or a reasonable drawing of the part along with your order whenever possible. In many cases, it is a great help to the factory if the machine serial number is given.

- - - - o - - - -

The Company shall not be liable for any default or delay caused by any contingencies beyond its control preventing or interfering with deliveries, including war, restraints affecting shipping, or strike, lockout, accident, non-arrival or delay of steamer or carrier, or reduced supply of raw material or excessive costs thereof, or any other contingencies beyond its control.

REMINGTON STANDARD TYPEWRITER


INDEX TO ILLUSTRATIONS

<u>SUBJECT</u>	<u>PAGE</u>
ALIGNING SCALE	18
BACK SPACE MECHANISM	9
BELL MECHANISM	16 & 17
CARRIAGE ASSEMBLY - FRONT AND REAR VIEWS	19
CARRIAGE RAILS	18
CARRIAGE SCALE	19
CARRIAGE SUPPORT RAIL	19
DESK FASTENERS (SPECIAL EQUIPMENT)	25
ESCAPEMENT MECHANISM	12
FEED RACK	19
FRAME BASE	5
FRAME BASE - PALM TAB. - ONE KEY TAB. (SPECIAL EQUIPMENT)	22
FRAME BASE - PALM TAB. - TEN KEY TAB. (SPECIAL EQUIPMENT)	23
FRAME SUPPORT - 27" & 32" CARRIAGES	8
IMPROVED KEY TENSION	6
KEY LEVERS AND KEY CAPS	7
KEY RESTORE MECHANISM	7
LINE LOCK MECHANISM	16 & 17
LINE SPACE MECHANISM	20
MARGIN RELEASE MECHANISM	16
MARGIN STOP RACK AND STOPS	16 & 19
PALM TAB. MECHANISM - ONE KEY TAB. (SPECIAL EQUIPMENT)	22
PALM TAB. MECHANISM - TEN KEY TAB. (SPECIAL EQUIPMENT)	23
PANELS	5
PAPER FEED ROLLS	18 & 19
PAPER SCALE	19
PAPER TABLE AND GUIDE	18
PAPER TROUGH	18
PLATEN	20
RIBBON COVER MECHANISM - 42 & 44 KEY	14
RIBBON COVER MECHANISM - 46 KEY	15
RIBBON FEED MECHANISM	13
RUBBER FOOT ASSEMBLY	25
SEGMENT	11
SEGMENT COMPLETE WITH TYPE BARS	12
SHIFT MECHANISM	11
SIDE FRAMES	10
SPACE BAR MECHANISM	10
SPRING DRUM MECHANISM	13
STROKE COUNTER (SPECIAL EQUIPMENT)	26
TABULATOR FRICTION	21
TABULATOR MECHANISM - ONE KEY TAB	21
TABULATOR MECHANISM - TEN KEY TAB	24
TYPE	12
TYPE BAR COMPLETE WITH TYPE	12
TYPE BAR CUSHION	11
TYPE BAR FOR REPAIRMEN	12
TYPE BAR GUIDE	11
UNIVERSAL BAR	12

REMINGTON STANDARD TYPEWRITER

SPECIAL EQUIPMENTINDEX

<u>SUBJECT</u>	<u>PAGE</u>
ACCESSORIES	61 & 62
CARD ATTACHMENT - AUTOMATIC DUPLEX	63
CARD PLATEN ROLL - DETACHABLE CLAMP	63
DESK MOUNTING AND EXTENSION FEET	62
DUPLEX ESCAPEMENT - HALF SPACE MECHANISM	64
FLEXOPRINT CARD PLATEN	65
PAGE END INDICATOR	66-67-68
PALM AND THUMB TABULATOR	68
SIAMESE	69
STROKE COUNTER	70
SWITZERLAND - BRIGHT NICKEL AND CHROME PARTS	71
TYPE BAR SEGMENT - RUBBER ANVIL	72
WESTERN UNION - BLACK KRINKLE PARTS	70

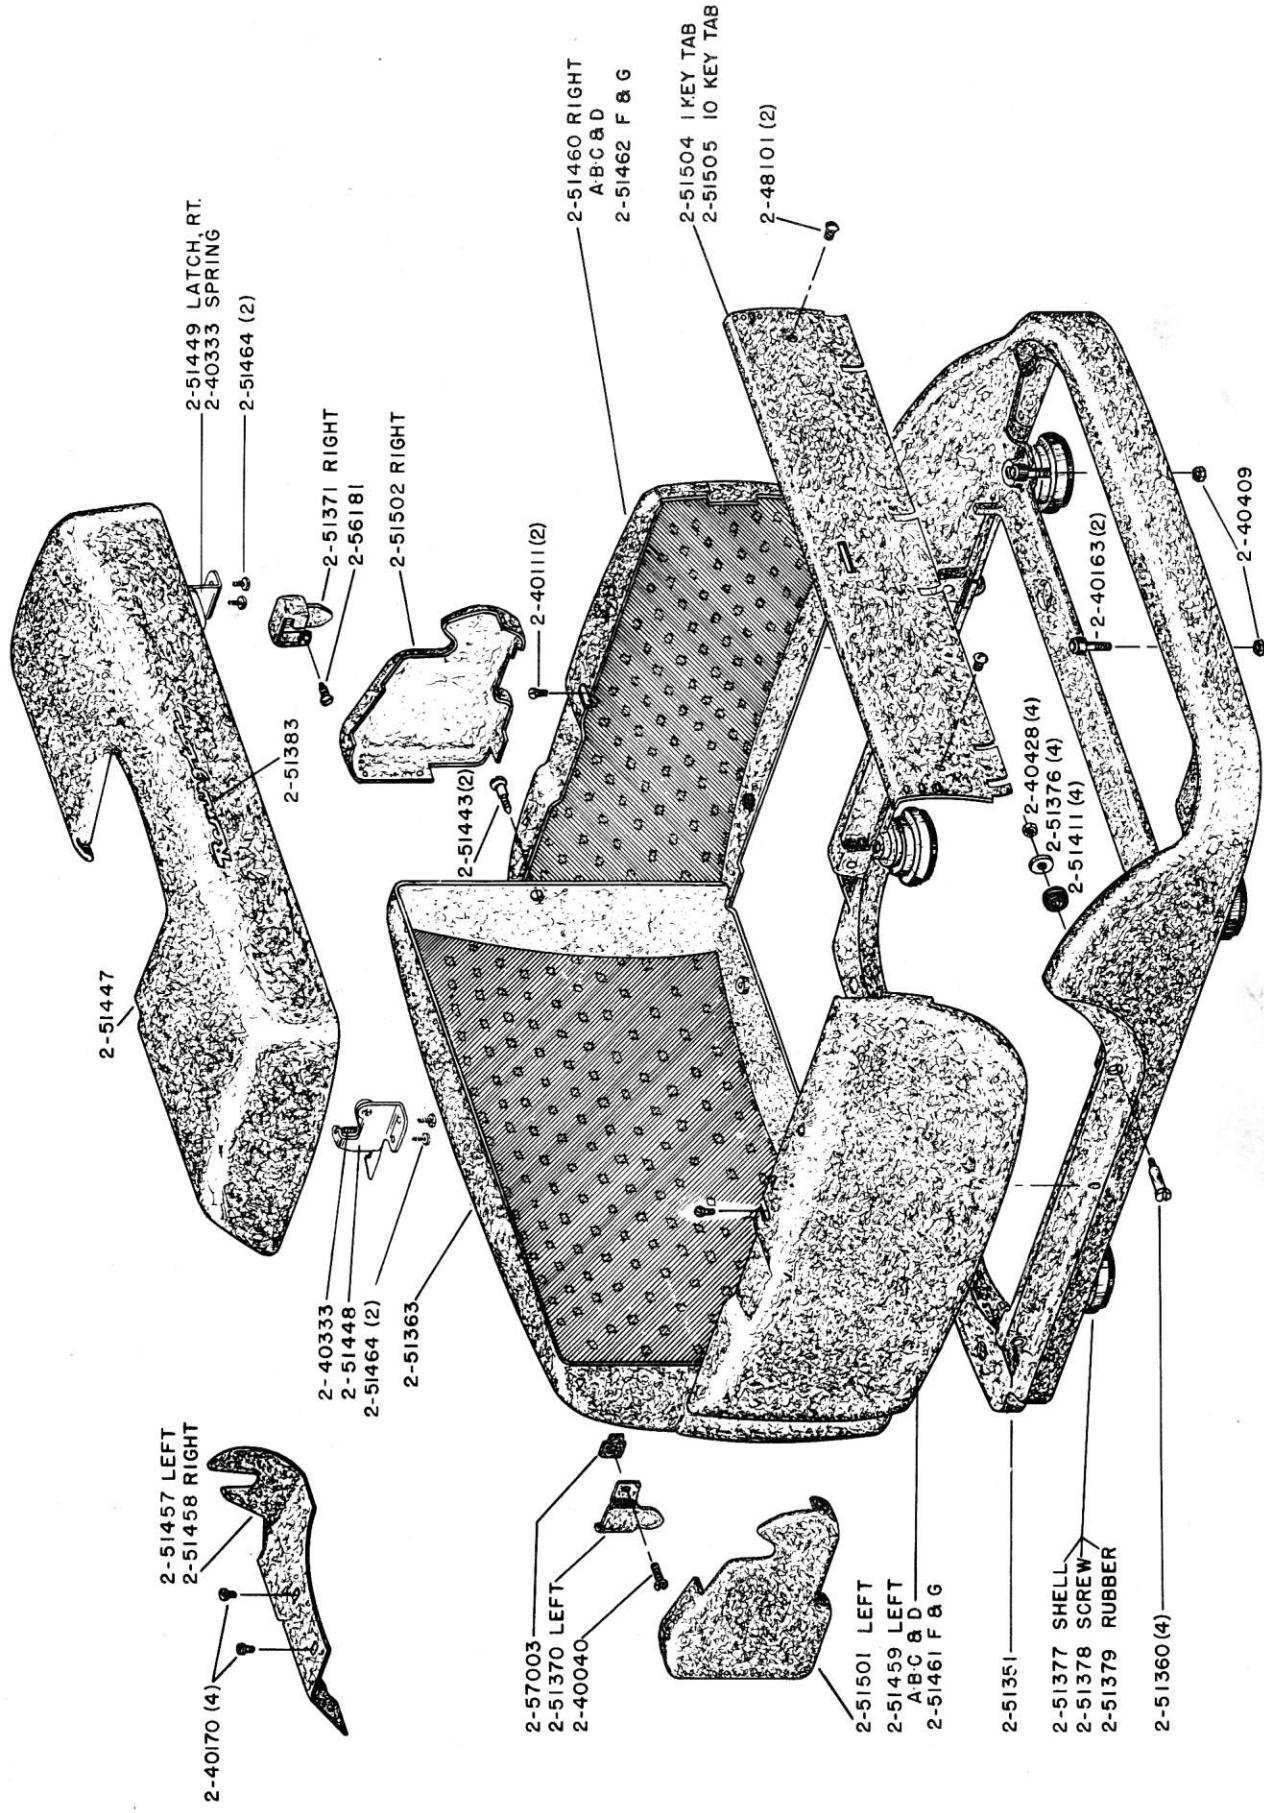


PANELS

KEY TENSION


REGULATOR LEVER
NO 1 POSITION
(LIGHT TOUCH)

SLIDE TO RIGHT AND FRONT
NOTE : SCREWS
AT LEFT END OF SLOTS.

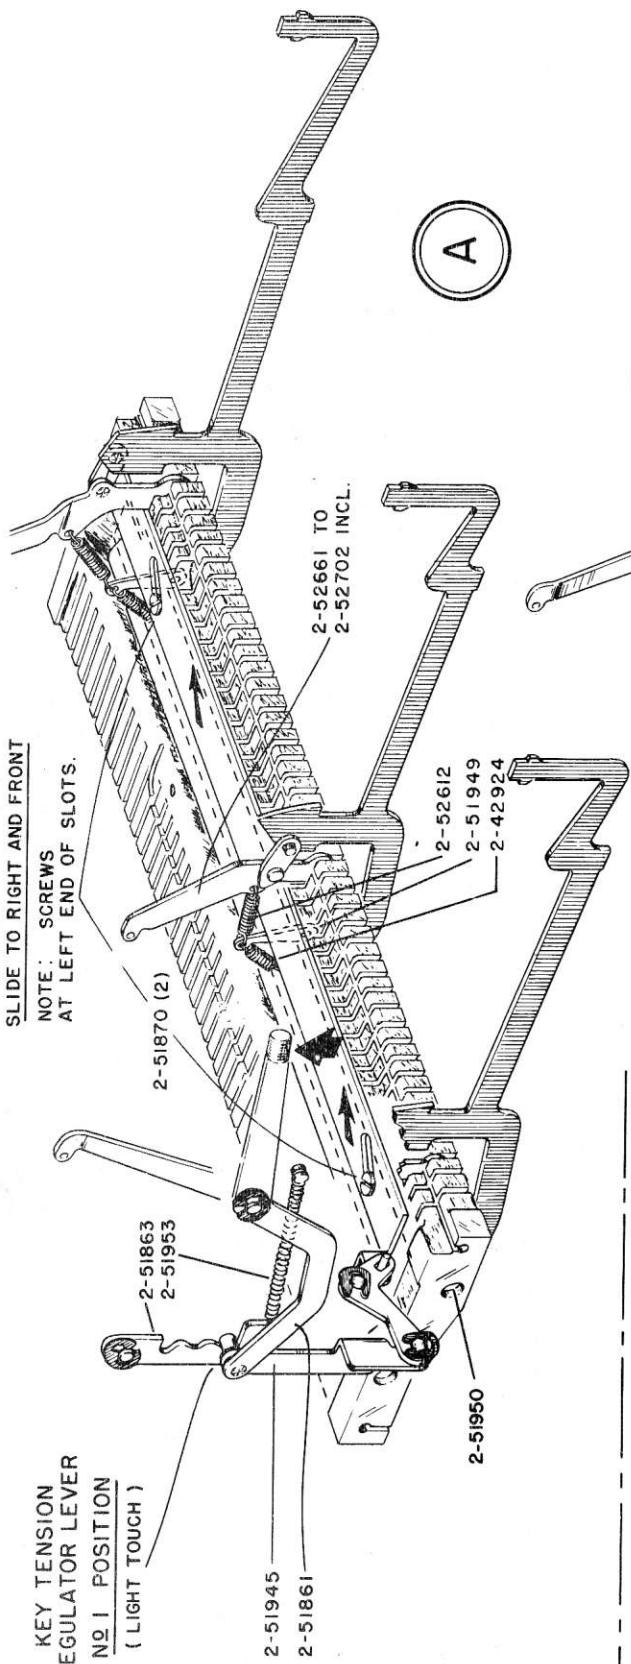


KEY TENSION
REGULATOR LEVER
NO 3 POSITION
(HEAVY TOUCH)


SLIDE TO LEFT AND REAR
NOTE : SCREWS
AT RIGHT END OF SLOTS.

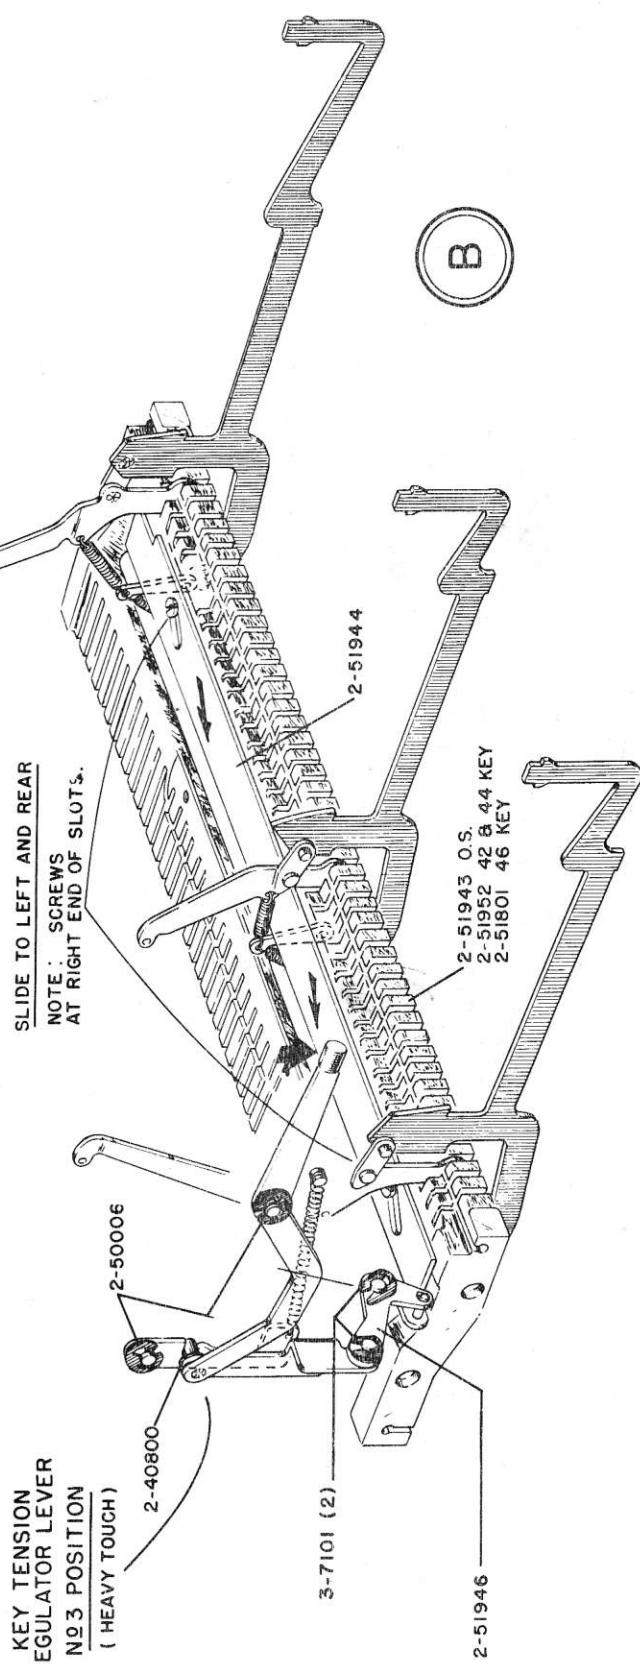

— IMPROVED KEY TENSION —


KEY RESTORE MECHANISM

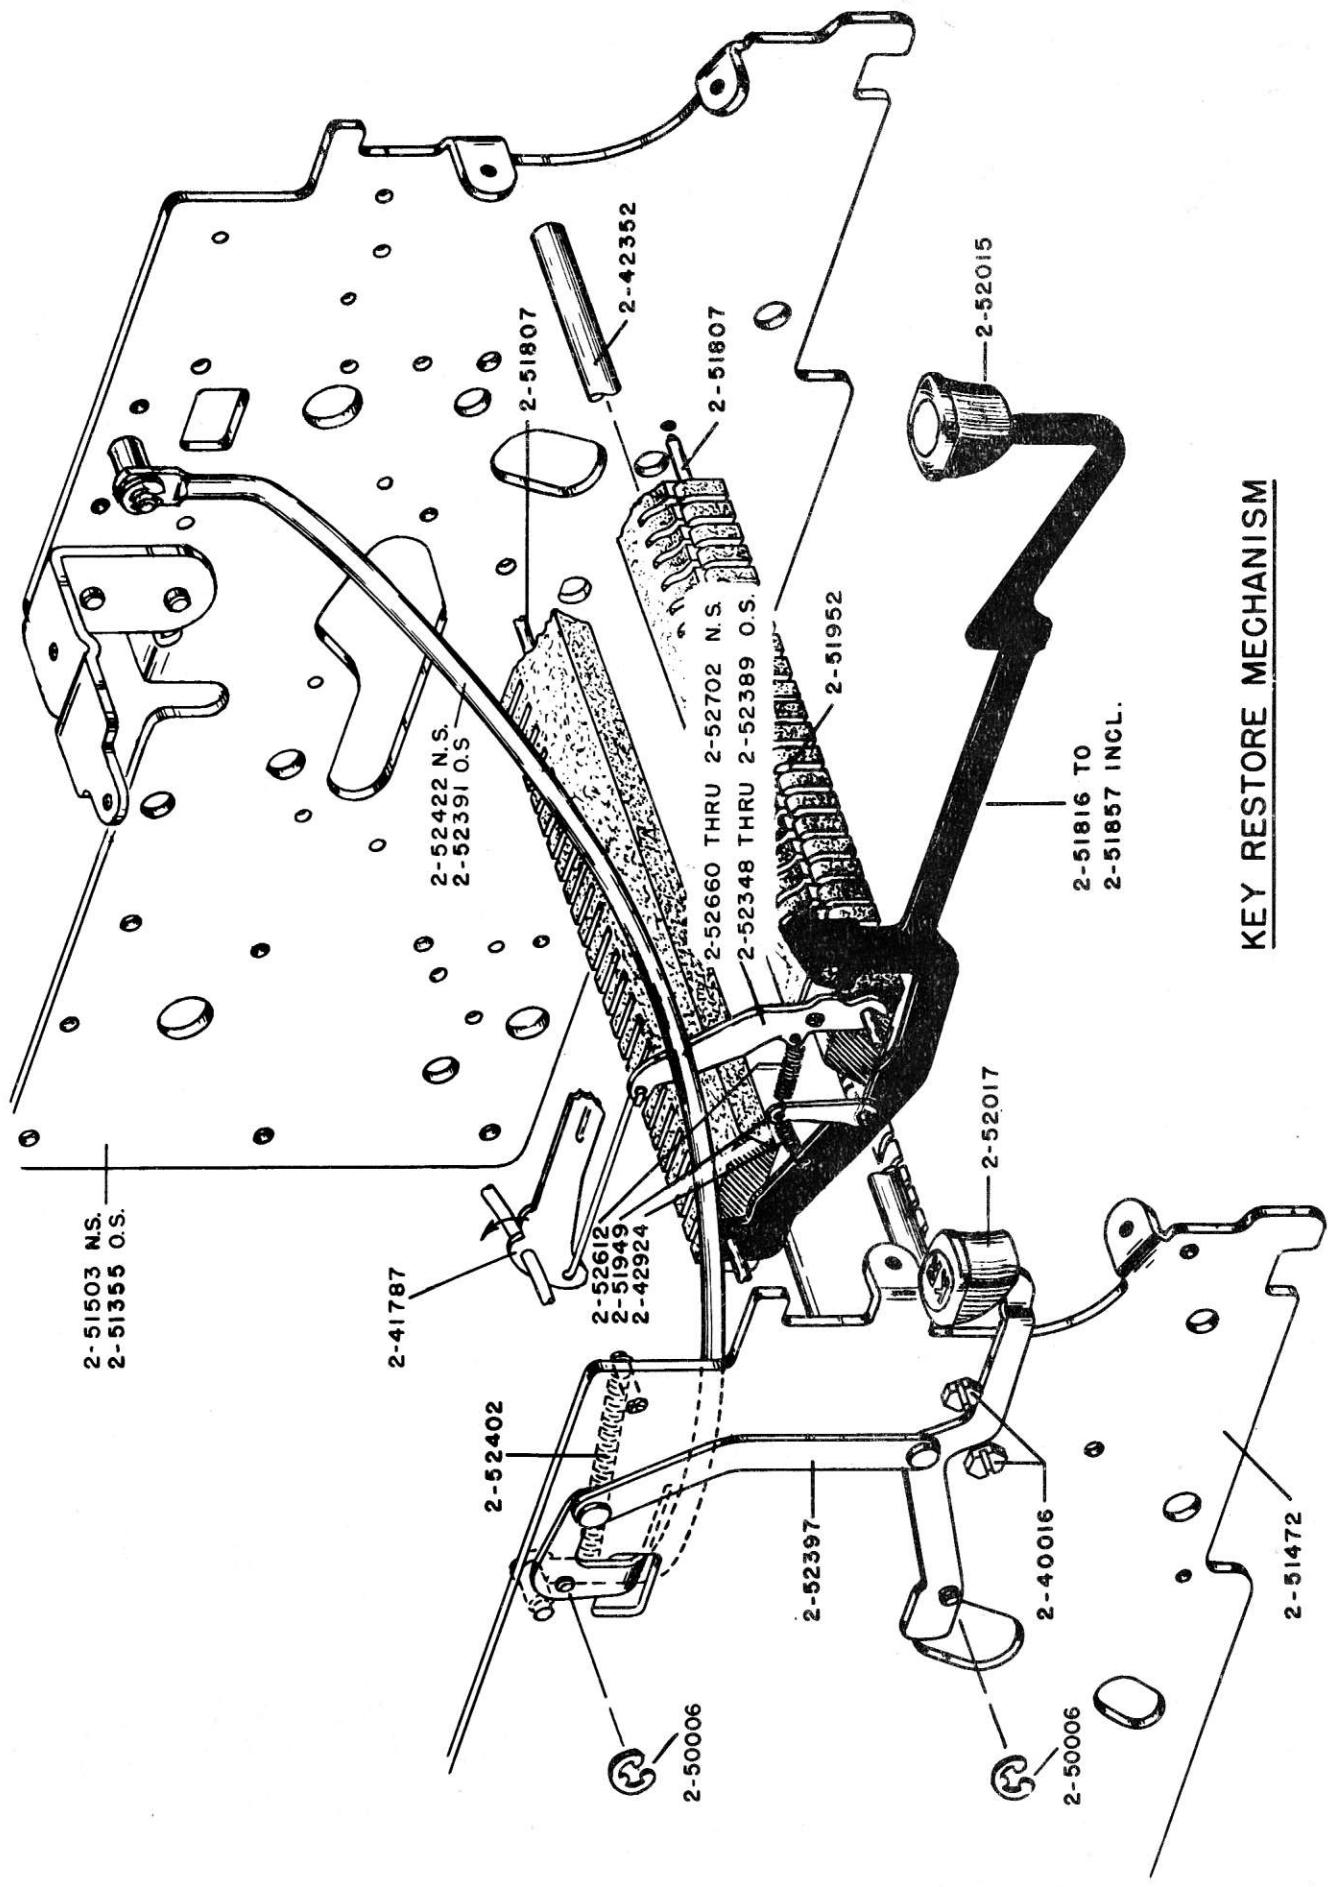

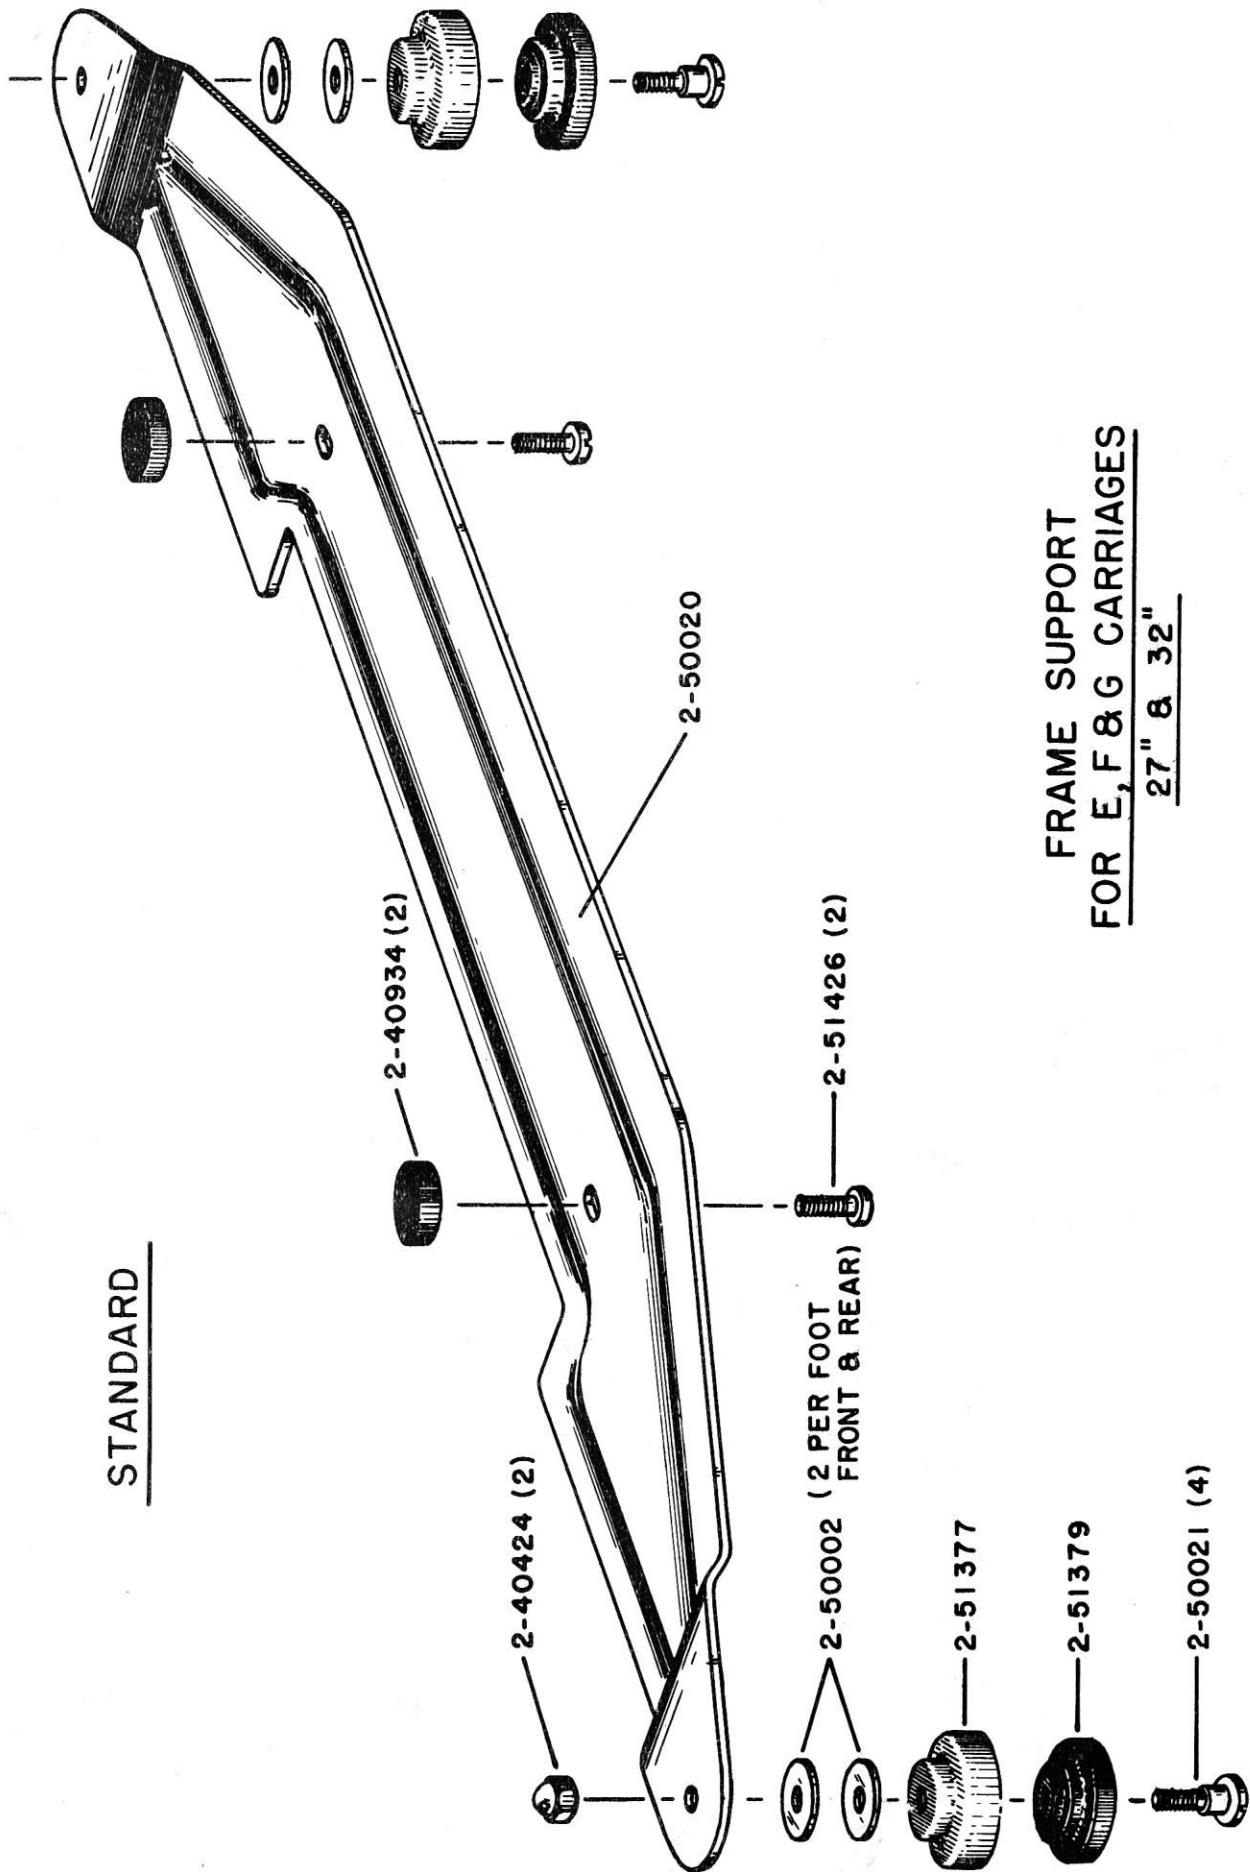


**FRAME SUPPORT
FOR E, F & G CARRIAGES**

27" 8 32"

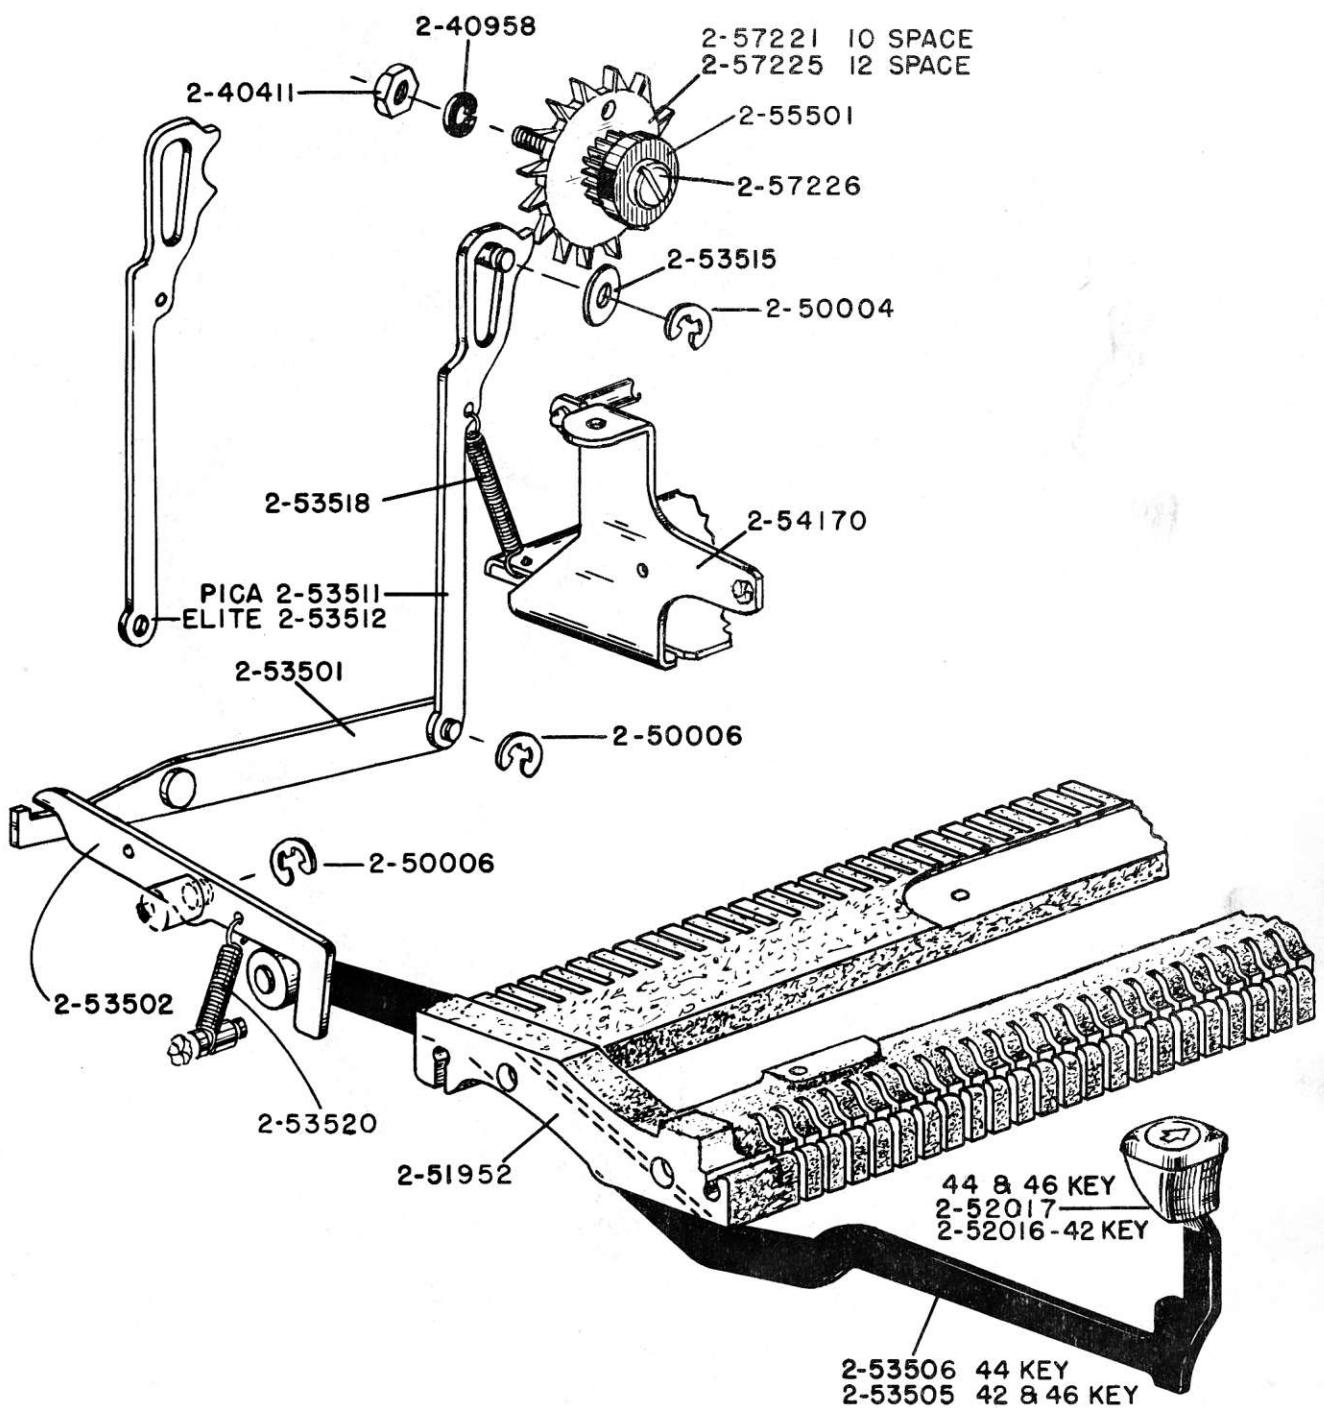


**BACK SPACE
MECHANISM -**

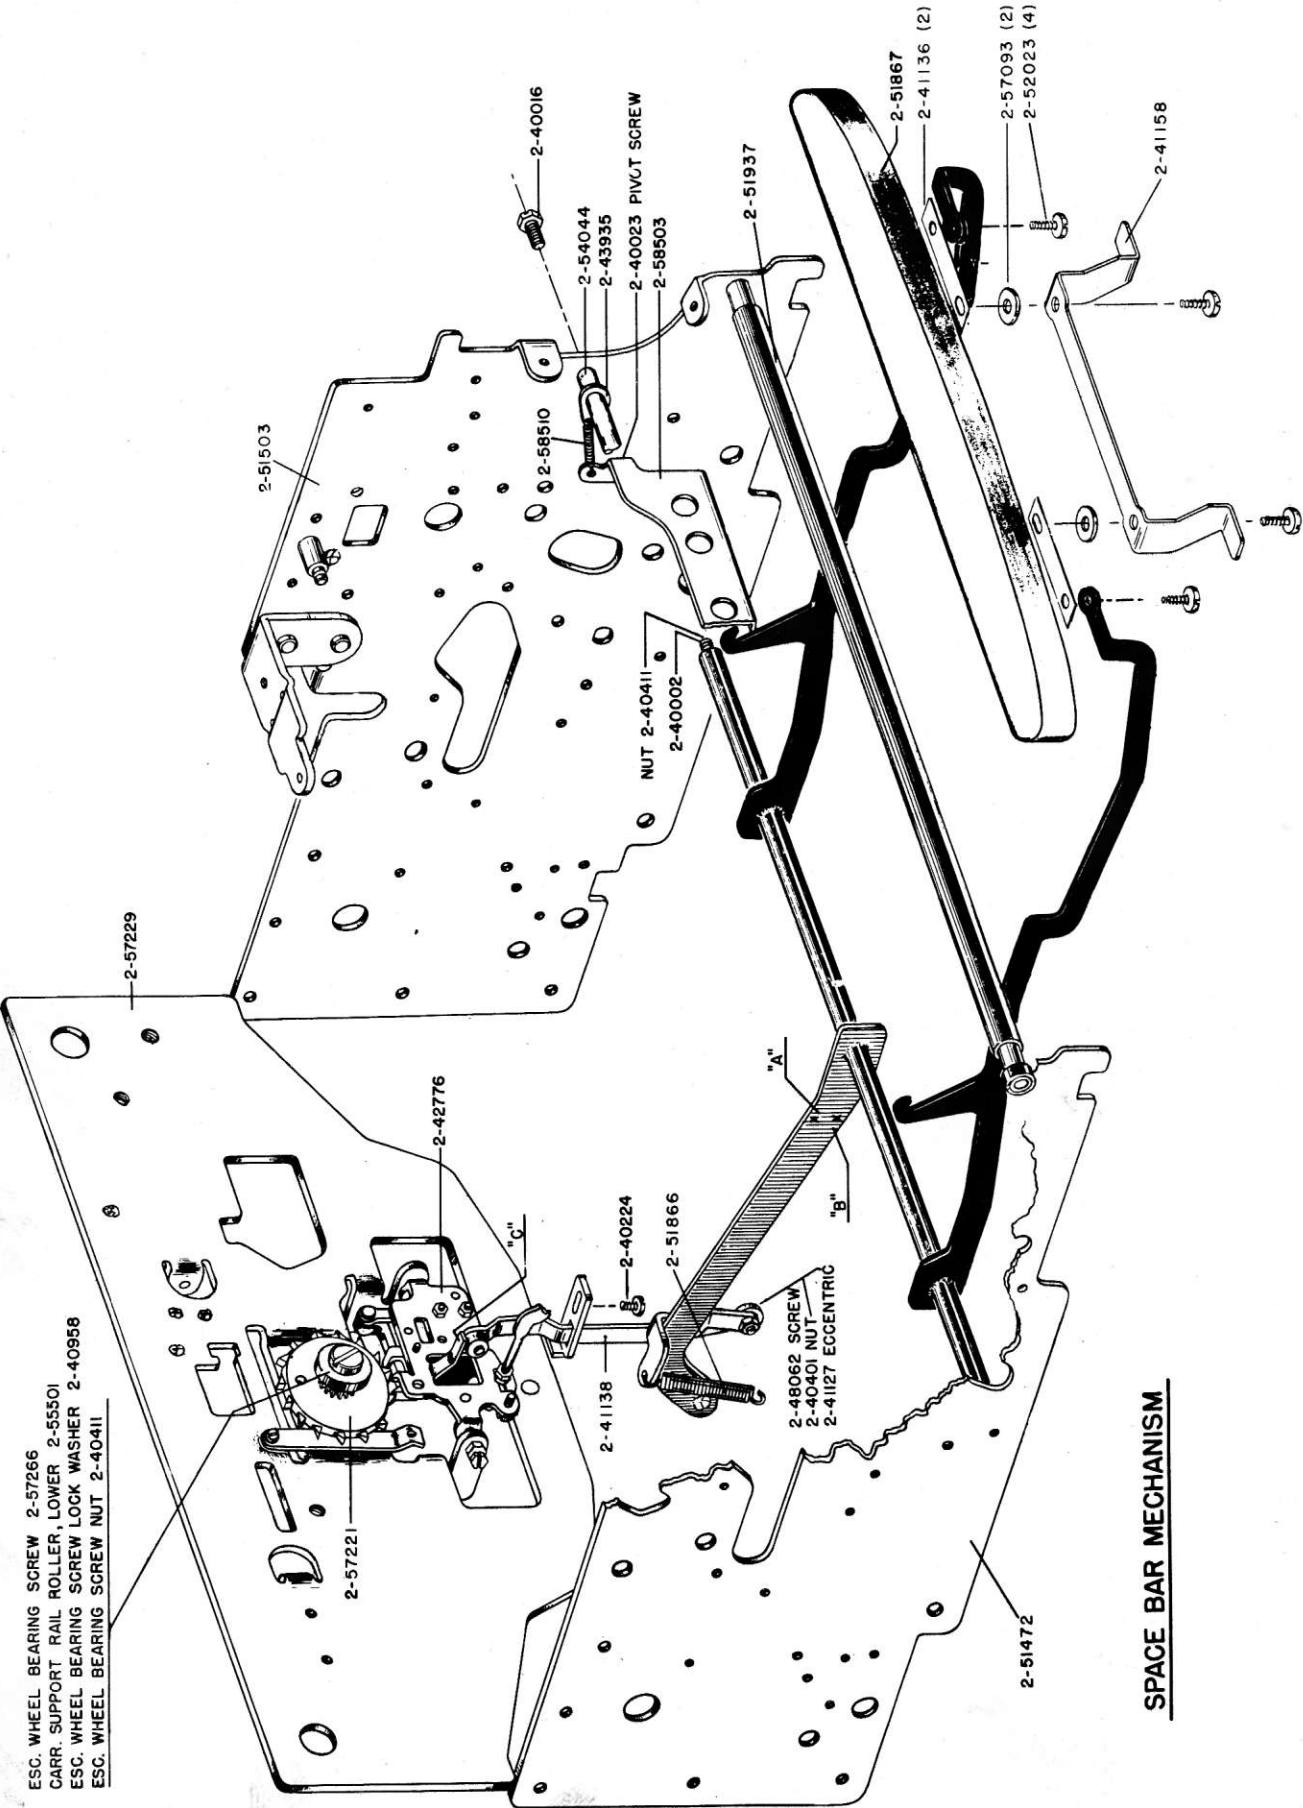


SPACE BAR MECHANISM


TYPE BAR CUSHION GROUP

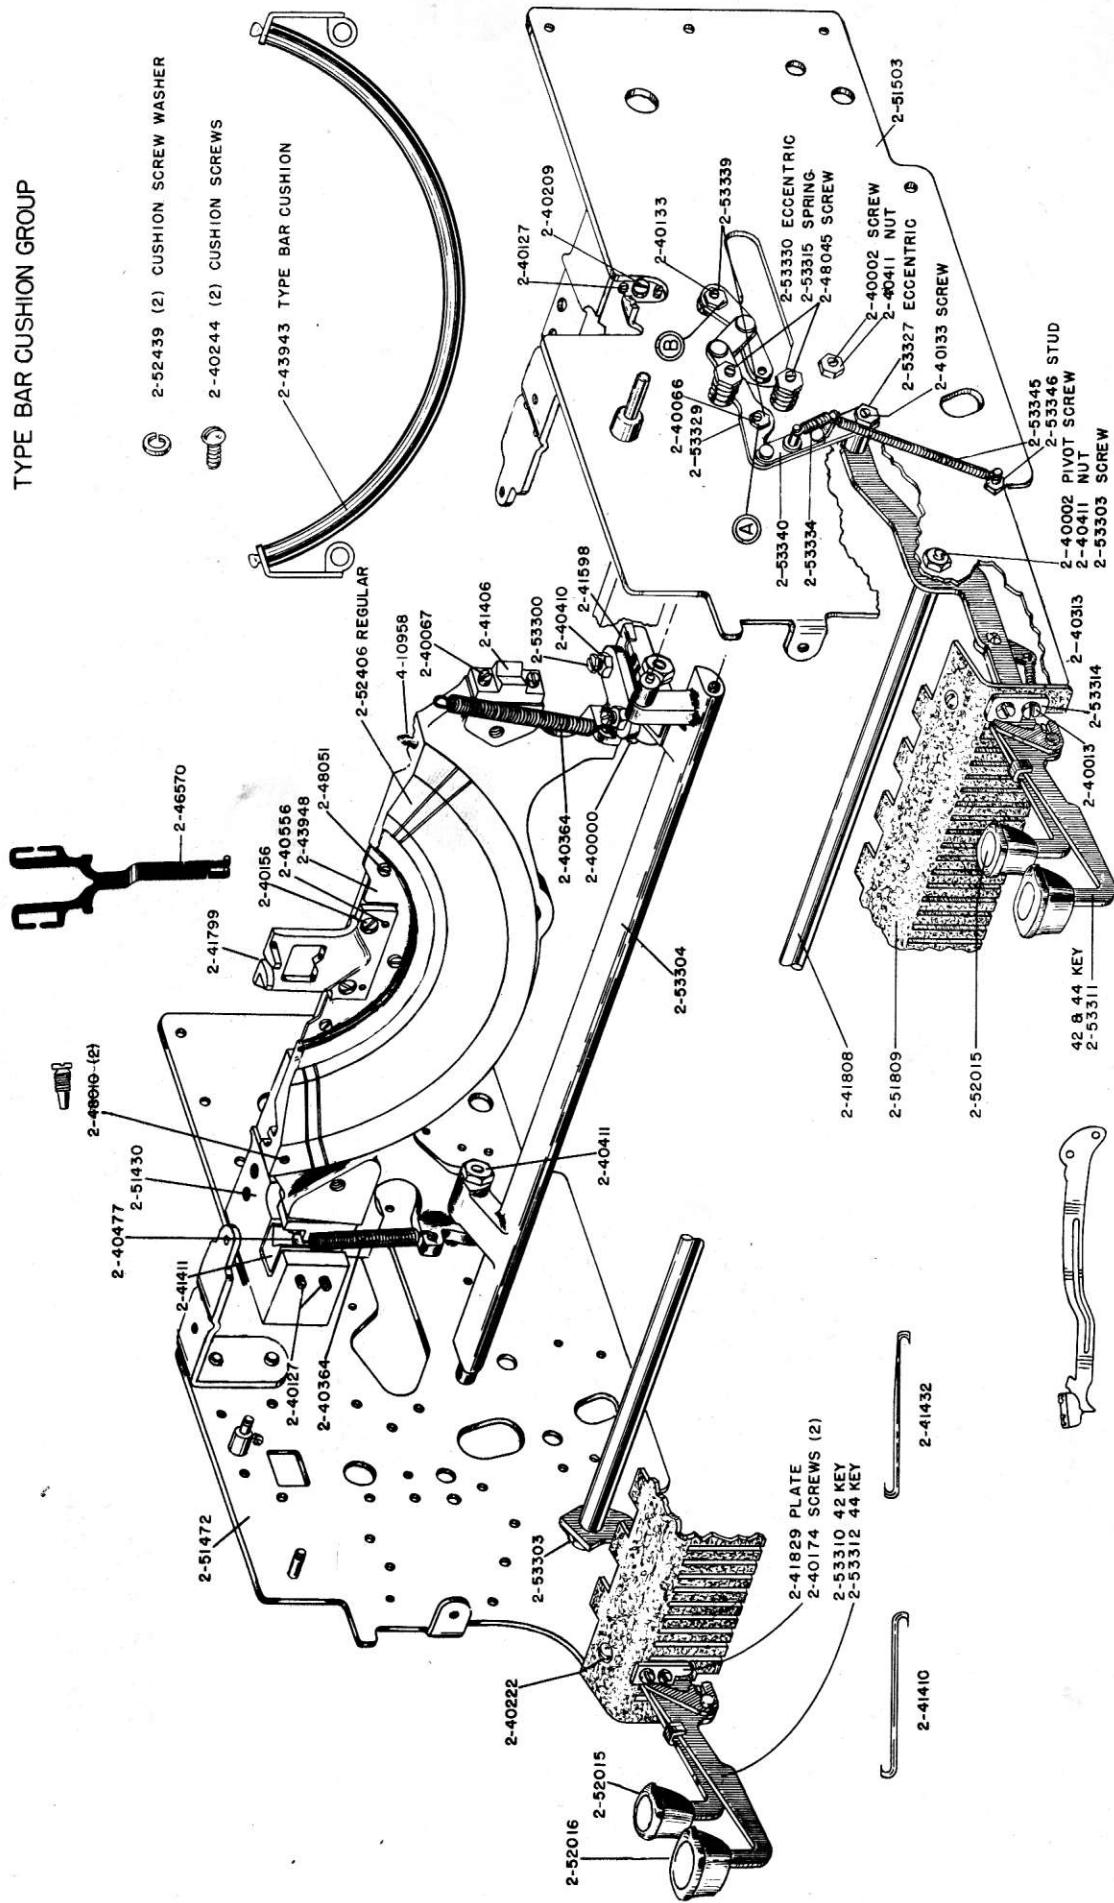


2-41787 REGULAR TYPE BARS WITH TYPE

SHIFT MECHANISM

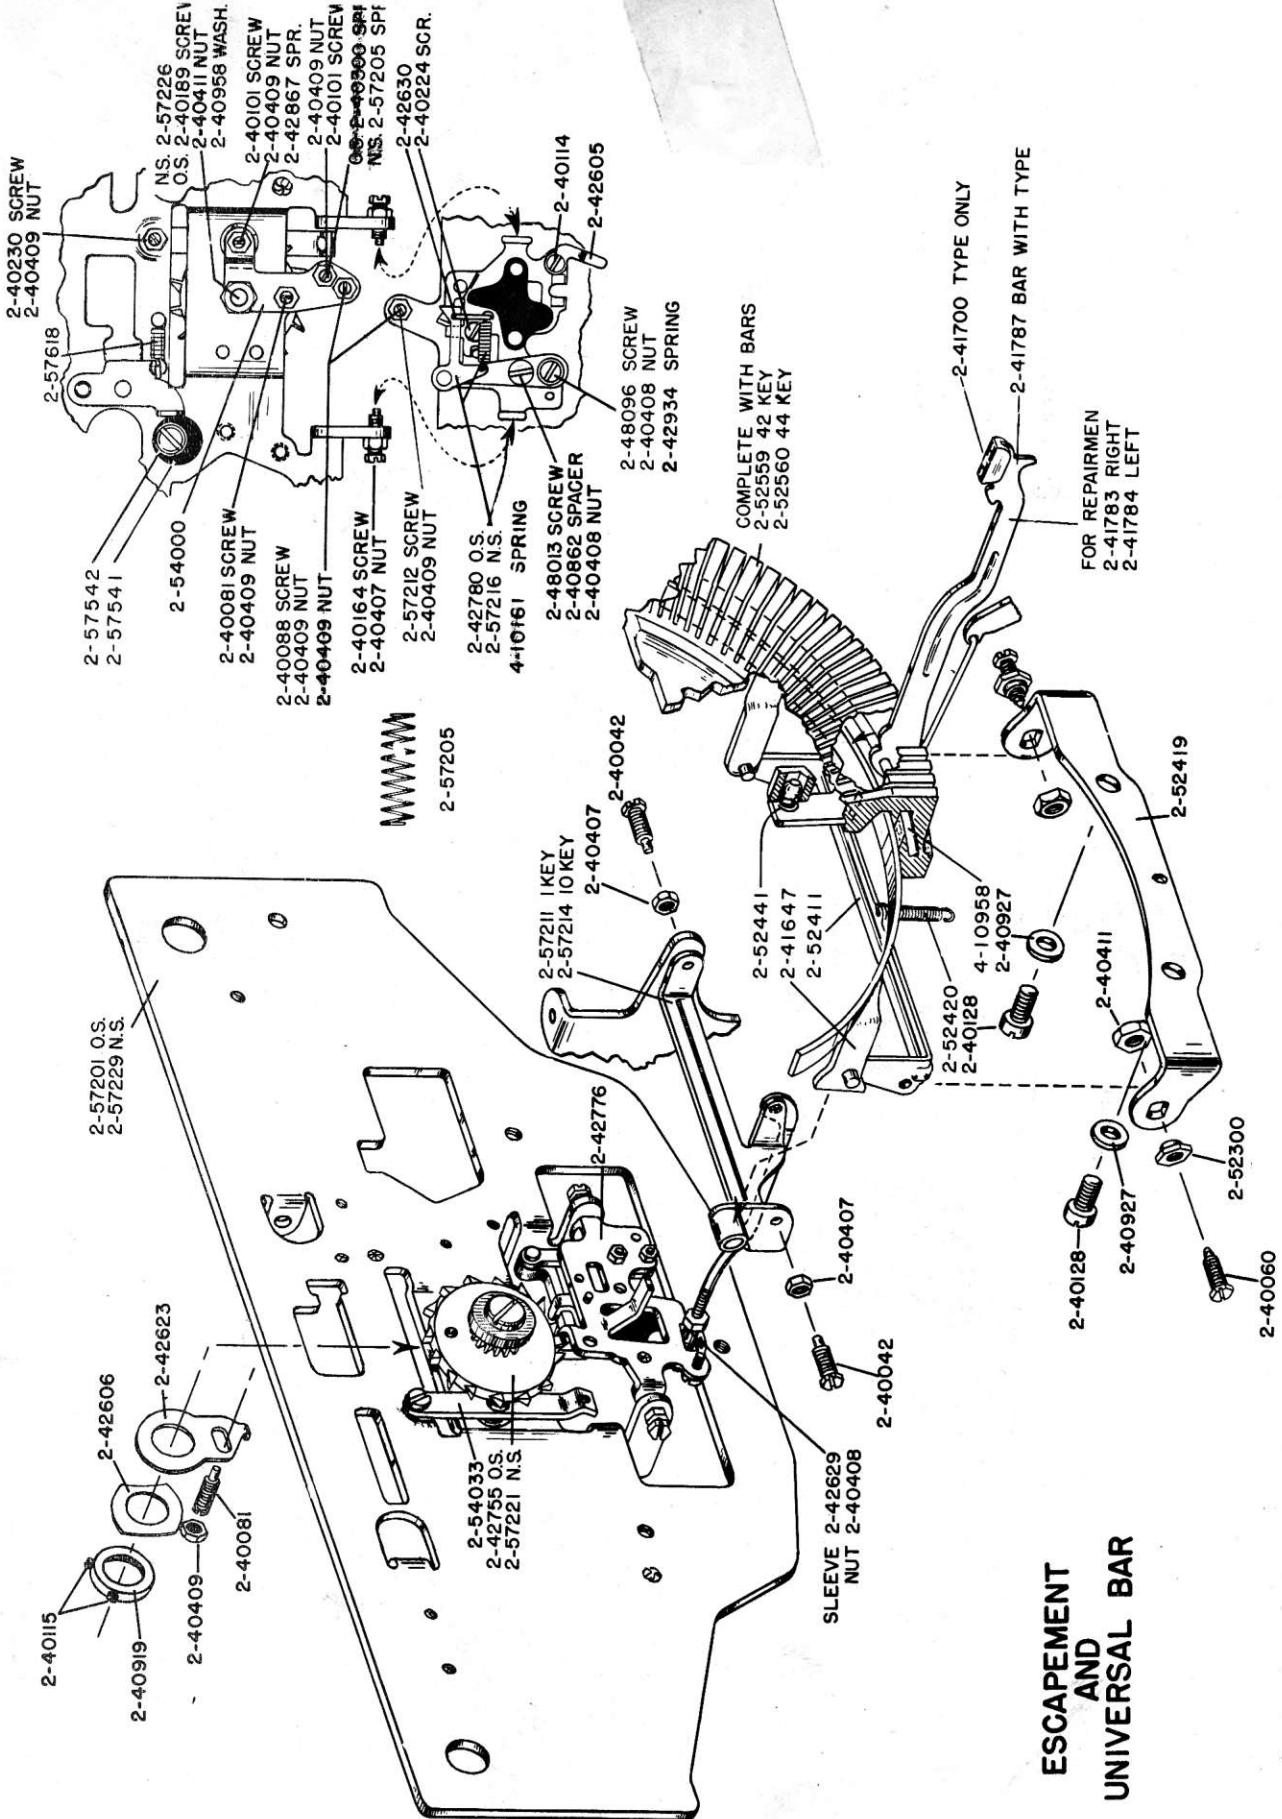


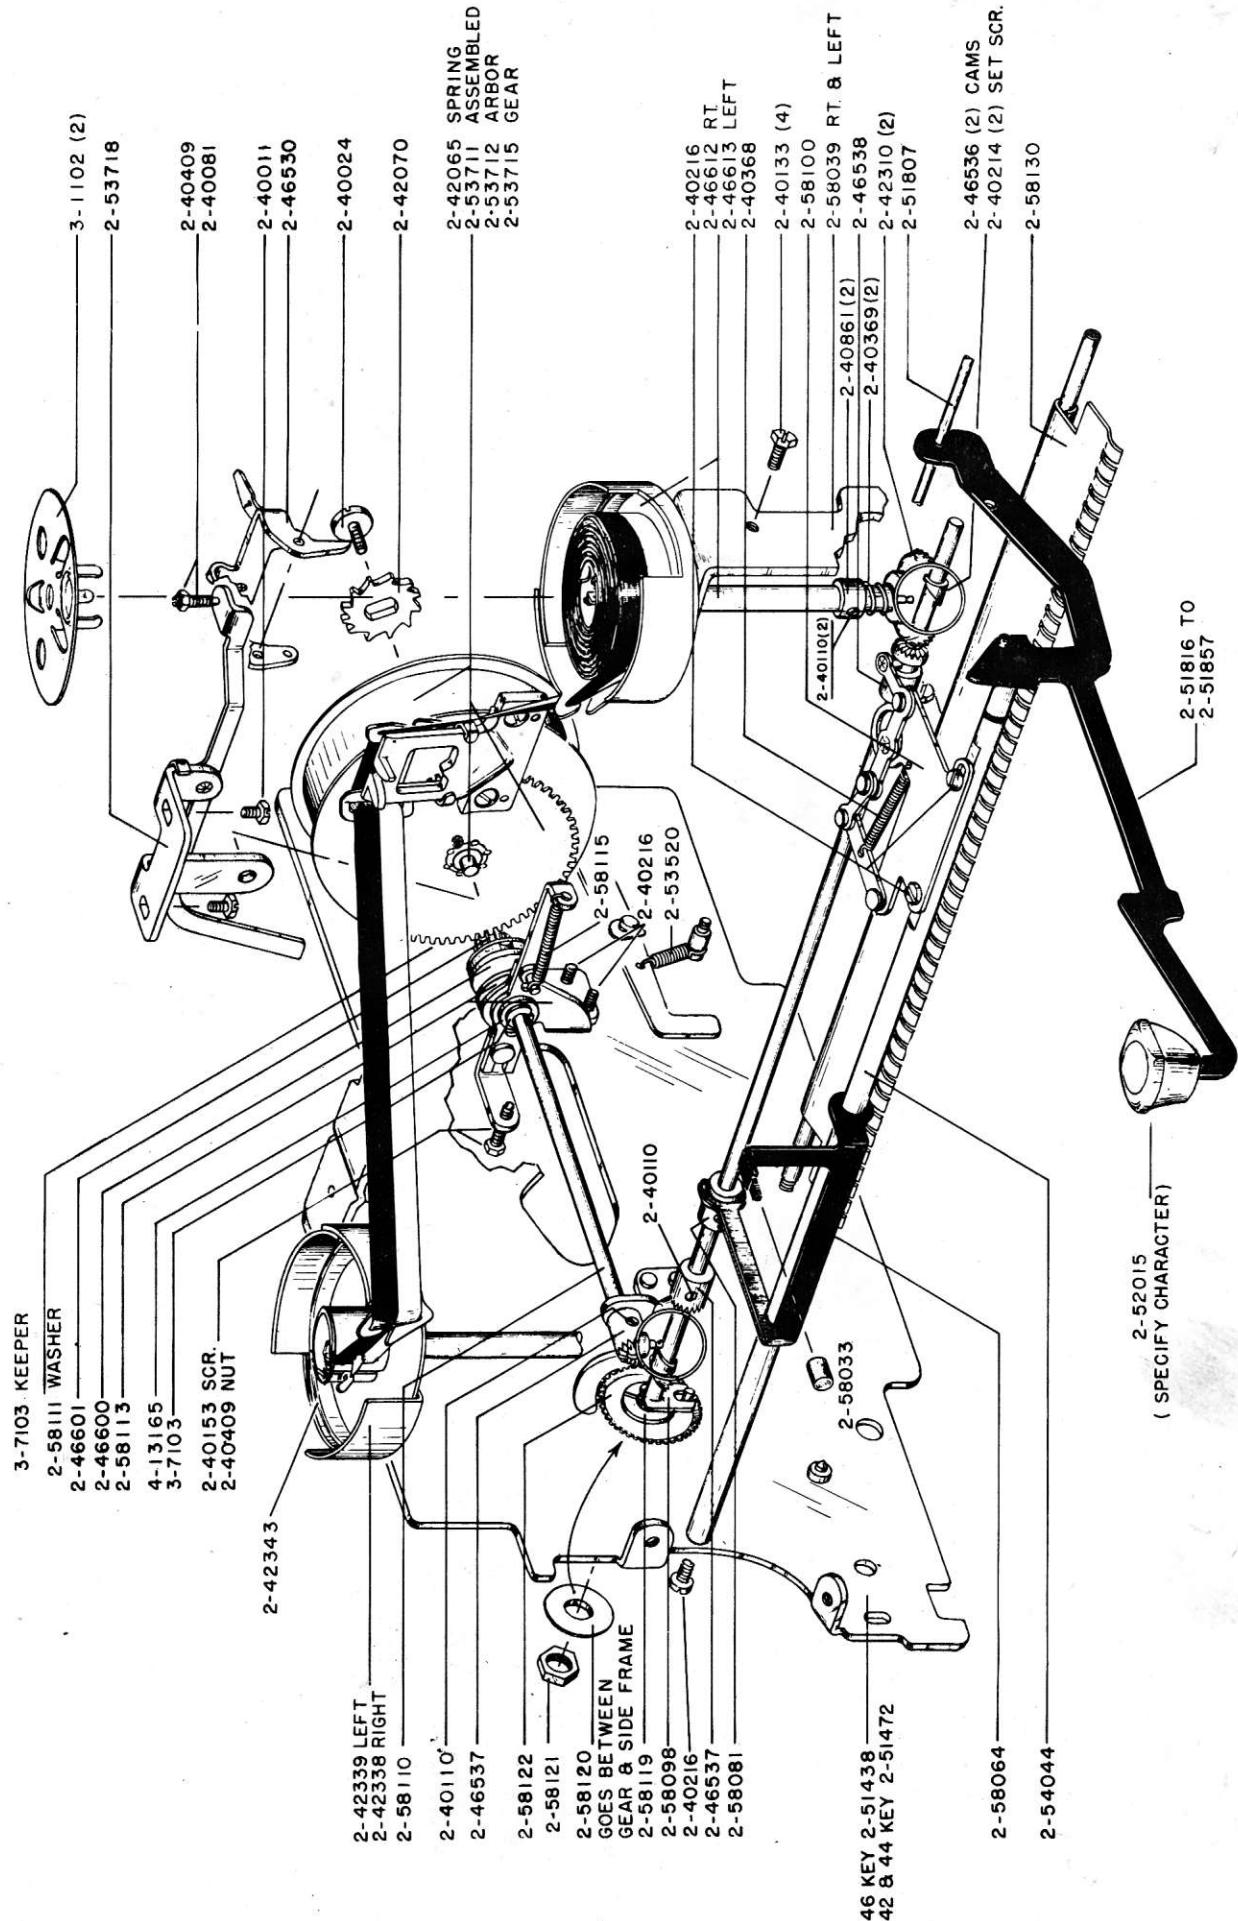


SPRING DRUM RIBBON FEED

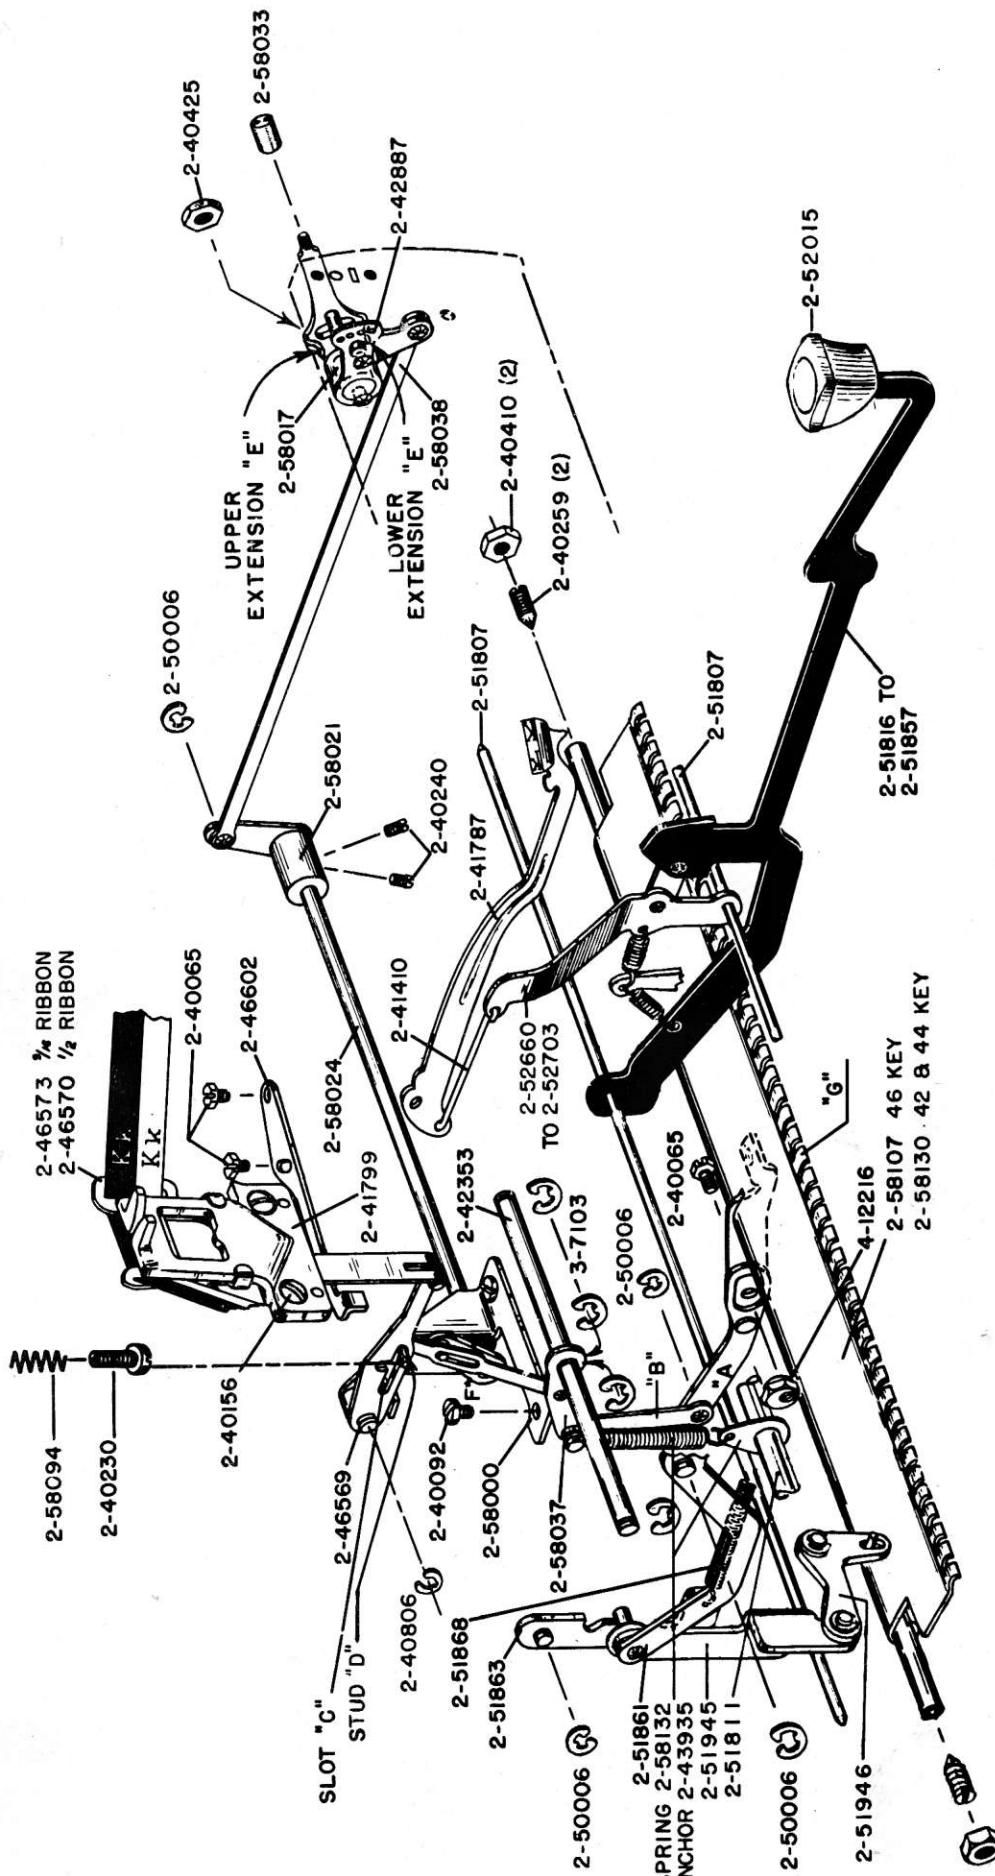



RIBBON COVER MECHANISM

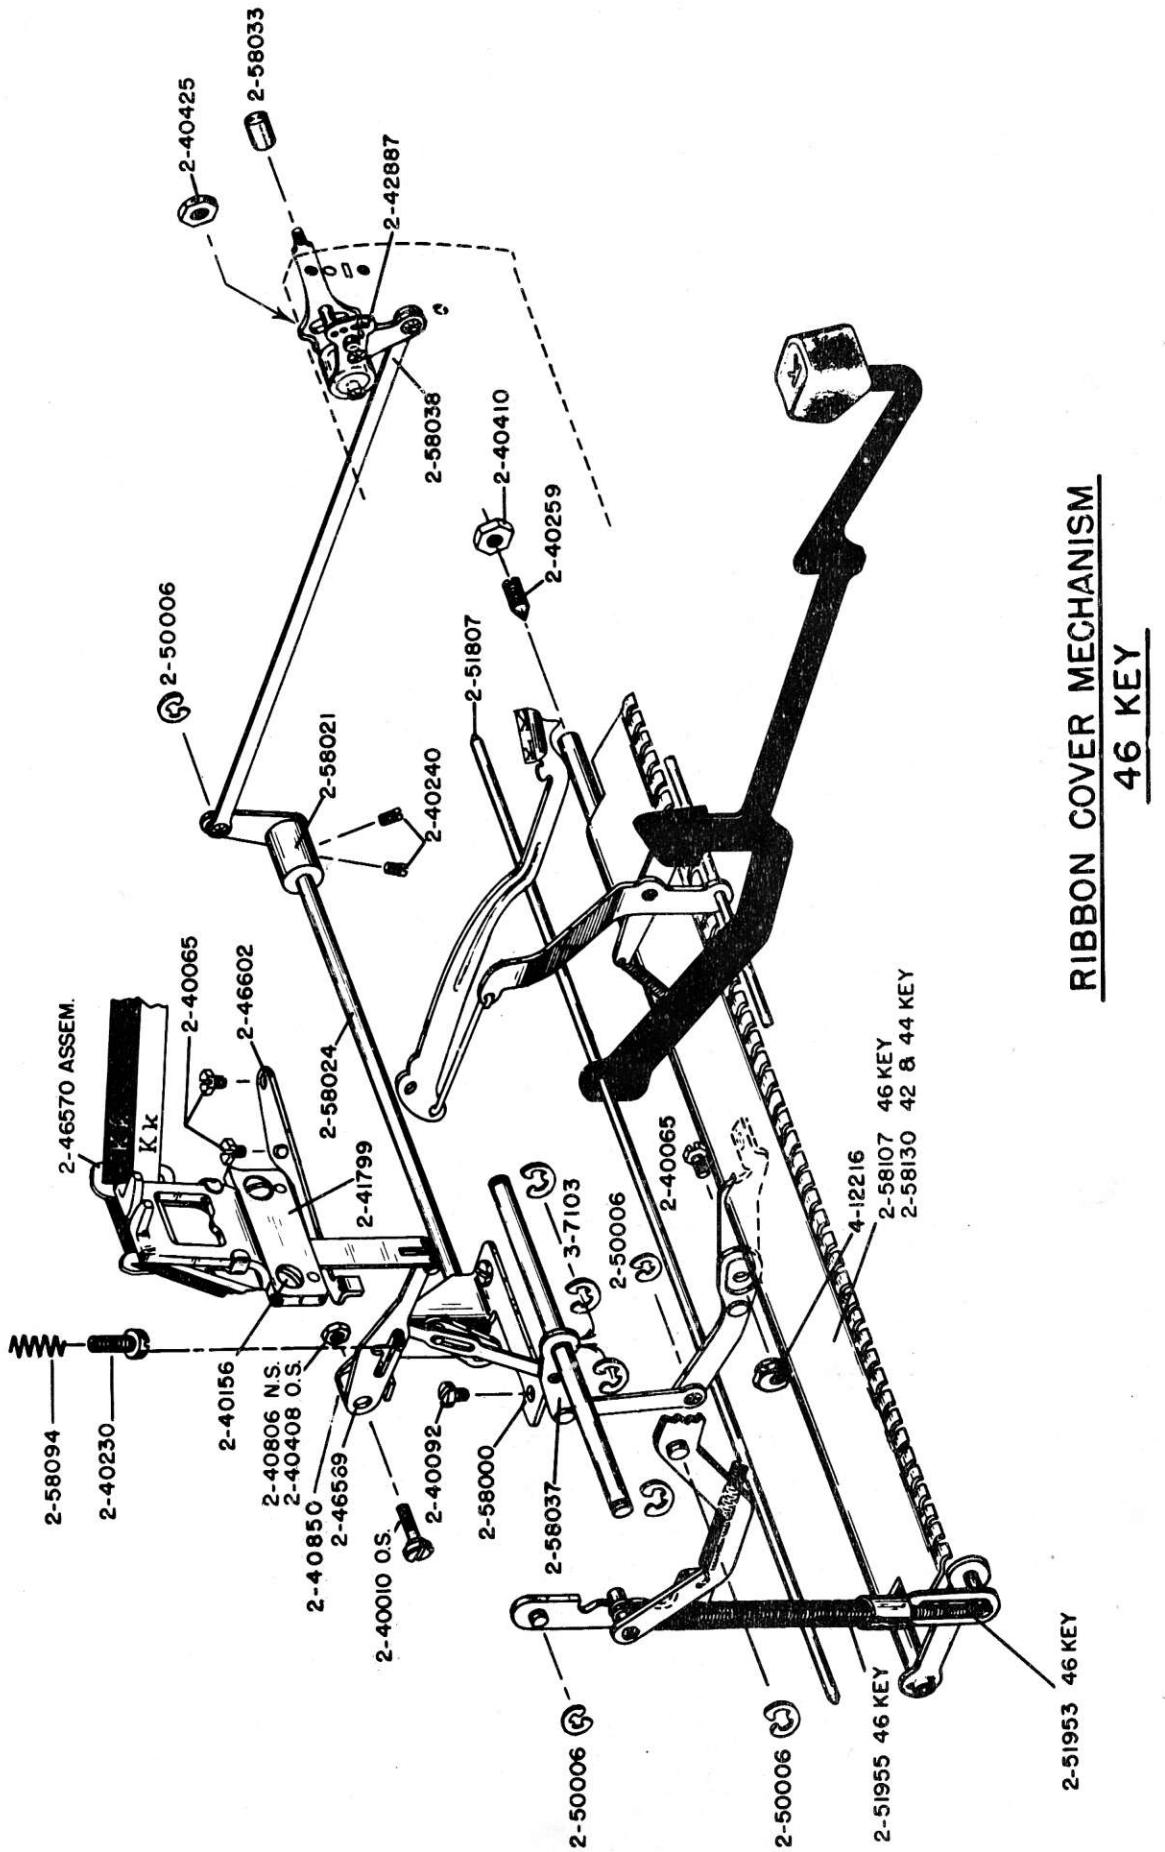


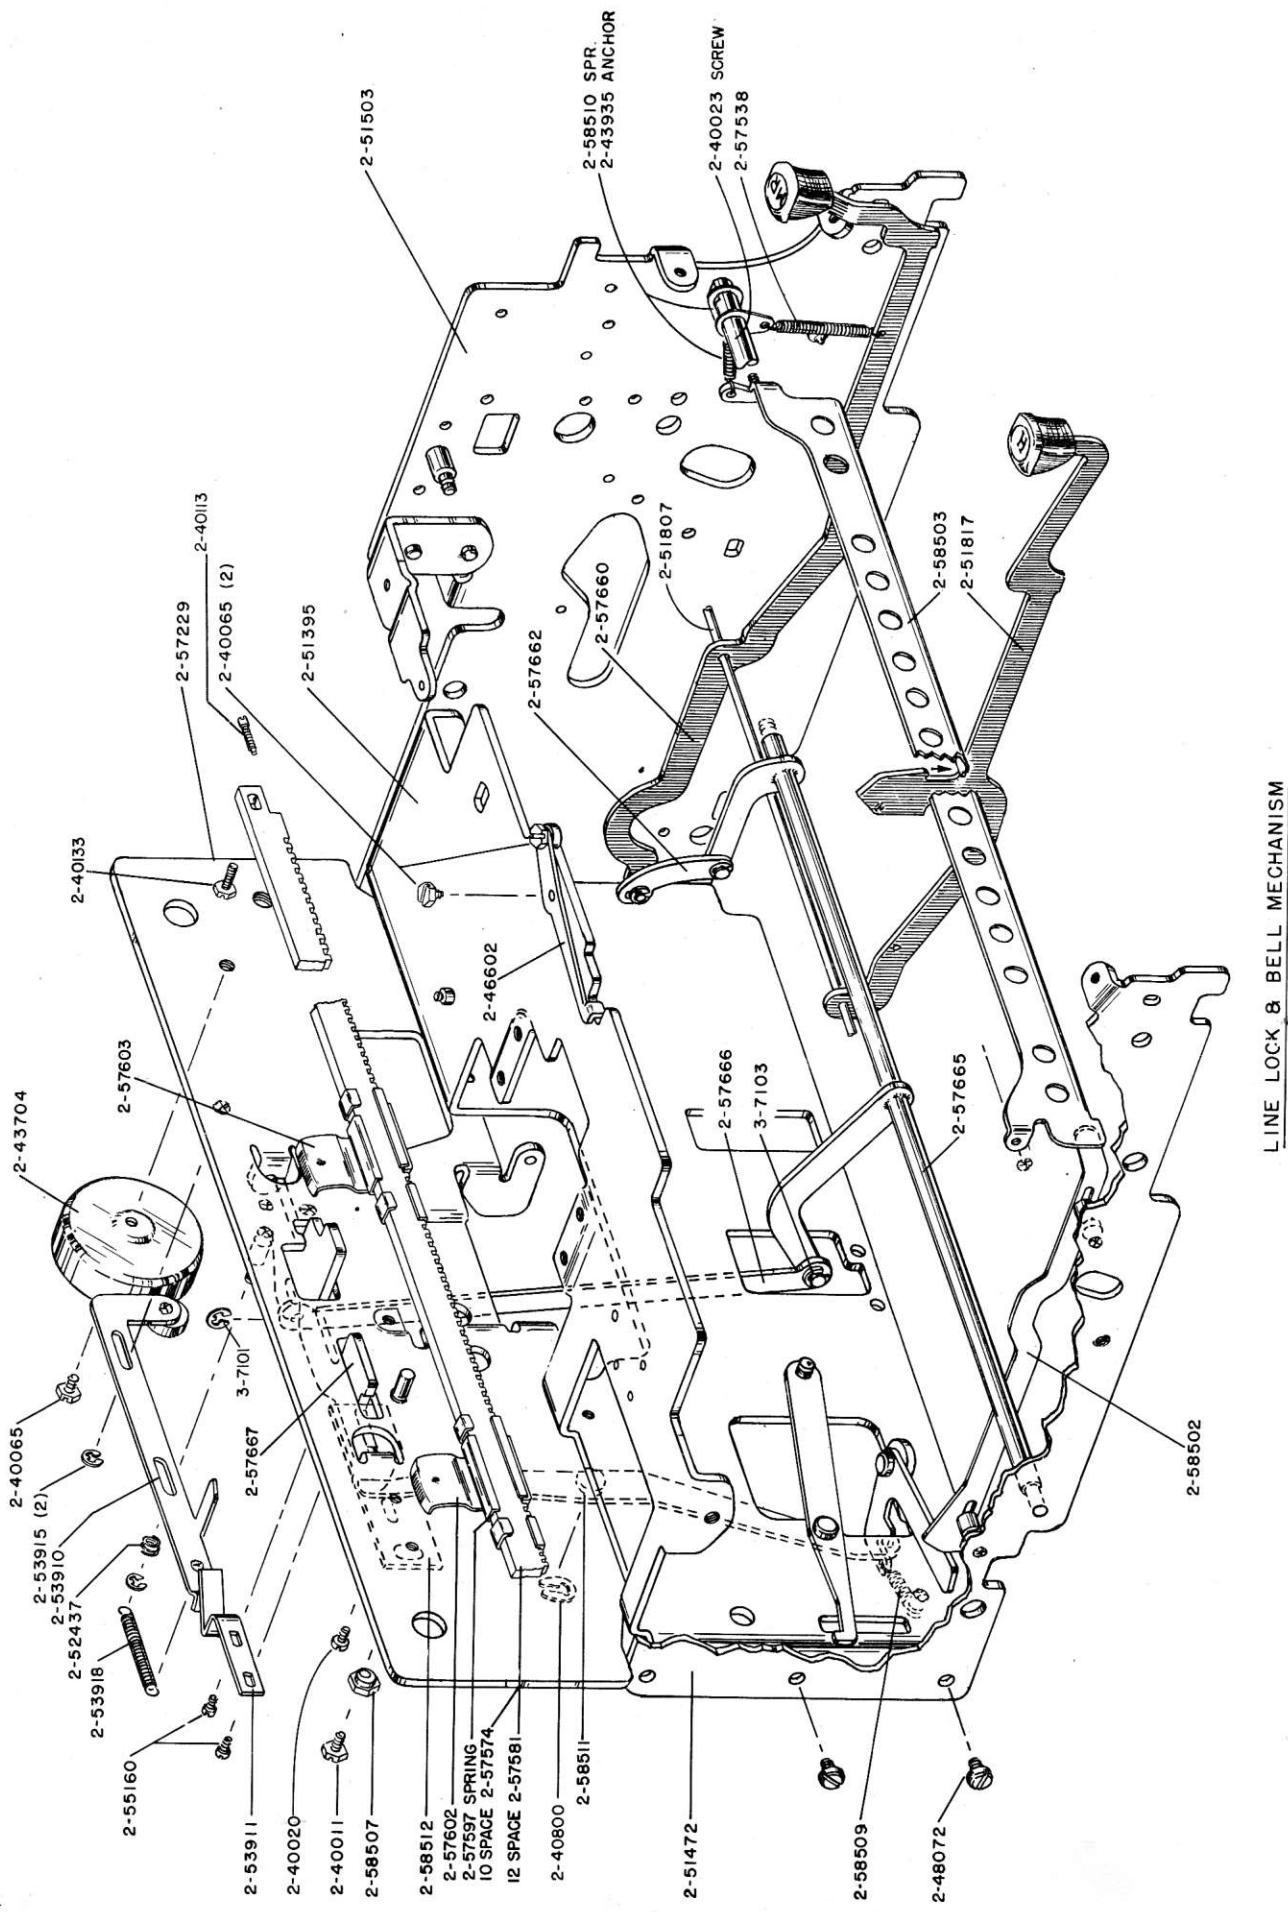



LINE LOCK & BELL MECHANISM

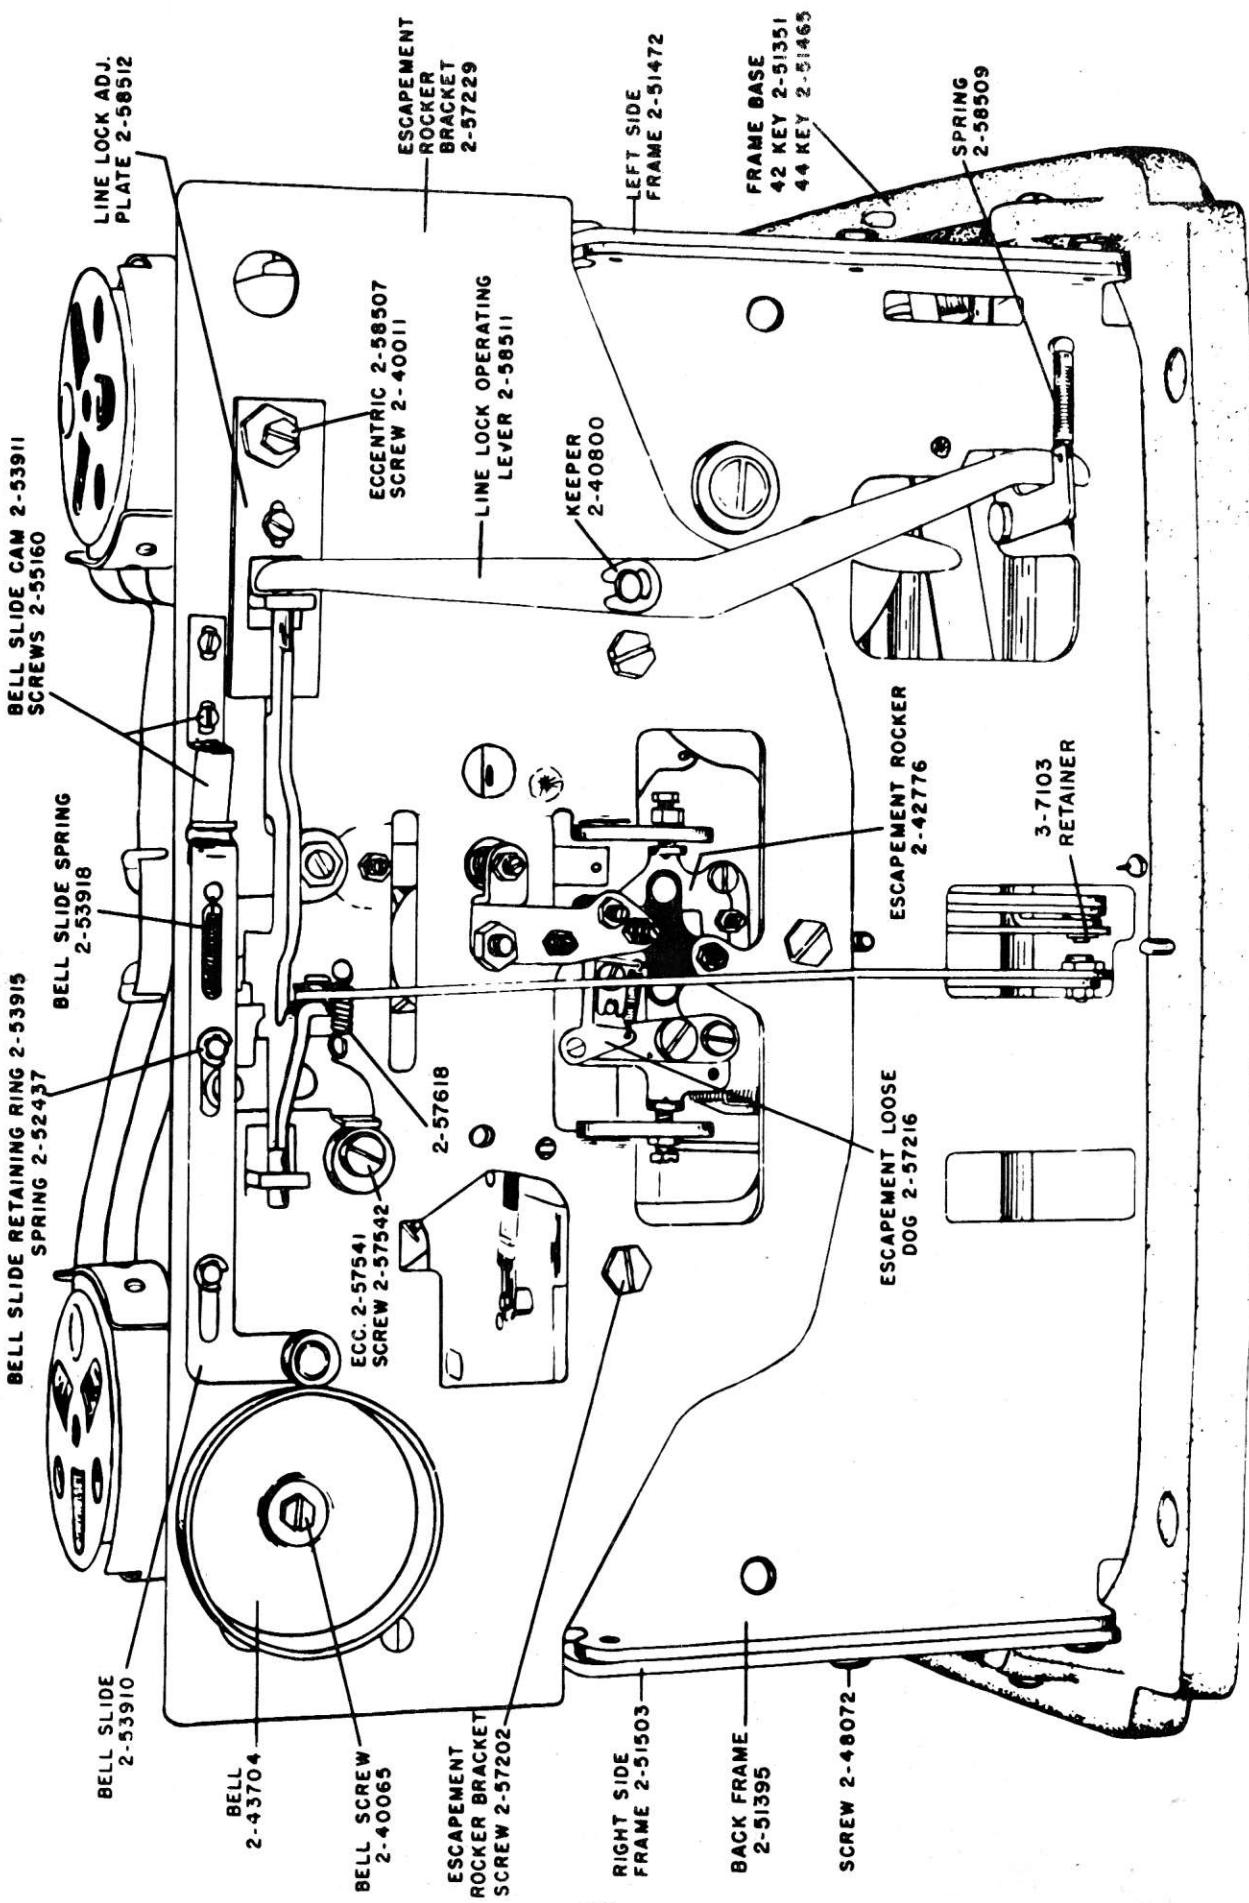


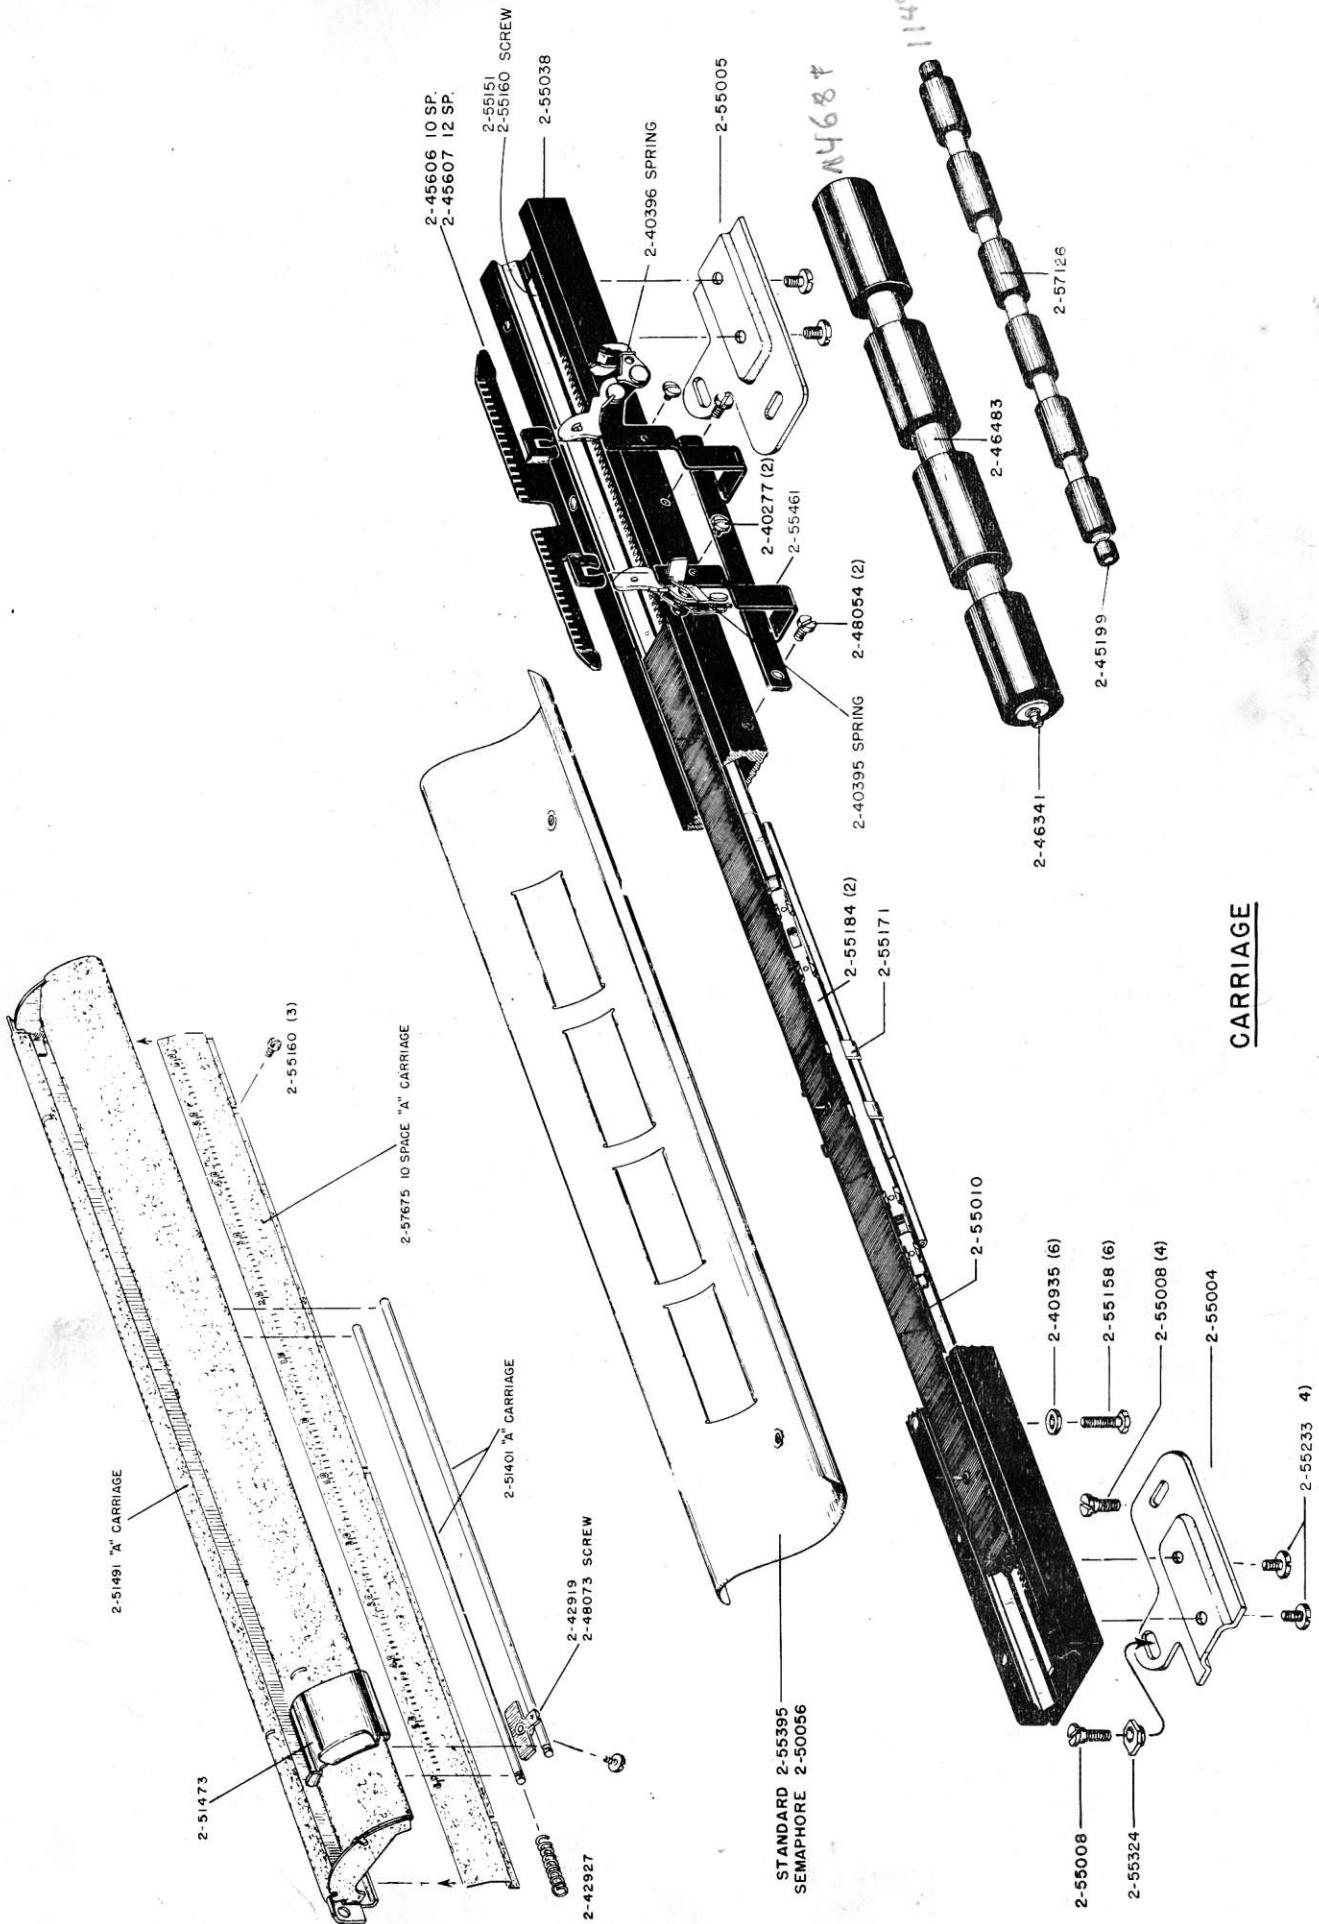


CARRIAGE

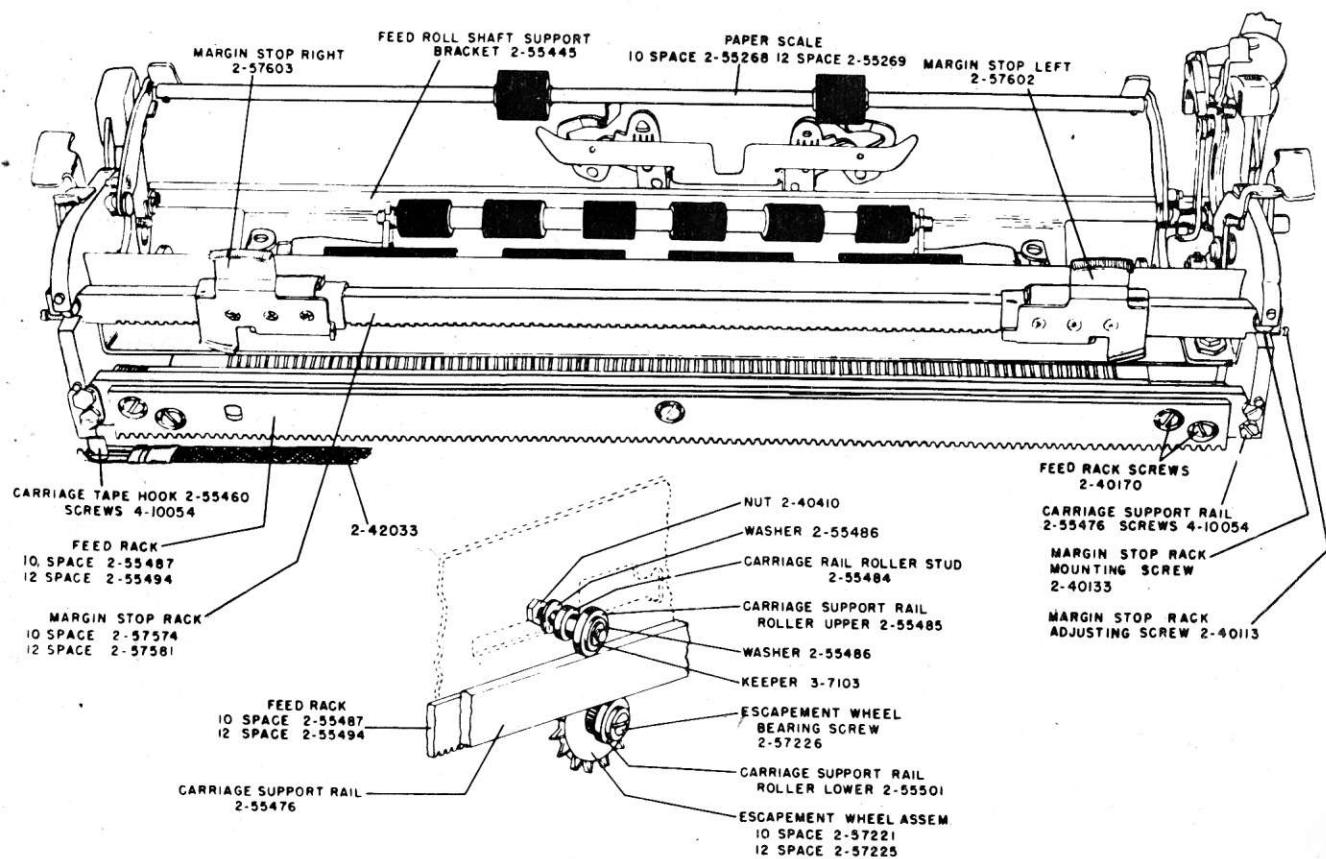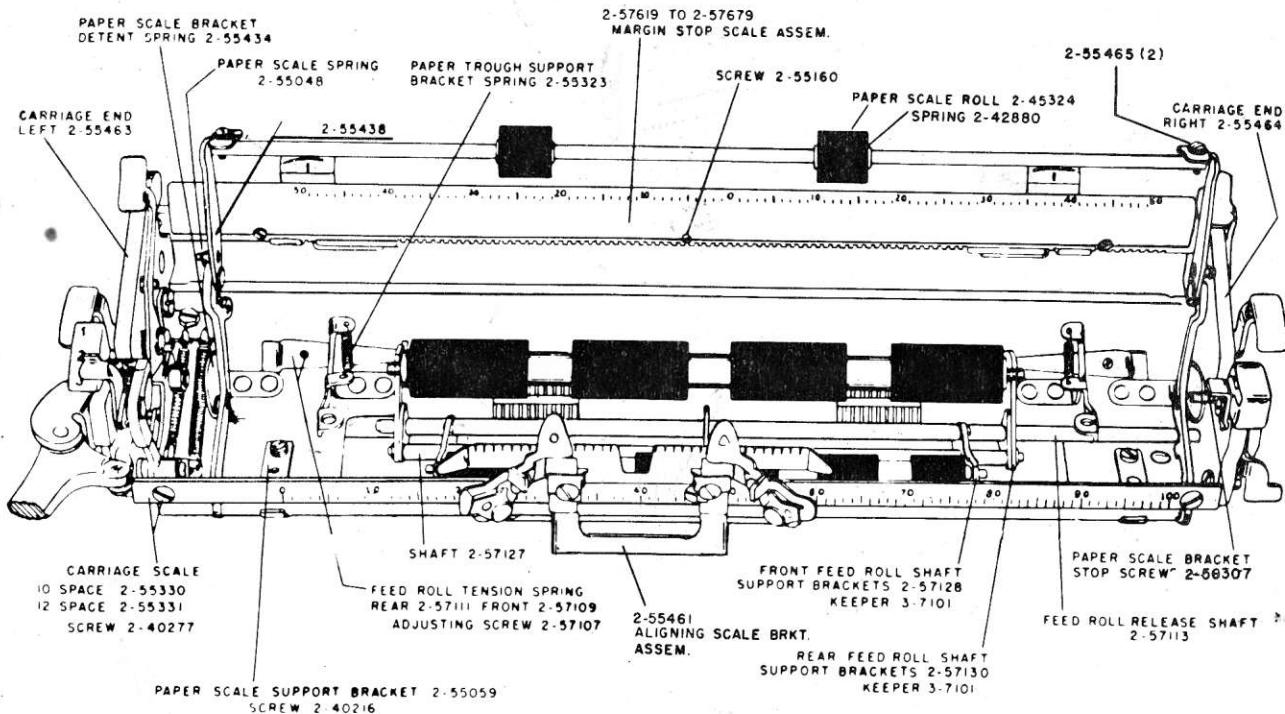

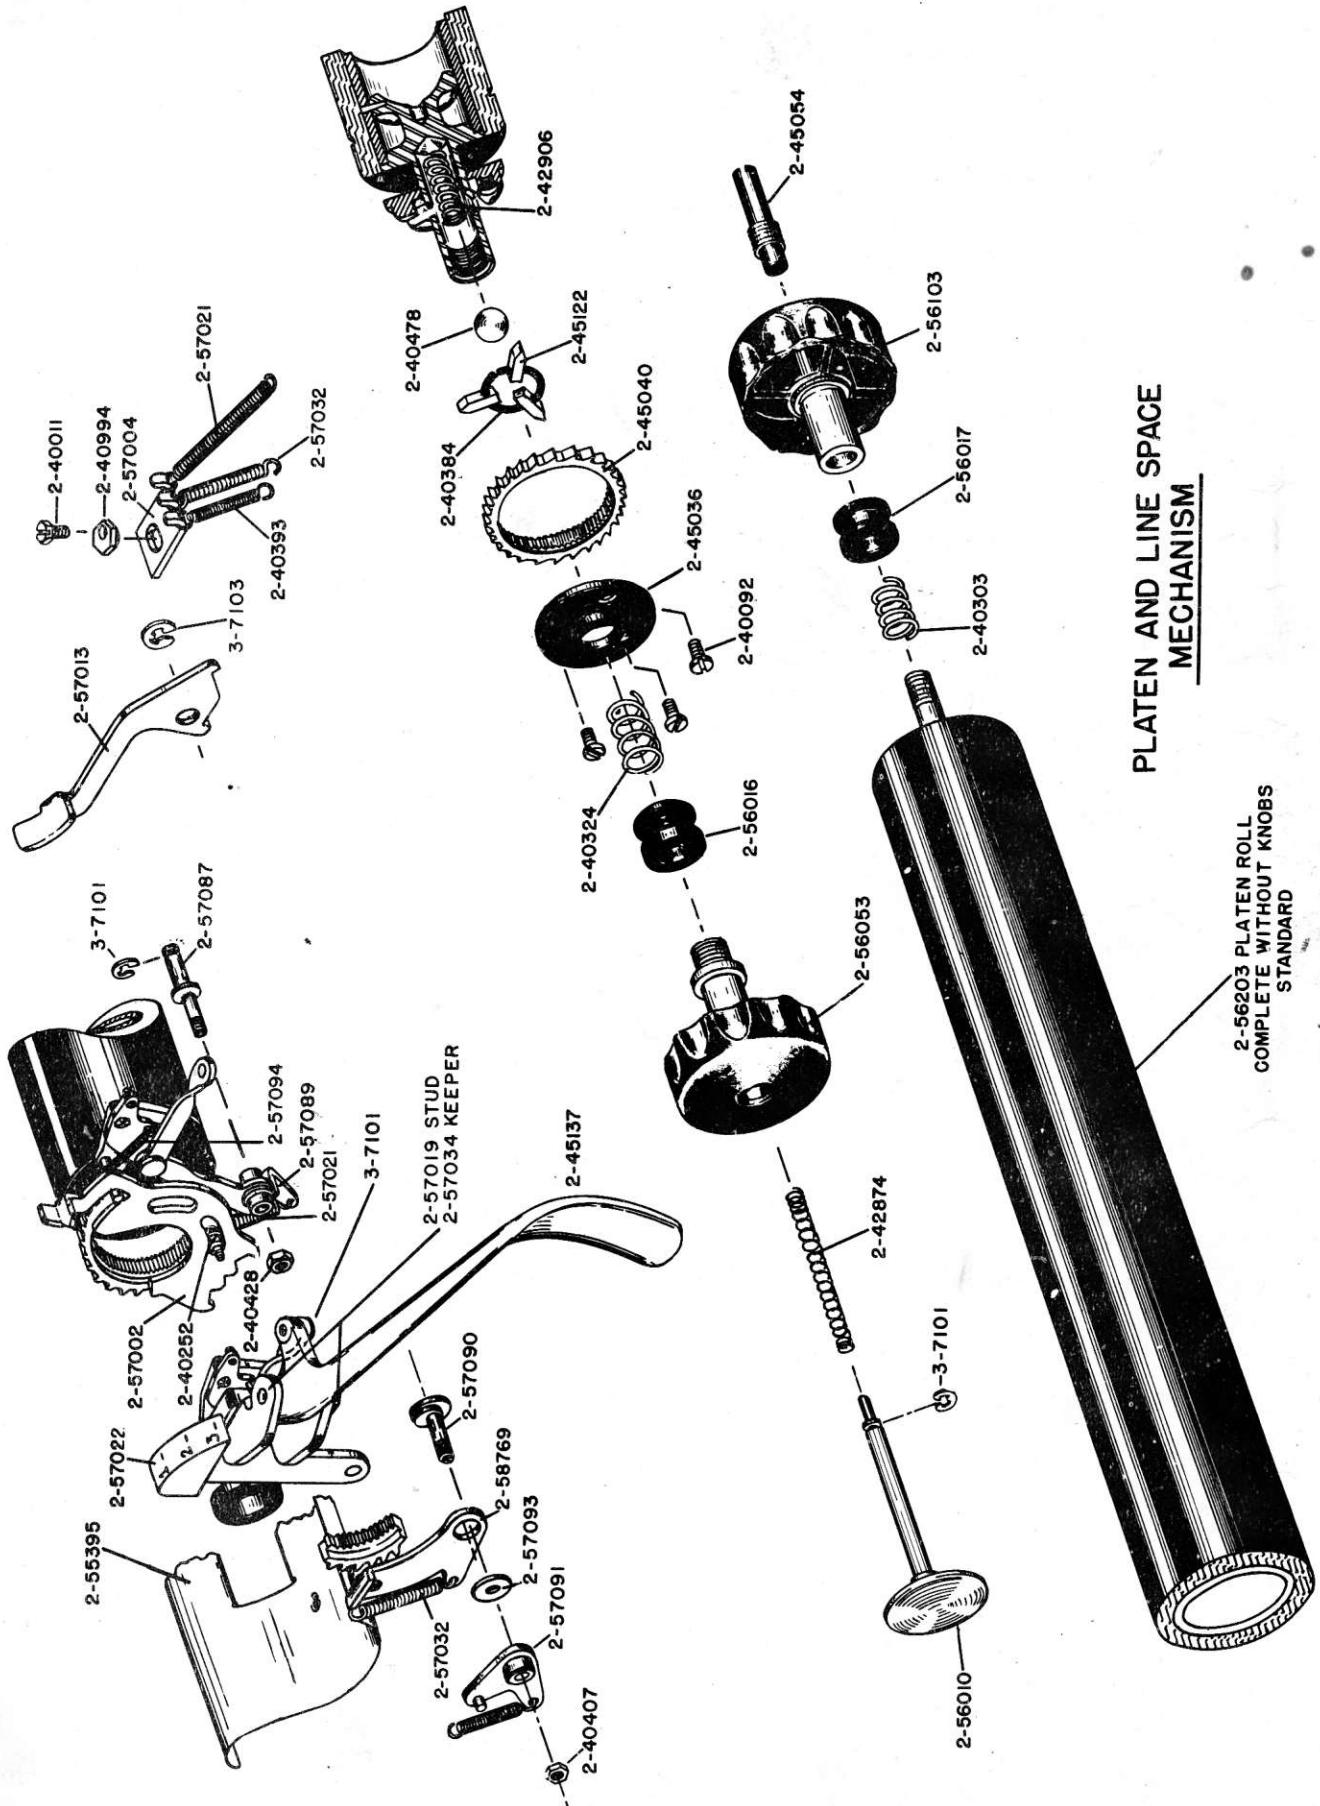

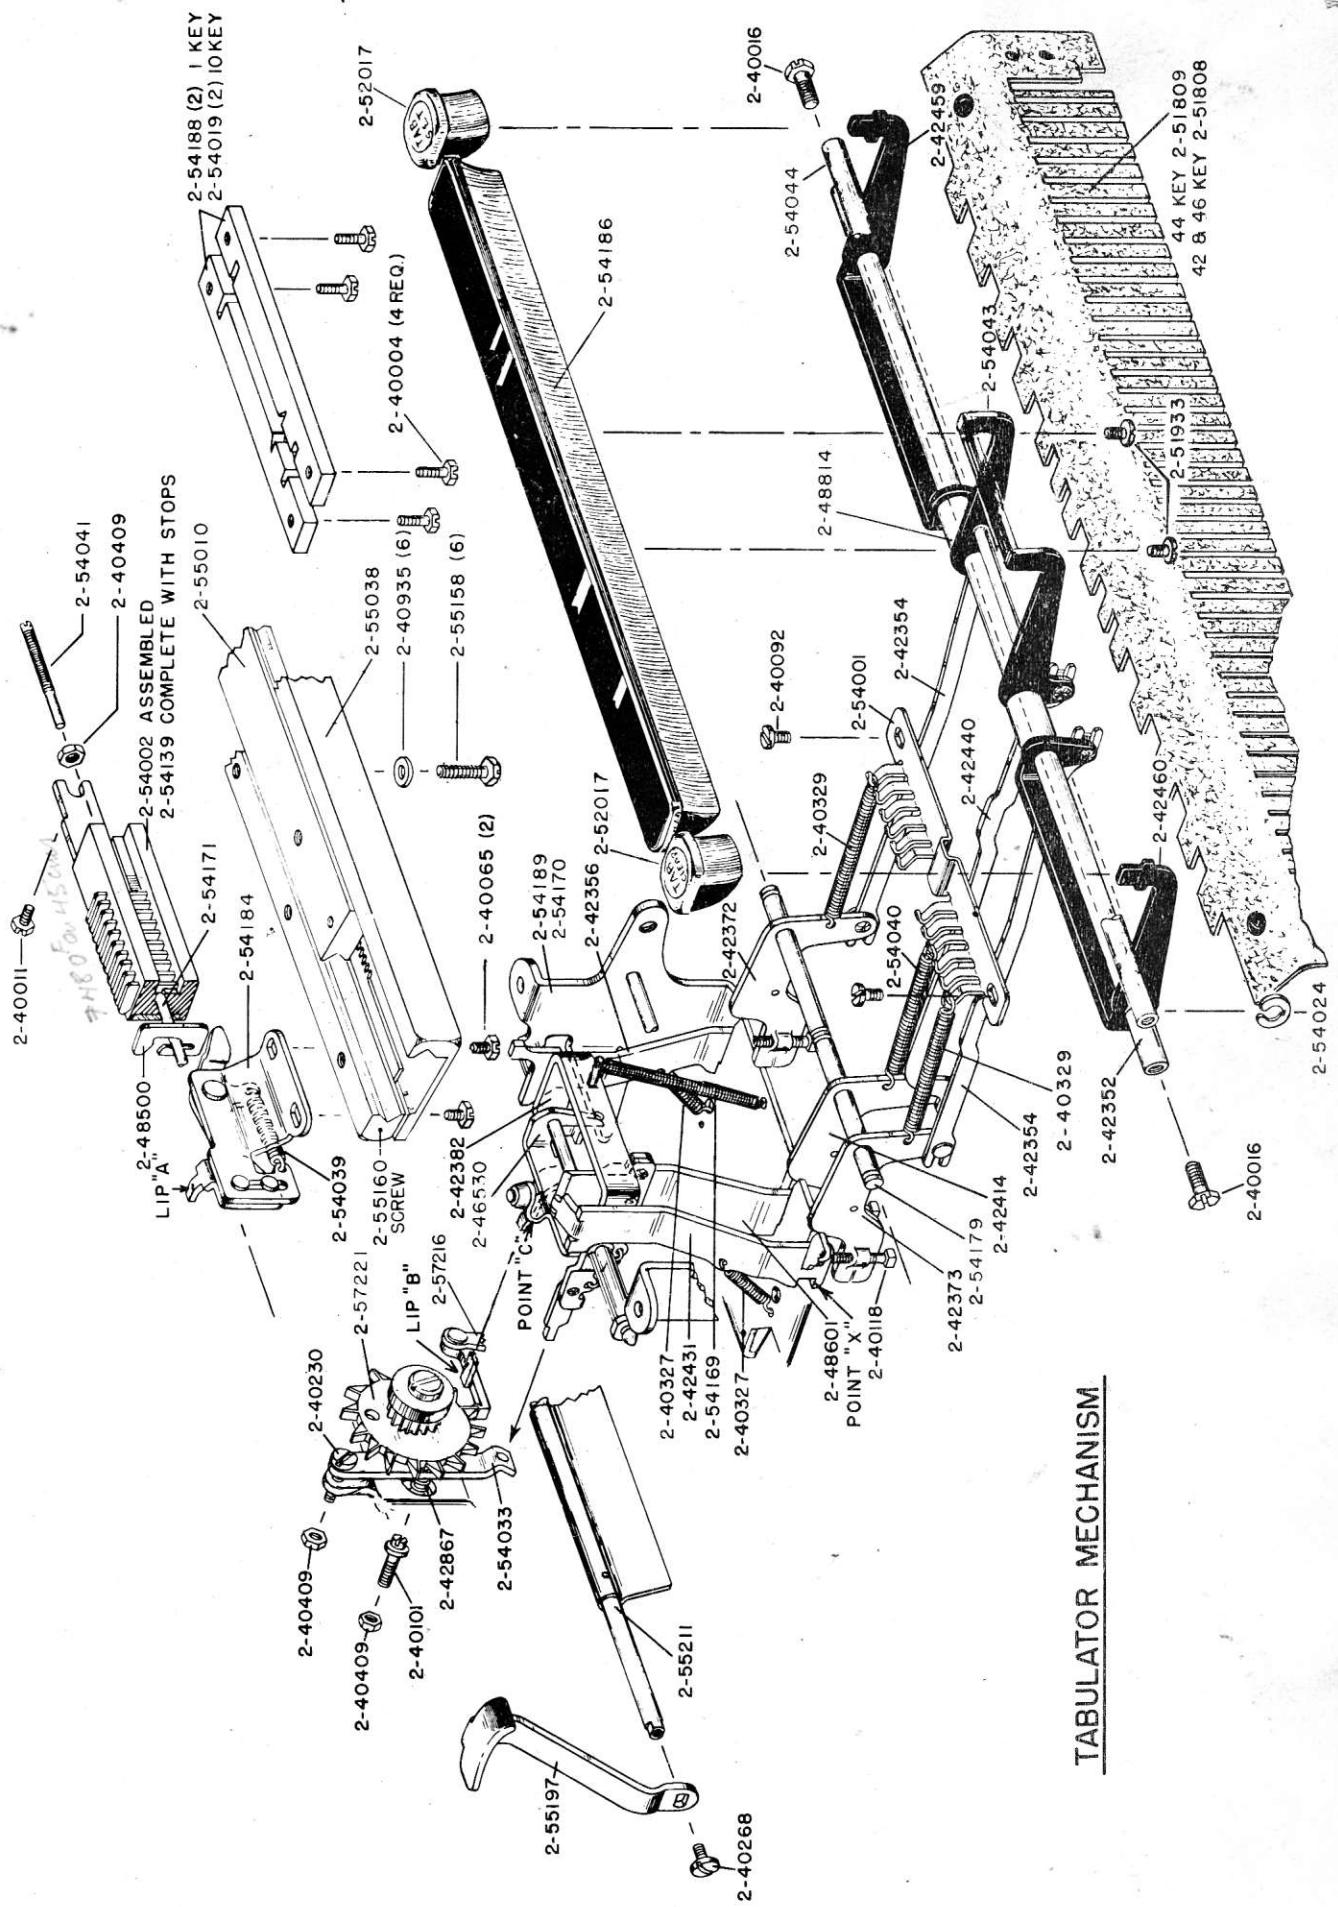



TABULATOR MECHANISM

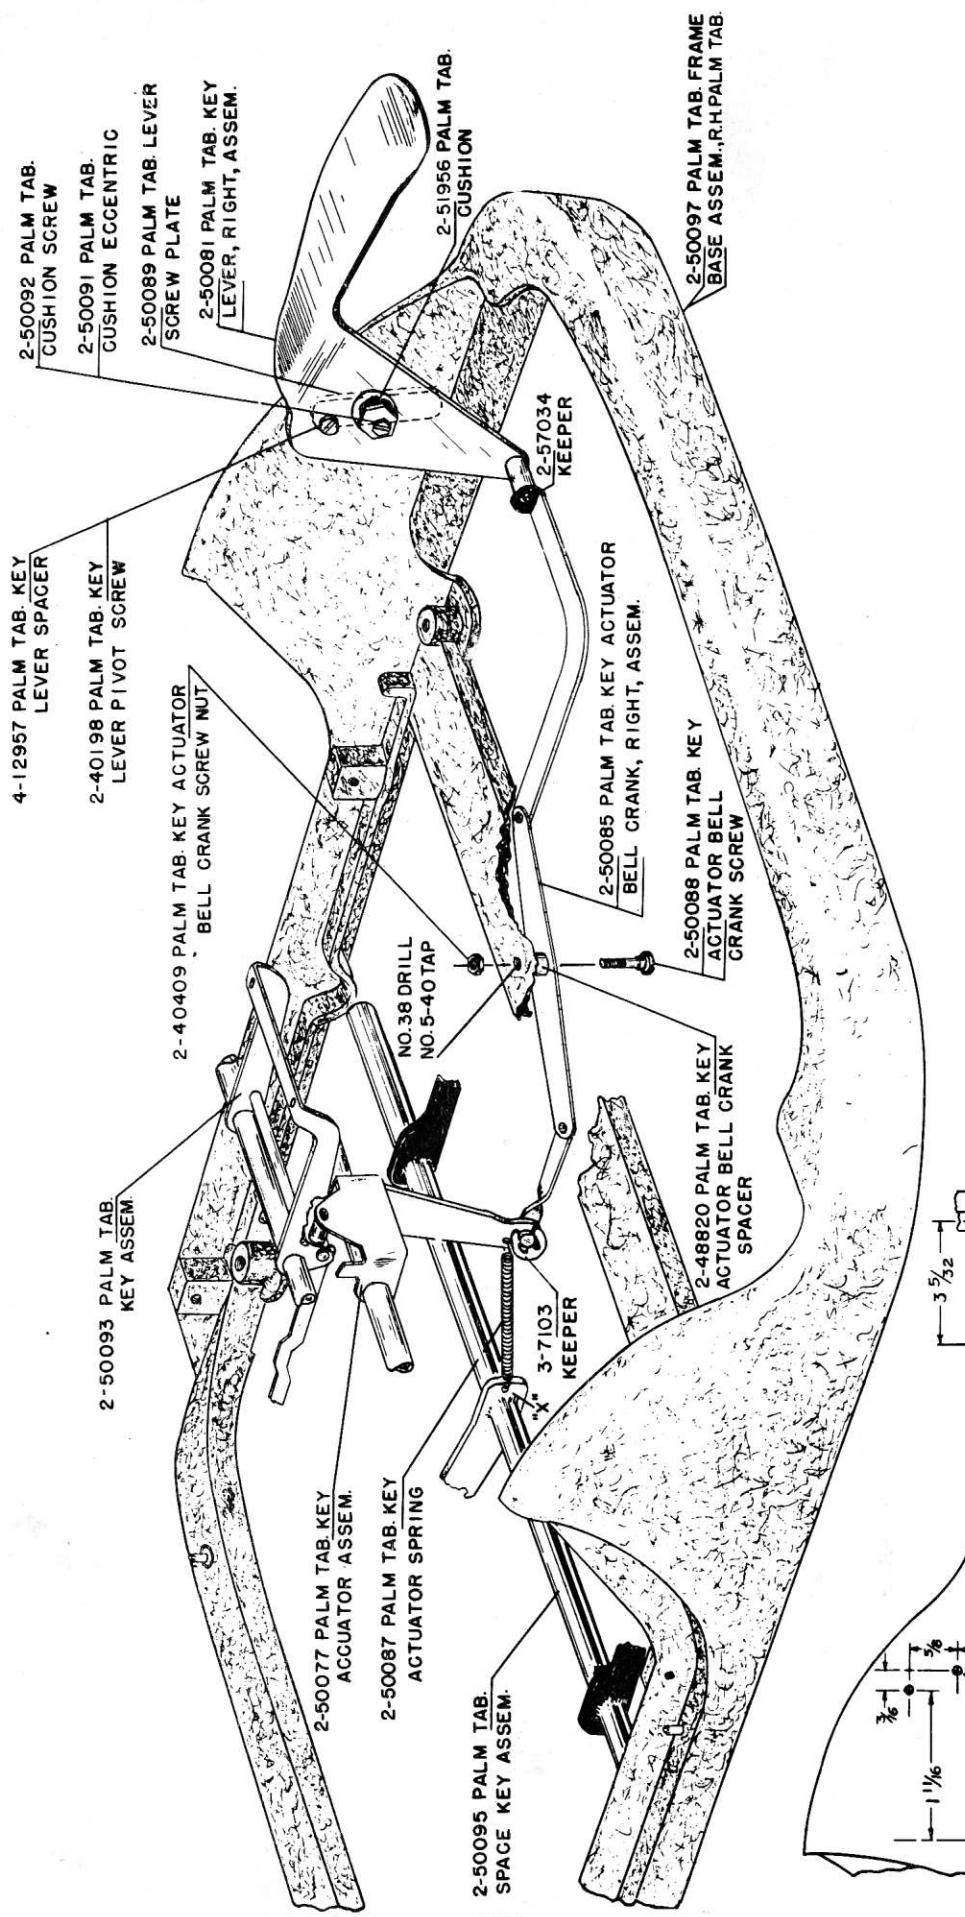


PALM TABULATOR MECHANISM


1 KEY TAB

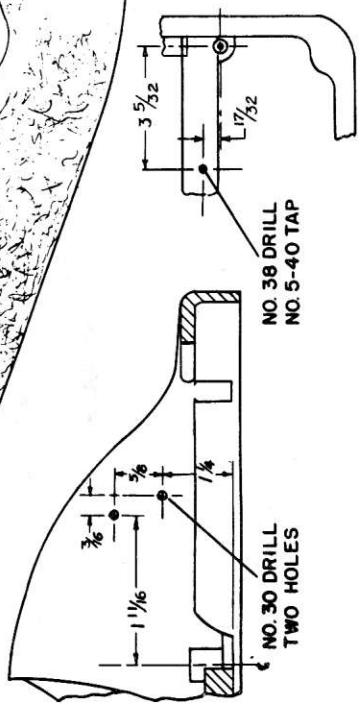


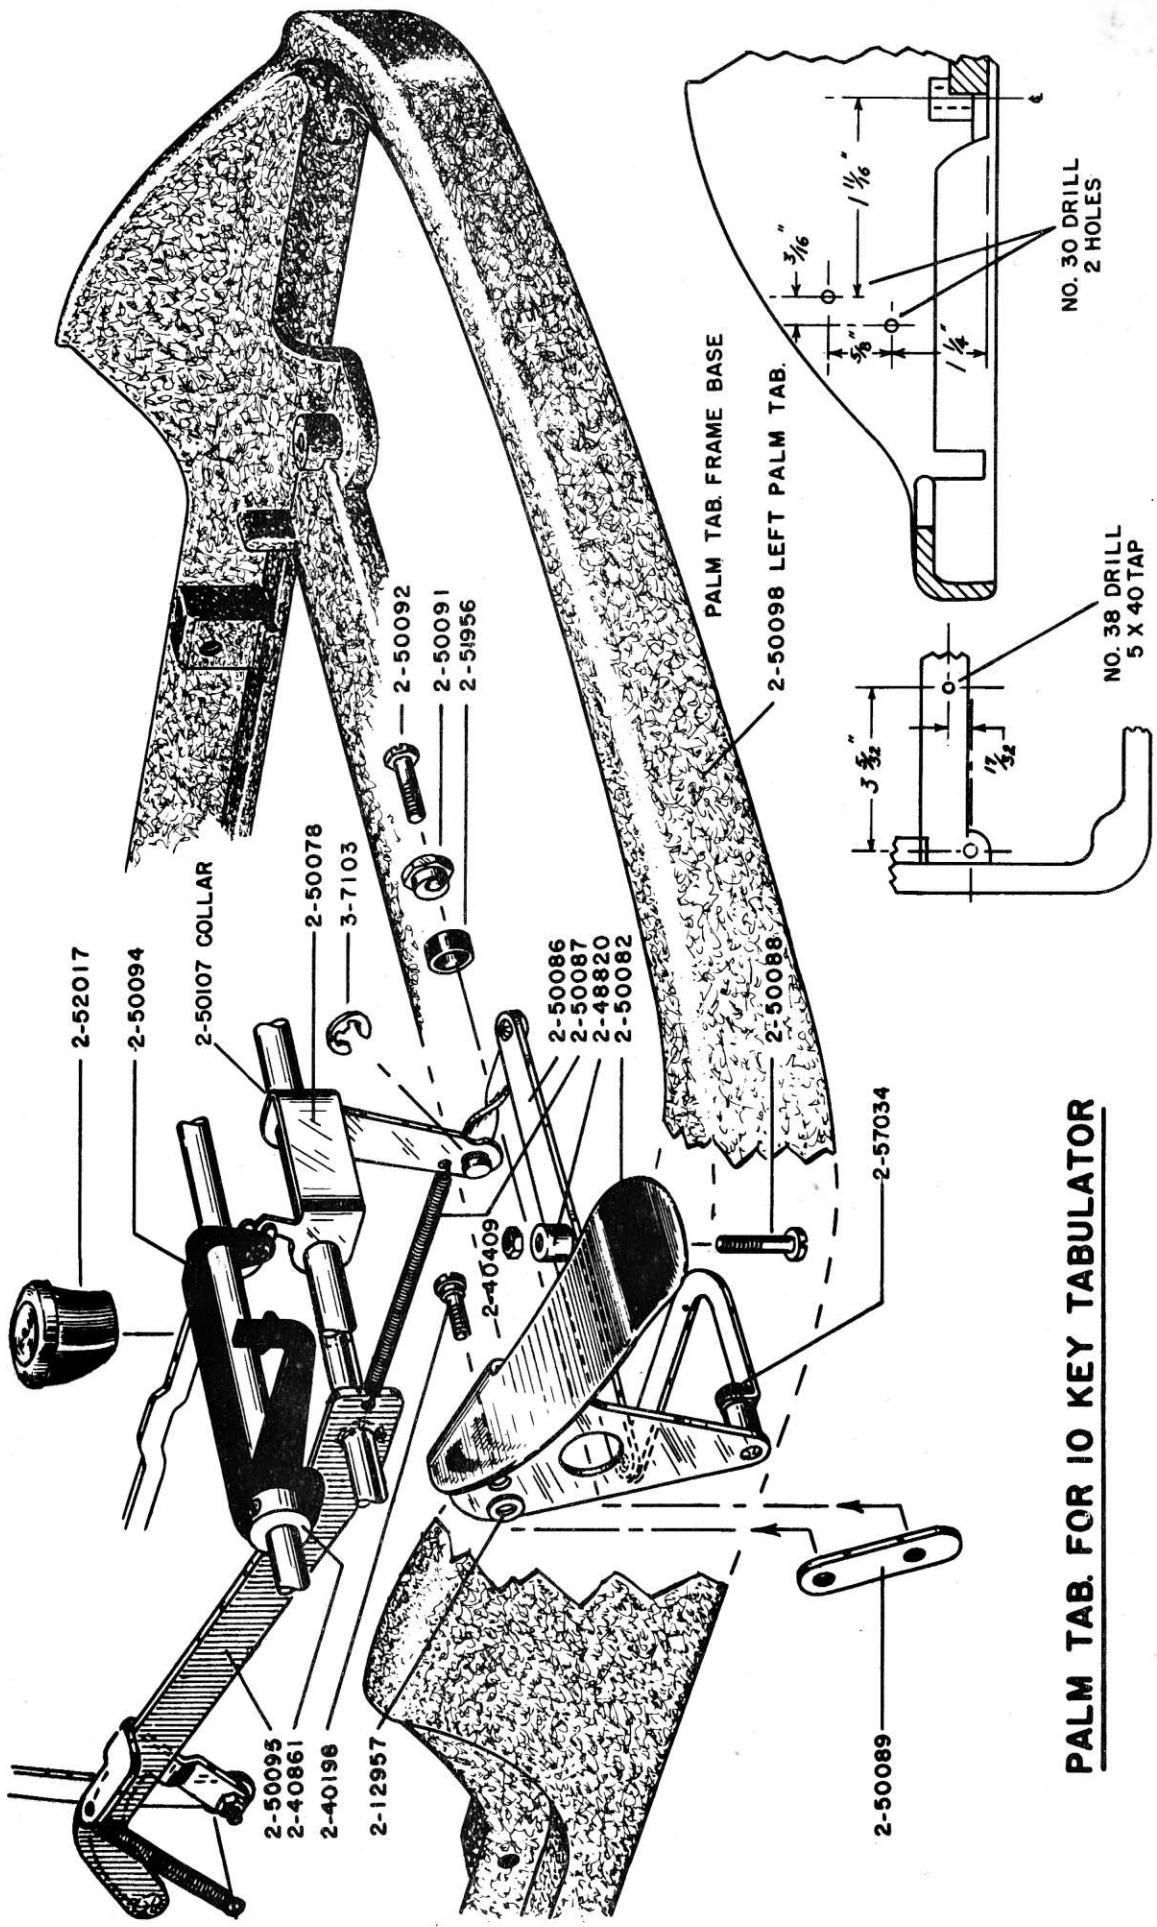

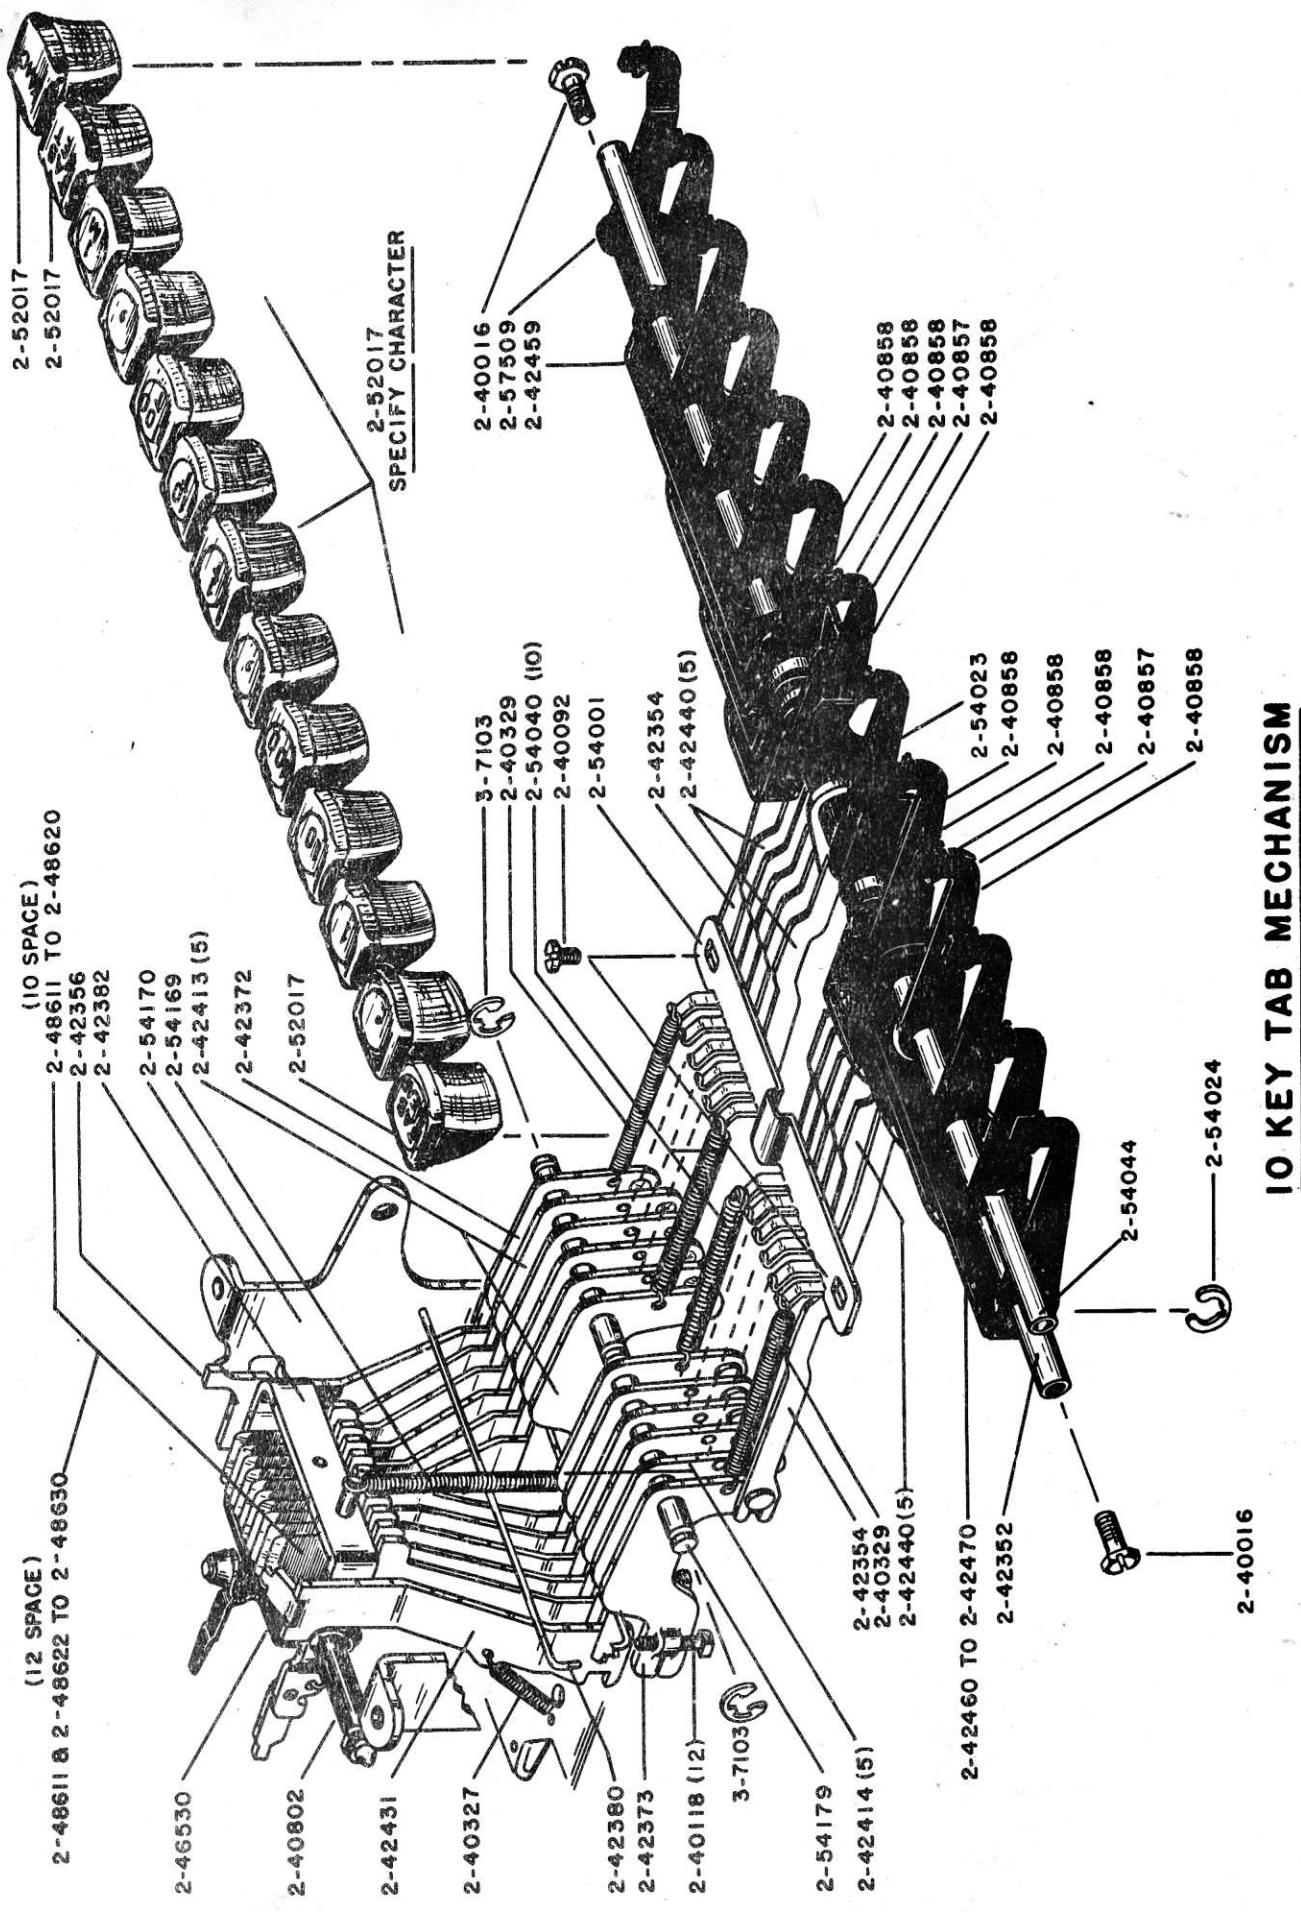

RUBBER FOOT DESK FASTENERS

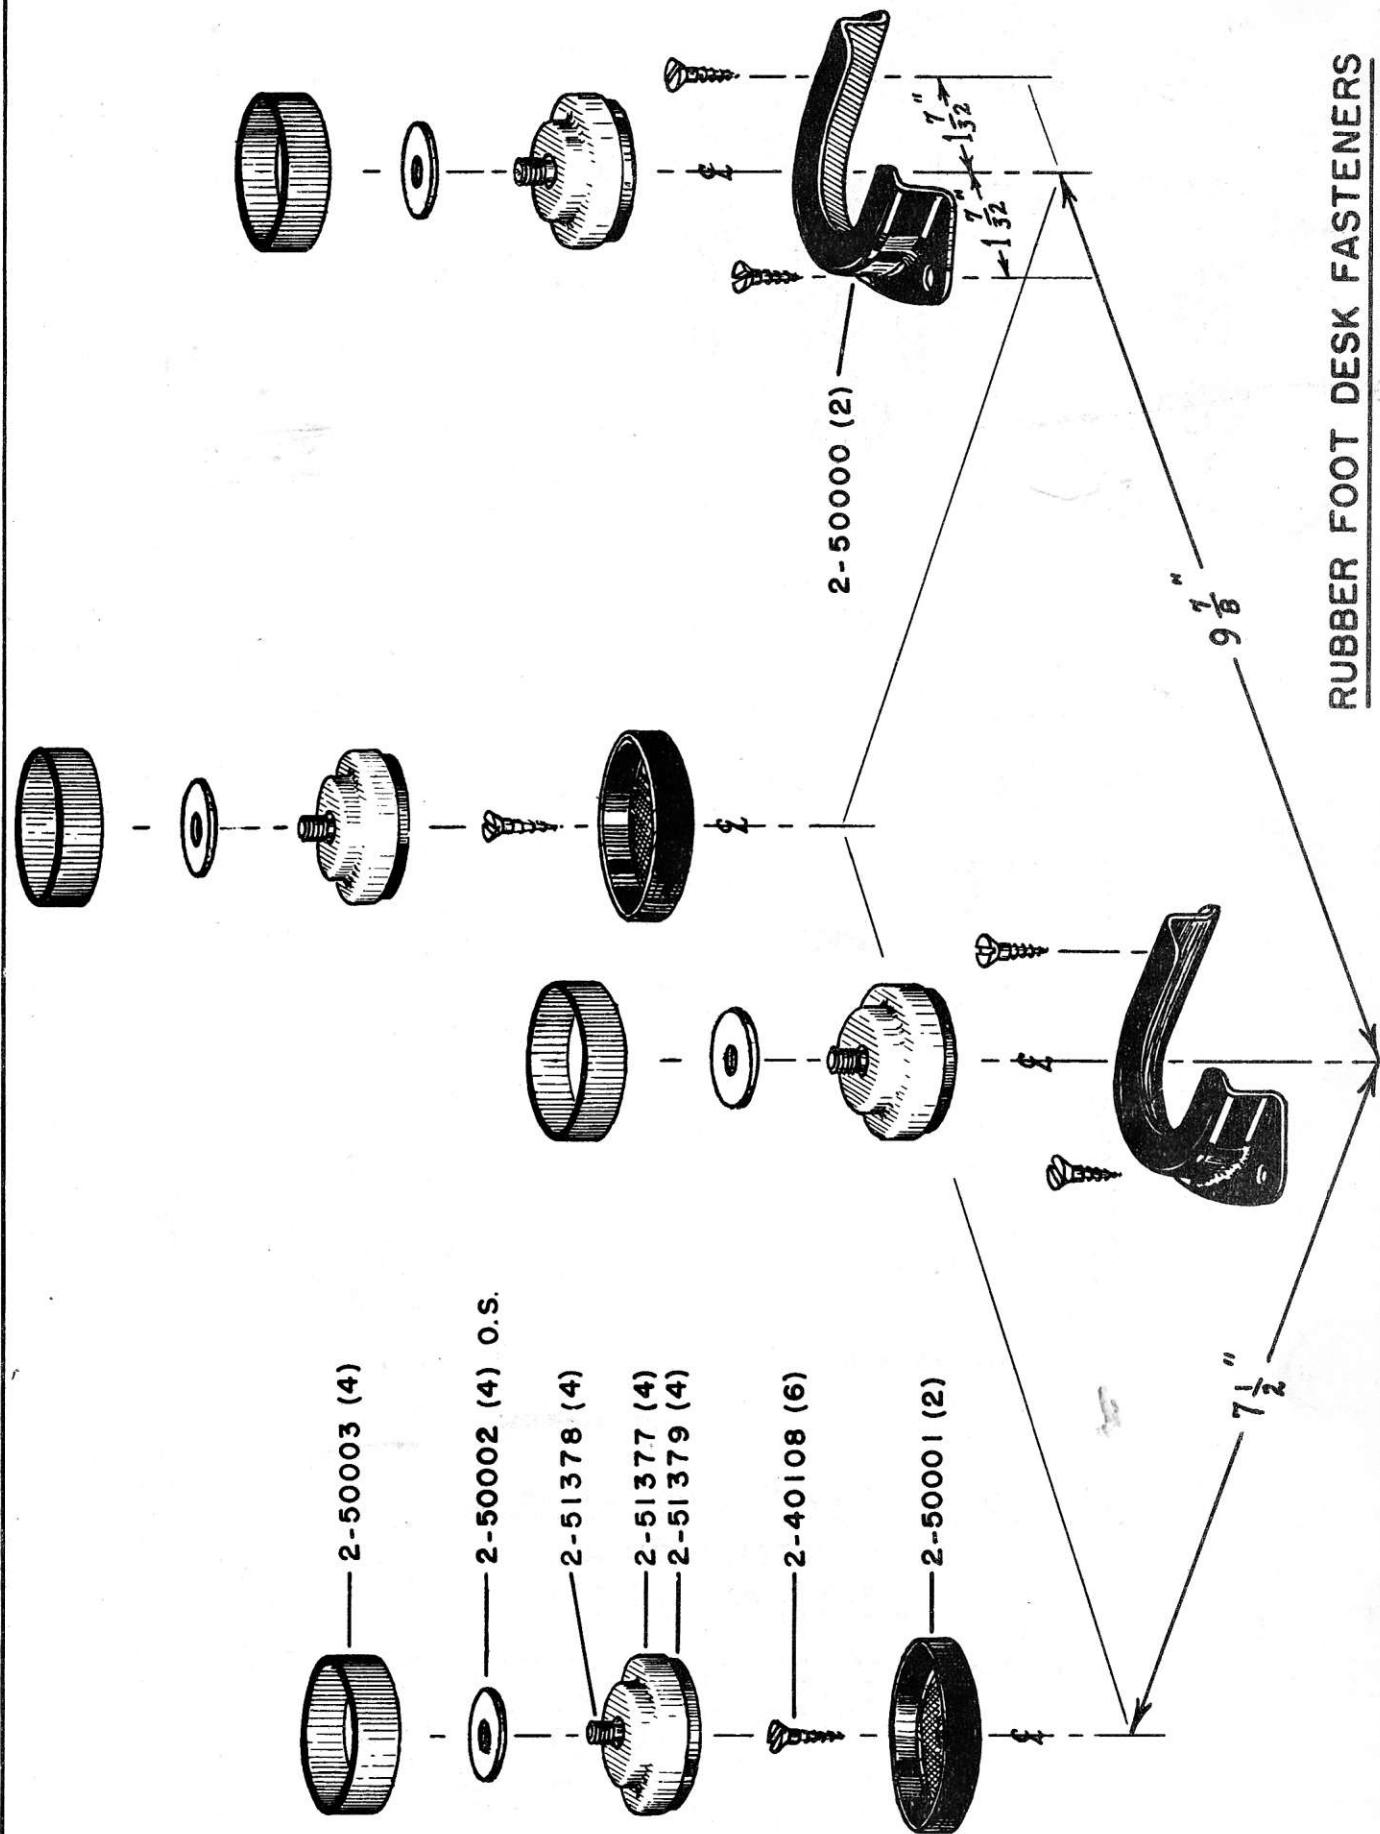

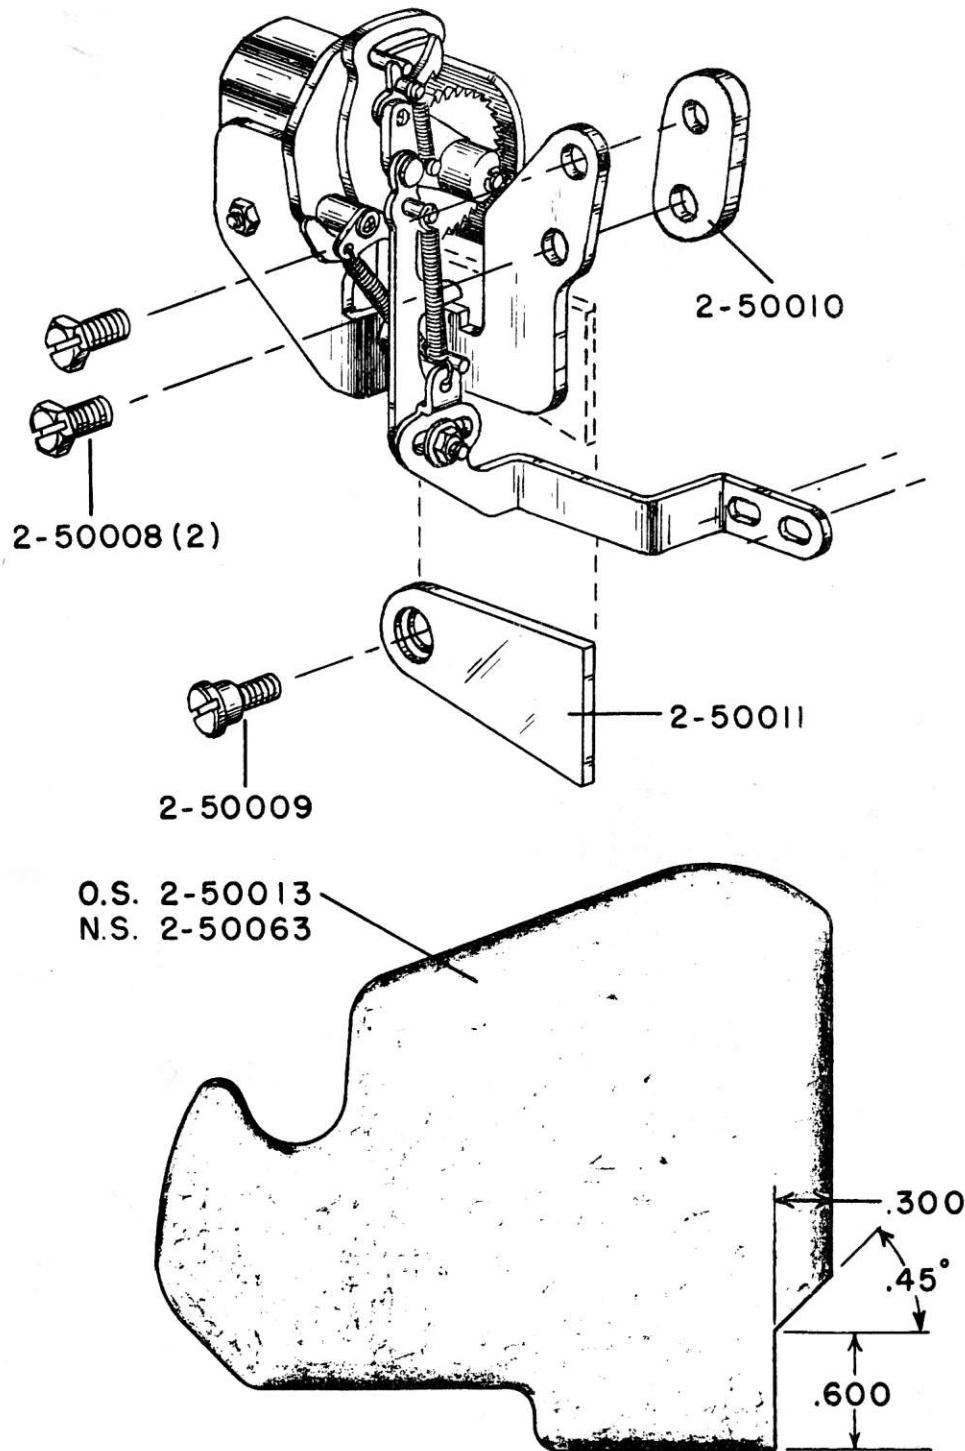

ATTACHING STROKE COUNTER

COUNTER PART NO.	RATIO OF COUNTER
2-44318	10 TO 1
2-44319	100 TO 1
2-44320	240 TO 1

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
3-1102	RIBBON WINDING DISC	
3-5120	LINE SPACE RATCHET DETENT ARM WASHER (O.S.)	
3-7101	KEY TENSION REGULATOR LEVER BELL CRANK RETAINING RING - 42 AND 44 KEY MACHINES	
3-7101	LINE SPACE LINK STUD RETAINING RING	
3-7101	LINE SPACE PAWL ARM RETAINING RING	
3-7101	MARGIN STOP SET RELEASE BLADE LINK RETAINING RING	
3-7101	PAPER FEED ROLL ARM, FRONT RETAINING RING - 11" TO 32" CARRIAGES	
3-7101	PAPER FEED ROLL ARM, REAR AND FULCRUM SHAFT RETAINING RING - 11" TO 32" CARRIAGES	
3-7101	VARIABLE LINE SPACE OPERATING PLUNGER RETAINING RING	
3-7103	CARRIAGE SUPPORT RAIL ROLLER RETAINING RING	
3-7103	LINE SPACE RATCHET DETENT RELEASE LEVER RETAINING RING	
3-7103	MARGIN RELEASE BLADE LINK RETAINING RING	
3-7103	MARGIN SET AND RELEASE CAM SHAFT RETAINING RING	
3-7103	PAPER FEED ROLL RELEASE LEVER RETAINING RING	
3-7103	RIBBON LIFT PUSH LINK BELL CRANK RETAINING RING	
3-7103	SPRING DRUM PINION SHAFT RETAINING RING	
3-7103	TABULATOR BELL CRANK SHAFT RETAINING RING	
4-10054	CARRIAGE SUPPORT RAIL MOUNTING SCREW	
4-10148	FEED RACK SUPPORT SCREW - 15" TO 32" CARRIAGES (O.S. - SUP. BY 2-56181)	
4-10197	CARRIAGE SUPPORT RAIL SCREW - 15" TO 32" CARRIAGES	
4-10957	TYPE BAR FULCRUM WIRE RETAINING SCREW	
4-10958	TYPE BAR FULCRUM WIRE	
4-11607	ESCAPEMENT LOOSE DOG RELEASE ASSEMBLED (O.S. - SUP. BY 2-46530)	
4-11632	PAPER TABLE REAR COVER SUPPORT SCREW NUT - 32" CARRIAGE	
4-12216	RIBBON UNIVERSAL BAR ECCENTRIC	
4-13124	LINE LOCK PUSH BAR KEEPER	
4-13165	SPRING DRUM PINION SHAFT WASHER, FRONT	
2-40000	TYPE BAR SEGMENT FULCRUM SCREW	
2-40002	SEGMENT SHIFT ROCKER PIVOT SCREW, RIGHT	
2-40002	SHIFT LEVER SHAFT PIVOT SCREW, RIGHT	
2-40002	SPACE KEY SHAFT PIVOT SCREW	
2-40004	FEED AND MARGIN STOP RACK SCREW (O.S. - SUP. BY 2-40170)	
2-40004	MARGIN STOP RACK BRACKET NUT PLATE SCREW - 15" TO 32" CARRIAGES	
2-40004	TABULATOR BLADE UPPER COMB SCREW	
2-40010	RIBBON ACTUATOR ARM SCREW (O.S. - SUP. BY 2-40806)	
2-40011	LINE LOCK ADJUSTING PLATE ECCENTRIC SCREW	
2-40011	LINE SPACE DETENT SPRING ANCHOR SCREW	
2-40011	SPRING DRUM BRACKET SCREW	
2-40011	TABULATOR BLADE LOWER COMB AND ESCAPEMENT OPERATING BAIL BRACKET SCREW, TOP	
2-40011	TABULATOR STOP RACK SCREW	
2-40012	TYPE BAR UNIVERSAL BAR FULCRUM SCREW, LEFT (O.S.)	
2-40013	SHIFT LOCK LATCH STRIKE SCREW	
2-40016	CARRIAGE RAIL AND CHANNEL MOUNTING SCREW - 27" AND 32" CARRIAGES	
2-40016	KEY LEVER UP STOP SCREW	
2-40016	TABULATOR BLADE LOWER COMB AND ESCAPEMENT OPERATING BAIL BRACKET SCREW, BOTTOM	
2-40016	TABULATOR KEY SHAFT SCREW	
2-40016	TABULATOR KEY UP STOP SCREW	
2-40020	LINE LOCK ADJUSTING PLATE GUIDE SCREW	
2-40020	SEGMENT SHIFT STOP MOUNTING SCREW	
2-40023	LINE LOCK UNIVERSAL BAR PIVOT SCREW	
2-40024	CARRIAGE SPRING DRUM SCREW (O.S.)	
2-40024	SPRING DRUM ARBOR SCREW	
2-40040	PLATEN LOCK COVER, LEFT SCREW	
2-40042	ESCAPEMENT OPERATING BAIL PIVOT SCREW	
2-40060	TYPE BAR UNIVERSAL BAR OSCILLATOR PIVOT SCREW	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-40065	BELL SCREW	
2-40065	RIBBON ACTUATOR ARM STOP SCREW	
2-40065	RIBBON UNIVERSAL BAR ECCENTRIC SCREW	
2-40065	TABULATOR STOP SET BRACKET SCREW	
2-40066	SHIFT TOGGLE LINK LONG ECCENTRIC SCREW	
2-40067	TYPE BAR SEGMENT BALL RACE SCREW	
2-40081	ESCAPEMENT LOOSE DOG SILENCER STOP SCREW	
2-40081	SPRING DRUM PINION RELEASE BELL CRANK ADJUSTING SCREW	
2-40088	ESCAPEMENT ROCKER STOP SCREW, UPPER	
2-40088	TABULATOR STOP RACK ADJUSTING SCREW (O.S. - SUP. BY 2-54041)	
2-40092	KEY LEVER AND TYPE BAR BELL CRANK SPRING ARM FULCRUM BRACKET SCREW - 42 AND 44 KEY MACHINES	
2-40092	RIBBON ACTUATOR ARM BRACKET SCREW	
2-40092	TABULATOR BELL CRANK SPRING ANCHOR SCREW	
2-40092	VARIABLE LINE SPACE COVER SCREW	
2-40101	ESCAPEMENT ROCKER SPRING SCREW	
2-40101	TABULATOR FRICTION SPRING ADJUSTING SCREW	
2-40110	RIBBON DRIVE BALL CLUTCH, REAR, SET SCREW	
2-40110	RIBBON DRIVE GEAR PINION SET SCREW	
2-40110	RIBBON DRIVING GEAR SET SCREW	
2-40110	RIBBON DRIVE SHAFT DETENT COLLAR SET SCREW	
2-40110	RIBBON SPOOL SHAFT TENSION SPRING COLLAR SET SCREW	
2-40111	MARGIN BLADE LINK ECCENTRIC SCREW (O.S.)	
2-40111	SIDE COVER SCREW	
2-40113	MARGIN STOP RACK ADJUSTING SCREW	
2-40114	ESCAPEMENT LINK LOCK ARM SCREW	
2-40115	ESCAPEMENT LOOSE DOG SILENCER FRICTION SPRING COLLAR SCREW	
2-40118	TABULATOR BELL CRANK ADJUSTING SCREW	
2-40127	TYPE BAR SEGMENT BALL RACE BLOCK ADJUSTING SCREW, SHORT	
2-40128	TYPE BAR UNIVERSAL BAR OSCILLATOR BRACKET SCREW	
2-40133	MARGIN STOP RACK SCREW	
2-40133	RIBBON SPOOL SHAFT BRACKET SCREW	
2-40133	SHIFT TOGGLE ECCENTRIC SCREW	
2-40153	SPRING DRUM PINION SUPPORT ADJUSTING SCREW	
2-40156	TYPE BAR GUIDE SCREW	
2-40162	SPACE KEY DOWN STOP SCREW	
2-40163	SPACE KEY DOWN STOP ASSEMBLED	
2-40164	ESCAPEMENT ROCKER PIVOT SCREW	
2-40170	FEED RACK SCREW	
2-40170	PAPER TABLE SUPPORT BRACKET SCREW - 20" TO 32" CARRIAGES	
2-40170	TOP COVER APRON SCREW	
2-40174	SHIFT LOCK LATCH STRIKE SCREW, LEFT - 44 KEY MACHINE	
2-40175	CARRIAGE ROLLER BRACKET SCREW (O.S.)	
2-40186	CARRIAGE END MOUNTING SCREW (O.S. - SUP. BY 2-55314)	
2-40186	TABULATOR STOP RACK SUPPORT BRACKET SCREW - 15" TO 32" CARRIAGES (O.S. - SUP. BY 2-40234)	
2-40189	ESCAPEMENT WHEEL BEARING SCREW (O.S. - SUP. BY 2-57226)	
2-40202	RIBBON CASE SCREW	
2-40209	TYPE BAR SEGMENT BALL RACE BLOCK PULL SCREW	
2-40210	PAPER FEED ROLL RELEASE LEVER SCREW (O.S.)	
2-40214	RIBBON REVERSE CAM SCREW	
2-40216	CARRIAGE BED MOUNTING SCREW	
2-40216	CARRIAGE FEED ROLL SUPPORT BRACKET SUPPORT SCREW - 15" TO 32" CARRIAGES (O.S.)	
2-40216	CARRIAGE SUPPORT RAIL REAR SUPPORT SCREW - 15" TO 32" CARRIAGES (O.S. - SUP. BY 4-10197)	
2-40216	PAPER SCALE ARM SHAFT CLAMP SCREW	
2-40216	PAPER SCALE ARM SUPPORT CAM GUIDE SCREW	
2-40216	PLATEN END BUSHING SUPPORT SCREW, LEFT	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-40216	PLATEN ROLL END BUSHING SUPPORT SCREW (O.S. - SUP. BY 2-56307)	
2-40216	RIBBON REVERSE DETENT SCREW	
2-40216	SPRING DRUM PINION SUPPORT BRACKET SCREW	
2-40222	KEY LEVER COMB SCREW	
2-40224	BELL RINGER SCREW, UPPER (O.S.)	
2-40224	ESCAPEMENT LOOSE DOG GUIDE SCREW	
2-40224	SPACE KEY PUSH LINK GUIDE SCREW	
2-40230	RIBBON ACTUATOR ARM UP STOP, BLACK, SCREW	
2-40230	TABULATOR FRICTION STUD ARM SCREW	
2-40234	TABULATOR STOP RACK SUPPORT SCREW - 15" TO 32" CARRIAGES	
2-40240	RIBBON CONTROL SHAFT ARM SET SCREW	
2-40240	RIBBON SPOOL SHAFT PINION SET SCREW	
2-40241	ESCAPEMENT ROCKER SUPPORT PLATE SCREW (O.S. - SUP. BY 2-57202)	
2-40241	KEY LEVER AND BELL CRANK BRACKET SCREW	
2-40241	SIDE PLATE SUPPORT BRACKET SCREW	
2-40244	TYPE BAR CUSHION BRACKET SCREW	
2-40252	LINE SPACE REGULATOR SCREW	
2-40253	LINE SPACE LINK SCREW (O.S.)	
2-40259	RIBBON UNIVERSAL BAR PIVOT SCREW	
2-40268	CARRIAGE RELEASE LEVER SCREW	
2-40277	ALIGNING SCALE SCREW	
2-40277	CARRIAGE SCALE SCREW	
2-40281	CARRIAGE SCALE SUPPORT SCREW (O.S. - SUP. BY 2-40277)	
2-40291	LINE SPACE PAWL ARM BEARING SCREW (O.S. - SUP. BY 2-57087)	
2-40298	PAPER BAIL SCALE SCREW	
2-40300	ESCAPEMENT ROCKER SPRING (O.S. - SUP. BY 2-57205)	
2-40303	PLATEN ROLL BUSHING, RIGHT SPRING	
2-40313	SHIFT LOCK LEVER SPRING	
2-40324	PLATEN ROLL BUSHING, LEFT SPRING	
2-40326	ESCAPEMENT LOOSE DOG SPRING	
2-40326	RIBBON FEED PAWL SPRING (O.S.)	
2-40327	TABULATOR STOP CLEAR BLADE SPRING	
2-40327	TABULATOR STOP SET BLADE SPRING	
2-40329	TABULATOR SET AND CLEAR KEY BELL CRANK SPRING	
2-40333	TOP COVER LATCH SPRING	
2-40355	ESCAPEMENT LOOSE DOG RELEASE SPRING	
2-40355	TABULATOR STOP SET SPRING	
2-40364	SHIFT BALANCING SPRING	
2-40368	RIBBON REVERSE DETENT SPRING	
2-40369	RIBBON SPOOL SHAFT SPRING	
2-40372	LINE SPACE RATCHET DETENT LEVER SPRING - 45 TO 65 TEETH - 11" TO 15" (O.S. - SUP. BY 2-57033)	
2-40374	LINE SPACE PAWL SPRING - 45 TO 65 TEETH	
2-40384	VARIABLE LINE SPACE CLUTCH DOG SPRING	
2-40391	LINE SPACE PAWL SPRING - 20 TO 44 TEETH	
2-40393	LINE SPACE REGULATOR DETENT SPRING	
2-40395	ALIGNING SCALE CARD TENSION FINGER SPRING, LEFT	
2-40396	ALIGNING SCALE CARD TENSION FINGER SPRING, RIGHT	
2-40401	MARGIN BLADE LINK ECCENTRIC SCREW NUT (O.S. - SUP. BY 2-40409)	
2-40401	SPACE KEY PUSH LINK SCREW NUT	
2-40407	CARRIAGE SUPPORT RAIL REAR BRACKET ROLLER SCREW NUT (O.S. - SUP. BY 2-40410)	
2-40407	ESCAPEMENT OPERATING BAIL PIVOT SCREW NUT	
2-40407	ESCAPEMENT ROCKER PIVOT SCREW NUT	
2-40407	LINE SPACE RATCHET DETENT ARM ECCENTRIC SCREW NUT	
2-40408	ESCAPEMENT LINK NUT	
2-40408	ESCAPEMENT LOOSE DOG CARRYING ARM SCREW NUT	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-40408	ESCAPEMENT LOOSE DOG CARRYING SPRING SCREW NUT	
2-40408	RIBBON ACTUATOR ARM SCREW NUT (O.S. - SUP. BY 2-40806)	
2-40409	ESCAPEMENT LOOSE DOG SILENCER STOP SCREW NUT	
2-40409	ESCAPEMENT ROCKER SPRING SCREW NUT	
2-40409	ESCAPEMENT ROCKER STOP SCREW NUT	
2-40409	FEED AND MARGIN STOP RACK, ROLLER SCREW NUT (O.S.)	
2-40409	FEED ROLL SUPPORT BRACKET RIGHT FRONT MOUNTING SCREW NUT	
2-40409	LINE SPACE RATCHET DETENT ARM BEARING SCREW NUT (O.S. - SUP. BY 2-40407)	
2-40409	MARGIN RELEASE BLADE LINK ECCENTRIC SCREW NUT (O.S.)	
2-40409	PAPER TABLE CENTER SUPPORT SCREW NUT - 15" TO 32" CARRIAGES	
2-40409	SPACE KEY DOWN STOP SCREW NUT	
2-40409	SPRING DRUM PINION RELEASE BELL CRANK ADJUSTING NUT	
2-40409	SPRING DRUM PINION SUPPORT ADJUSTING SCREW NUT	
2-40409	TABULATOR FRICTION SPRING ADJUSTING SCREW NUT	
2-40409	TABULATOR FRICTION STUD ARM SCREW NUT	
2-40409	TABULATOR STOP RACK ADJUSTING SCREW	
2-40410	CARRIAGE SUPPORT RAIL ROLLER STUD NUT	
2-40410	RIBBON UNIVERSAL BAR PIVOT SCREW NUT	
2-40410	SEGMENT SHIFT STOP SCREW NUT	
2-40411	ESCAPEMENT WHEEL BEARING SCREW NUT	
2-40411	SEGMENT SHIFT ROCKER PIVOT SCREW NUT	
2-40411	SHIFT LEVER SHAFT PIVOT SCREW NUT	
2-40411	SPACE KEY SHAFT PIVOT SCREW NUT	
2-40411	TYPE BAR SEGMENT FULCRUM SCREW NUT	
2-40411	TYPE BAR UNIVERSAL BAR OSCILLATOR PIVOT SCREW NUT	
2-40425	RIBBON CONTROL LEVER SCREW NUT	
2-40428	BASE SCREW NUT	
2-40428	LINE SPACE PAWL ARM BEARING SCREW NUT	
2-40475	RIBBON DRIVE CLUTCH BALL	
2-40477	TYPE BAR SEGMENT BALL	
2-40478	VARIABLE LINE SPACE CLUTCH BALL	
2-40501	RIBBON CARRIER PIN	
2-40556	TYPE BAR GUIDE DOWEL	
2-40562	PAPER FINGER ROLL BEARING - SPECIAL EQUIPMENT	
2-40800	KEY TENSION REGULATOR LEVER LINK KEEPER - 42 AND 44 KEY MACHINES	
2-40800	LINE LOCK OPERATING LEVER KEEPER	
2-40802	ESCAPEMENT LOOSE DOG RELEASE SHAFT RETAINER	
2-40806	MARGIN RELEASE BELL CRANK RETAINER	
2-40806	RIBBON ACTUATOR ARM RETAINER	
2-40806	TABULATOR BLADE LOWER COMB AND ESCAPEMENT OPERATING BAIL BRACKET TIE ROD RETAINER (O.S.)	
2-40850	RIBBON ACTUATOR ARM SPACER (O.S.)	
2-40857	TABULATOR KEY SPACER (.058) 10 KEY TABULATOR	
2-40858	TABULATOR KEY SPACER (.113) 10 KEY TABULATOR	
2-40861	RIBBON SPOOL SHAFT TENSION SPRING COLLAR	
2-40862	ESCAPEMENT LOOSE DOG CARRYING ARM SPACER	
2-40870	TABULATOR FRICTION BAIL SPACER, LEFT	
2-40877	TABULATOR FRICTION BAIL SPACER, RIGHT	
2-40885	TYPE BAR SEGMENT BALL RACE DOWEL	
2-40902	CARRIAGE SUPPORT RAIL REAR ROLLER SCREW WASHER (O.S. - SUP. BY 2-55486)	
2-40902	ESCAPEMENT LOOSE DOG RELEASE SPACER, LEFT	
2-40904	LINE SPACE PAWL ARM BEARING SCREW WASHER	
2-40904	TABULATOR FRICTION BAIL WASHER	
2-40919	ESCAPEMENT LOOSE DOG SILENCER FRICTION SPRING COLLAR	
2-40927	TYPE BAR UNIVERSAL BAR OSCILLATOR BRACKET SCREW WASHER	
2-40935	CARRIAGE RAIL CLAMP SCREW WASHER	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-40952	RIBBON SPOOL SHAFT SPACE COLLAR	
2-40958	ESCAPEMENT WHEEL BEARING SCREW LOCK WASHER	
2-40966	ESCAPEMENT ROOKER STOP SCREW CUSHION WASHER	
2-40971	LINE SPACE RATCHET DETENT ROLL (.340 DIA.)	
2-40972	LINE SPACE RATCHET DETENT ROLL (.225 DIA.)	
2-40973	LINE SPACE RATCHET DETENT ROLL (.190 DIA.)	
2-40981	LINE SPACE RATCHET DETENT ROLL (.300 DIA.) REGULAR	
2-40994	LINE SPACE DETENT SPRING ANCHOR ECCENTRIC	
2-40997	LINE SPACE RATCHET DETENT RELEASE LEVER SPRING WASHER	
2-40998	PAPER TABLE REAR COVER SUPPORT SCREW WASHER - 32" CARRIAGE	
2-40999	LINE SPACE RATCHET DETENT ROLL (.160 DIA.)	
2-41117	KEY LEVER UP STOP RUBBER (O.S. - SUP. BY 2-51930)	
2-41127	SPACE KEY PUSH LINK ECCENTRIC	
2-41136	SPACE BAR DOWN STOP SHIM	
2-41138	SPACE KEY PUSH LINK ASSEMBLED	
2-41158	SPACE KEY UP STOP	
2-41406	TYPE BAR SEGMENT BALL RACE	
2-41410	TYPE BAR LINK, OUTER	
2-41411	TYPE BAR SEGMENT BALL RACE BLOCK ASSEMBLED	
2-41432	TYPE BAR LINK, CENTER	
2-41448	SEGMENT SHIFT ROOKER BEARING	
2-41448	TYPE BAR UNIVERSAL BAR OSCILLATOR BEARING (O.S.)	
2-41598	SEGMENT SHIFT STOP	
2-41647	TYPE BAR UNIVERSAL BAR ASSEMBLED	
2-41700	TYPE - SPECIFY STYLE AND CHARACTER DESIRED	
2-41775	TYPE BAR DEAD KEY OFFSET ASSEMBLED WITH TYPE No. 6 - 6 SPACE (SPECIFY TYPE & KEYBOARD)	
2-41783	TYPE BAR, RIGHT (FOR REPAIRMEN)	
2-41784	TYPE BAR, LEFT (FOR REPAIRMEN)	
2-41786	TYPE BAR DEAD KEY NOT OFFSET ASSEMBLED WITH TYPE (SPECIFY TYPE & KEYBOARD)	
2-41787	TYPE BAR ASSEMBLED WITH TYPE (SPECIFY TYPE & KEYBOARD)	
2-41788	TYPE BAR DEAD KEY OFFSET ASSEMBLED WITH TYPE No. 8 - 8 SPACE (SPECIFY TYPE & KEYBOARD)	
2-41789	TYPE BAR DEAD KEY OFFSET ASSEMBLED WITH TYPE No. 10 - 10 SPACE (SPECIFY TYPE & KEYBOARD)	
2-41790	TYPE BAR DEAD KEY OFFSET ASSEMBLED WITH TYPE No. 12 - 12 SPACE (SPECIFY TYPE & KEYBOARD)	
2-41799	TYPE BAR GUIDE	
2-41808	SHIFT LEVER SHAFT	
2-41829	SHIFT LOCK LATCH STRIKE, LEFT - 44 KEY MACHINE	
2-42007	CARRIAGE SPRING STUD	
2-42033	CARRIAGE TAPE ASSEMBLED - 11" TO 20" CARRIAGES	
2-42035	CARRIAGE TAPE ASSEMBLED - 27" CARRIAGE	
2-42036	CARRIAGE TAPE ASSEMBLED - 32" CARRIAGE	
2-42065	CARRIAGE TENSION SPRING	
2-42070	SPRING DRUM DETENT RATCHET	
2-42073	SPRING DRUM ARBOR ASSEMBLED (O.S. - SUP. BY 2-53712)	
2-42118	BACK SPACE LEVER UP STOP RUBBER - 44 KEY MACHINE	
2-42310	RIBBON SPOOL SHAFT PINION	
2-42338	RIBBON CASE RIGHT, ASSEMBLED - $\frac{1}{2}$ " RIBBON	
2-42339	RIBBON CASE LEFT, ASSEMBLED - $\frac{1}{2}$ " RIBBON	
2-42343	RIBBON GUARD	
2-42352	TABULATOR KEY SHAFT	
2-42353	TABULATOR BELL CRANK SHAFT (O.S. - SUP. BY 2-54179)	
2-42354	TABULATOR CLEAR KEY CONNECTING LINK	
2-42354	TABULATOR SET KEY CONNECTING LINK	
2-42356	TABULATOR STOP SET BLADE	
2-42372	TABULATOR SET KEY BELL CRANK ASSEMBLED	
2-42373	TABULATOR CLEAR KEY BELL CRANK ASSEMBLED	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-42380	TABULATOR BLADE RETAINING WIRE	
2-42382	TABULATOR FRICTION BAIL COMPLETE	
2-42383	TABULATOR FRICTION BAIL ARM	
2-42413	TABULATOR BELL CRANK ASSEMBLED, RIGHT - 10 KEY TABULATOR	
2-42414	TABULATOR BELL CRANK ASSEMBLED, LEFT	
2-42431	TABULATOR STOP CLEAR BLADE	
2-42440	TABULATOR CONNECTING LINK	
2-42459	TABULATOR SET KEY ASSEMBLED	
2-42460	TABULATOR CLEAR KEY ASSEMBLED	
2-42461	TABULATOR KEY ASSEMBLED, POSITION # 1 - 10 KEY TABULATOR	
2-42462	TABULATOR KEY ASSEMBLED, POSITION # 2 - 10 KEY TABULATOR	
2-42463	TABULATOR KEY ASSEMBLED, POSITION # 3 - 10 KEY TABULATOR	
2-42464	TABULATOR KEY ASSEMBLED, POSITION # 4 - 10 KEY TABULATOR	
2-42465	TABULATOR KEY ASSEMBLED, POSITION # 5 - 10 KEY TABULATOR	
2-42466	TABULATOR KEY ASSEMBLED, POSITION # 6 - 10 KEY TABULATOR	
2-42467	TABULATOR KEY ASSEMBLED, POSITION # 7 - 10 KEY TABULATOR	
2-42468	TABULATOR KEY ASSEMBLED, POSITION # 8 - 10 KEY TABULATOR	
2-42469	TABULATOR KEY ASSEMBLED, POSITION # 9 - 10 KEY TABULATOR	
2-42470	TABULATOR KEY ASSEMBLED, POSITION #10 - 10 KEY TABULATOR	
2-42602	ESCAPEMENT LOOSE DOG RELEASE SHAFT	
2-42605	ESCAPEMENT LINK LOCK ARM	
2-42606	ESCAPEMENT LOOSE DOG SILENCER FRICTION SPRING	
2-42623	ESCAPEMENT LOOSE DOG SILENCER	
2-42629	ESCAPEMENT LINK SLEEVE	
2-42630	ESCAPEMENT LOOSE DOG GUIDE	
2-42752	ESCAPEMENT WHEEL ASSEMBLED - 6 SPACE (O.S. - SUP. BY 2-57218)	
2-42753	ESCAPEMENT WHEEL ASSEMBLED - 8 SPACE (O.S. - SUP. BY 2-57219)	
2-42754	ESCAPEMENT WHEEL ASSEMBLED - 9 1/3 SPACE (O.S. - SUP. BY 2-57220)	
2-42755	ESCAPEMENT WHEEL ASSEMBLED - 10 SPACE (O.S. - SUP. BY 2-57221)	
2-42757	ESCAPEMENT WHEEL ASSEMBLED - 14 SPACE (O.S. - SUP. BY 2-57222)	
2-42758	ESCAPEMENT WHEEL ASSEMBLED - 16 SPACE (O.S. - SUP. BY 2-57223)	
2-42763	ESCAPEMENT WHEEL ASSEMBLED - 12 SPACE (O.S. - SUP. BY 2-57225)	
2-42776	ESCAPEMENT ROCKER COMPLETE - 6, 8, 9 1/3, 10, 12 SPACE	
2-42777	ESCAPEMENT ROCKER COMPLETE - 14, 16 SPACE	
2-42778	ESCAPEMENT ROCKER ASSEMBLED - 6, 8, 9 1/3, 10, 12 SPACE	
2-42779	ESCAPEMENT ROCKER ASSEMBLED - 14, 16 SPACE	
2-42780	ESCAPEMENT LOOSE DOG, ASSEMBLED (O.S. - SUP. BY 2-57216)	
2-42867	TABULATOR FRICTION SPRING	
2-42874	VARIABLE LINE SPACE PLUNGER SPRING	
2-42880	PAPER SCALE ROLL SPRING - 11" TO 15" CARRIAGES	
2-42887	RIBBON CONTROL LEVER DETENT SPRING	
2-42891	PAPER SCALE ROLL SPRING - 20" TO 32" CARRIAGES	
2-42906	VARIABLE LINE SPACE CLUTCH BALL SPRING	
2-42919	PAPER SIDE GUIDE SPRING, ASSEMBLED	
2-42924	KEY LEVER SPRING - 42 AND 44 KEY MACHINES	
2-42927	PAPER SIDE GUIDE SILENCING SPRING	
2-42933	TABULATOR FRICTION BAIL SPRING (U.S. - SUP. BY 2-54169)	
2-42934	ESCAPEMENT LOOSE DOG CARRYING ARM SPRING	
2-43034	TABULATOR BLADE # 34 - 14 SPACE - 10 KEY TABULATOR	
2-43035	TABULATOR BLADE # 35 - 14 SPACE - 10 KEY TABULATOR	
2-43036	TABULATOR BLADE # 36 - 14 SPACE - 10 KEY TABULATOR	
2-43037	TABULATOR BLADE # 37 - 14 SPACE - 10 KEY TABULATOR	
2-43038	TABULATOR BLADE # 38 - 14 SPACE - 10 KEY TABULATOR	
2-43039	TABULATOR BLADE # 39 - 14 SPACE - 10 KEY TABULATOR	
2-43040	TABULATOR BLADE # 40 - 14 SPACE - 10 KEY TABULATOR	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-43071	TABULATOR BLADE # 71 - 14, 16 SPACE - 10 KEY TABULATOR	
2-43072	TABULATOR BLADE # 72 - 14, 16 SPACE - 10 KEY TABULATOR	
2-43073	TABULATOR BLADE # 73 - 14 AND 16 SPACE - 10 KEY TABULATOR	
2-43074	TABULATOR BLADE # 74 - 16 SPACE - 10 KEY TABULATOR	
2-43075	TABULATOR BLADE # 75 - 16 SPACE - 10 KEY TABULATOR	
2-43076	TABULATOR BLADE # 76 - 16 SPACE - 10 KEY TABULATOR	
2-43077	TABULATOR BLADE # 77 - 16 SPACE - 10 KEY TABULATOR	
2-43078	TABULATOR BLADE # 78 - 16 SPACE - 10 KEY TABULATOR	
2-43079	TABULATOR BLADE # 79 - 16 SPACE - 10 KEY TABULATOR	
2-43080	TABULATOR BLADE # 80 - 16 SPACE - 10 KEY TABULATOR	
2-43081	TABULATOR BLADE # 81 - 14 AND 16 SPACE - 1 KEY TAB (O.S. - SUP. BY 2-48601)	
2-43704	BELL	
2-43935	LINE LOCK UNIVERSAL BAR SPRING ANCHOR	
2-43935	MARGIN RELEASE KEY LEVER SPRING ANCHOR	
2-43935	RIBBON UNIVERSAL BAR SPRING ANCHOR - 42 AND 44 KEY MACHINES	
2-43936	TYPE BAR DEAD KEY OFFSET ASSEM. WITH TYPE No. 9 1/3 - 9 1/3 SPACE (SPECIFY TYPE & KEYBOARD)	
2-43937	TYPE BAR DEAD KEY OFFSET ASSEMBLED WITH TYPE No. 14 - 14 SPACE (SPECIFY TYPE & KEYBOARD)	
2-43938	TYPE BAR DEAD KEY OFFSET ASSEMBLED WITH TYPE No. 16 - 16 SPACE (SPECIFY TYPE & KEYBOARD)	
2-43943	TYPE BAR CUSHION ASSEMBLED	
2-45036	VARIABLE LINE SPACE COVER	
2-45040	VARIABLE LINE SPACE RATCHET, 30 TOOTH	
2-45054	PLATEN ROLL KNOB, RIGHT, LOCKING SCREW	
2-45122	VARIABLE LINE SPACE CLUTCH DOG	
2-45135	LINE SPACE PAWL - 35, 37, 42 AND 52 TEETH	
2-45136	LINE SPACE PAWL (SPECIFY TEETH)	
2-45137	LINE SPACE LEVER ASSEMBLED	
2-45139	LINE SPACE RATCHET DETENT ARM COMPLETE (SPECIFY TEETH)	
2-45145	LINE SPACE LEVER ASSEMBLED (SPECIAL UPRIGHT)	
2-45152	PAPER SCALE ROLL COMPLETE - 20" TO 32" CARRIAGES	
2-45192	PAPER FEED ROLL FRONT, ASSEMBLED (CORK - SPECIAL EQUIPMENT)	
2-45193	PAPER FEED ROLL REAR, ASSEMBLED (CORK - SPECIAL EQUIPMENT)	
2-45199	PAPER FEED ROLL SHAFT, FRONT	
2-45324	PAPER SCALE ROLL COMPLETE - 11" TO 15" CARRIAGES	
2-45606	ALIGNING SCALE - 10 SPACE	
2-45607	ALIGNING SCALE - 12 SPACE	
2-45611	ALIGNING SCALE - 8 SPACE	
2-45613	ALIGNING SCALE - 16 SPACE	
2-45646	PAPER SCALE ROLL, COMPLETE - 20" TO 32" CARRIAGES (CORK - SPECIAL EQUIPMENT)	
2-45649	PAPER SCALE ROLL, COMPLETE - 11" TO 15" CARRIAGES (CORK - SPECIAL EQUIPMENT)	
2-45800	ALIGNING SCALE - 14 SPACE	
2-45886	ALIGNING SCALE - 9 1/3 SPACE	
2-45887	ALIGNING SCALE - 10 SPACE (LAND OFFICE - SPECIAL EQUIPMENT)	
2-45888	ALIGNING SCALE - 12 SPACE (LAND OFFICE - SPECIAL EQUIPMENT)	
2-45950	ALIGNING SCALE - 6 SPACE	
2-46341	PAPER FEED ROLL SHAFT, REAR	
2-46483	PAPER FEED ROLL REAR, ASSEMBLED	
2-46521	RIBBON REVERSE PLUNGER	
2-46530	ESCAPEMENT LOOSE DOG RELEASE COMPLETE	
2-46536	RIBBON REVERSE CAM	
2-46537	RIBBON DRIVE GEAR PINION	
2-46537	RIBBON DRIVING GEAR, LEFT	
2-46538	RIBBON DRIVING GEAR, RIGHT	
2-46569	RIBBON ACTUATOR ARM	
2-46570	RIBBON CARRIER ASSEMBLED - 1/2" RIBBON	
2-46573	RIBBON CARRIER ASSEMBLED - 9/16" RIBBON	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-46588	RIBBON CASE RIGHT, ASSEMBLED - 9/16" RIBBON	
2-46589	RIBBON CASE LEFT, ASSEMBLED - 9/16" RIBBON	
2-46600	RIBBON DRIVE BALL CLUTCH REAR, ASSEMBLED	
2-46601	SPRING DRUM PINION (BALL CLUTCH)	
2-46602	RIBBON ACTUATOR ARM UP STOP	
2-46612	RIBBON SPOOL DISC RIGHT, ASSEMBLED	
2-46613	RIBBON SPOOL DISC LEFT, ASSEMBLED	
2-47120	LINE SPACE RATCHET - 20 TOOTH	
2-47121	LINE SPACE RATCHET - 21 TOOTH	
2-47122	LINE SPACE RATCHET - 22 TOOTH	
2-47123	LINE SPACE RATCHET - 23 TOOTH	
2-47125	LINE SPACE RATCHET - 25 TOOTH	
2-47126	LINE SPACE RATCHET - 26 TOOTH	
2-47127	LINE SPACE RATCHET - 27 TOOTH	
2-47128	LINE SPACE RATCHET - 28 TOOTH	
2-47129	LINE SPACE RATCHET - 29 TOOTH	
2-47131	LINE SPACE RATCHET - 31 TOOTH	
2-47132	LINE SPACE RATCHET - 32 TOOTH	
2-47133	LINE SPACE RATCHET - 33 TOOTH	
2-47134	LINE SPACE RATCHET - 34 TOOTH	
2-47135	LINE SPACE RATCHET - 35 TOOTH	
2-47136	LINE SPACE RATCHET - 36 TOOTH	
2-47137	LINE SPACE RATCHET - 37 TOOTH	
2-47139	LINE SPACE RATCHET - 39 TOOTH	
2-47140	LINE SPACE RATCHET - 40 TOOTH	
2-47141	LINE SPACE RATCHET - 41 TOOTH	
2-47142	LINE SPACE RATCHET - 42 TOOTH	
2-47144	LINE SPACE RATCHET - 44 TOOTH	
2-47145	LINE SPACE RATCHET - 45 TOOTH	
2-47151	LINE SPACE RATCHET - 50 TOOTH	
2-47152	LINE SPACE RATCHET - 51 TOOTH	
2-47157	LINE SPACE RATCHET - 57 TOOTH	
2-47158	LINE SPACE RATCHET - 58 TOOTH	
2-47160	LINE SPACE RATCHET - 60 TOOTH	
2-47165	LINE SPACE RATCHET - 65 TOOTH	
2-47240	LINE SPACE PAWL - 20 TOOTH	
2-47241	LINE SPACE PAWL - 21 TOOTH	
2-47242	LINE SPACE PAWL - 22 TOOTH	
2-47243	LINE SPACE PAWL - 23 TOOTH	
2-47245	LINE SPACE PAWL - 25 TOOTH	
2-47246	LINE SPACE PAWL - 26 AND 36 TEETH	
2-47247	LINE SPACE PAWL - 27 TOOTH	
2-47248	LINE SPACE PAWL - 28 TOOTH	
2-47249	LINE SPACE PAWL - 29 TOOTH	
2-47251	LINE SPACE PAWL - 31 TOOTH	
2-47252	LINE SPACE PAWL - 32 TOOTH	
2-47253	LINE SPACE PAWL - 33 TOOTH	
2-47259	LINE SPACE PAWL - 34, 39 AND 44 TEETH	
2-47260	LINE SPACE PAWL - 40 AND 50 TEETH	
2-47261	LINE SPACE PAWL - 41 TOOTH	
2-47265	LINE SPACE PAWL - 45 AND 50 TEETH	
2-47277	LINE SPACE PAWL - 57 TOOTH	
2-47278	LINE SPACE PAWL - 58 TOOTH	
2-47280	LINE SPACE PAWL - 60 TOOTH	
2-47285	LINE SPACE PAWL - 65 TOOTH	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-47315	LINE SPACE REGULATOR - 35 TOOTH (O.S. - SUP. BY 2-58735)	
2-47316	LINE SPACE REGULATOR - 36 TOOTH (O.S. - SUP. BY 2-58736)	
2-48013	ESCAPEMENT LOOSE DOG CARRYING ARM SCREW	
2-48045	SHIFT TOGGLE CUSHION ECCENTRIC SCREW	
2-48054	ALIGNING SCALE BRACKET LOWER SCREW	
2-48062	SPACE KEY PUSH LINK ECCENTRIC SCREW	
2-48064	KEY LEVER FULCRUM WIRE END SCREW	
2-48064	TYPE BAR BELL CRANK FULCRUM WIRE END SCREW	
2-48072	CARRIAGE SUPPORT CHANNEL SIDE SCREW - 27" AND 32" CARRIAGES	
2-48072	FRAME BACK SCREW	
2-48073	PAPER SIDE GUIDE SPRING SCREW	
2-48096	ESCAPEMENT LOOSE DOG CARRYING ARM SPRING SCREW	
2-48101	FRONT PANEL SCREW	
2-48108	TYPE BAR SEGMENT BALL RACE BLOCK ADJUSTING SCREW, LONG	
2-48500	TABULATOR STOP	
2-48501	TABULATOR STOP DETENT ROD - 11" CARRIAGE (O.S. - SUP. BY 2-54171)	
2-48502	TABULATOR STOP DETENT ROD - 13" CARRIAGE (O.S. - SUP. BY 2-54172)	
2-48503	TABULATOR STOP DETENT ROD - 15" CARRIAGE (O.S. - SUP. BY 2-54173)	
2-48504	TABULATOR STOP DETENT ROD - 20" CARRIAGE (O.S. - SUP. BY 2-54174)	
2-48506	TABULATOR STOP DETENT ROD - 27" CARRIAGE (O.S. - SUP. BY 2-54176)	
2-48507	TABULATOR STOP DETENT ROD - 32" CARRIAGE (O.S. - SUP. BY 2-54177)	
2-48601	TABULATOR BLADE #601 - 1 KEY TABULATOR	
2-48611	TABULATOR BLADE #611 - 8, 9 1/3, 10, 12 SPACE - 10 KEY TABULATOR	
2-48612	TABULATOR BLADE #612 - 9 1/3, 10 SPACE - 10 KEY TABULATOR	
2-48613	TABULATOR BLADE #613 - 9 1/3, 10 SPACE - 10 KEY TABULATOR	
2-48614	TABULATOR BLADE #614 - 9 1/3, 10 SPACE - 10 KEY TABULATOR	
2-48615	TABULATOR BLADE #615 - 9 1/3, 10 SPACE - 10 KEY TABULATOR	
2-48616	TABULATOR BLADE #616 - 10 SPACE - 10 KEY TABULATOR	
2-48617	TABULATOR BLADE #617 - 10 SPACE - 10 KEY TABULATOR	
2-48618	TABULATOR BLADE #618 - 10 SPACE - 10 KEY TABULATOR	
2-48619	TABULATOR BLADE #619 - 10 SPACE - 10 KEY TABULATOR	
2-48620	TABULATOR BLADE #620 - 10 SPACE - 10 KEY TABULATOR	
2-48622	TABULATOR BLADE #622 - 12 SPACE - 10 KEY TABULATOR	
2-48623	TABULATOR BLADE #623 - 12 SPACE - 10 KEY TABULATOR	
2-48624	TABULATOR BLADE #624 - 12 SPACE - 10 KEY TABULATOR	
2-48625	TABULATOR BLADE #625 - 12 SPACE - 10 KEY TABULATOR	
2-48626	TABULATOR BLADE #626 - 12 SPACE - 10 KEY TABULATOR	
2-48627	TABULATOR BLADE #627 - 12 SPACE - 10 KEY TABULATOR	
2-48628	TABULATOR BLADE #628 - 12 SPACE - 10 KEY TABULATOR	
2-48629	TABULATOR BLADE #629 - 12 SPACE - 10 KEY TABULATOR	
2-48630	TABULATOR BLADE #630 - 12 SPACE - 10 KEY TABULATOR	
2-48642	TABULATOR BLADE #642 - 8 SPACE - 10 KEY TABULATOR	
2-48643	TABULATOR BLADE #643 - 8 SPACE - 10 KEY TABULATOR	
2-48644	TABULATOR BLADE #644 - 8 SPACE - 10 KEY TABULATOR	
2-48645	TABULATOR BLADE #645 - 8 SPACE - 10 KEY TABULATOR	
2-48646	TABULATOR BLADE #646 - 8 SPACE - 10 KEY TABULATOR	
2-48647	TABULATOR BLADE #647 - 8 SPACE - 10 KEY TABULATOR	
2-48648	TABULATOR BLADE #648 - 8 SPACE - 10 KEY TABULATOR	
2-48649	TABULATOR BLADE #649 - 8 SPACE - 10 KEY TABULATOR	
2-48650	TABULATOR BLADE #650 - 8 SPACE - 10 KEY TABULATOR	
2-48666	TABULATOR BLADE #666 - 9 1/3 SPACE - 10 KEY TABULATOR	
2-48667	TABULATOR BLADE #667 - 9 1/3 SPACE - 10 KEY TABULATOR	
2-48668	TABULATOR BLADE #668 - 9 1/3 SPACE - 10 KEY TABULATOR	
2-48669	TABULATOR BLADE #669 - 9 1/3 SPACE - 10 KEY TABULATOR	
2-48670	TABULATOR BLADE #670 - 9 1/3 SPACE - 10 KEY TABULATOR	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-48806	CARRIAGE END STOP SCREW WASHER	
2-48814	TABULATOR KEY SPACER - 1 KEY TABULATOR	
2-50004	BACK SPACE PAWL RETAINER	
2-50005	SPECIAL RETAINER - USED IN PLACE OF 2-57034 WHEN NECESSARY	
2-50006	BACK SPACE ARM LEVER RETAINING RING	
2-50006	BACK SPACE PAWL LEVER RETAINING RING	
2-50006	KEY TENSION REGULATOR DETENT RETAINING RING	
2-50006	KEY TENSION REGULATOR LEVER RETAINING RING	
2-50006	MARGIN SET BELL CRANK RETAINING RING	
2-50006	RIBBON CONTROL LEVER LINK RETAINING RING	
2-50006	RIBBON LIFT PUSH LINK LOWER STUD RETAINING RING	
2-50006	SPRING DRUM DETENT PAWL RETAINING RING	
2-50006	TYPE BAR RESTORER LINK STUD UPPER AND LOWER RETAINING RING	
2-50020	FRAME SUPPORT - 27" AND 32" CARRIAGES	
2-51350	SIDE PLATE SUPPORT BRACKET (O.S. - SUP. BY 2-51430)	
2-51351	FRAME BASE ASSEMBLED	
2-51354	SIDE PLATE, LEFT, ASSEMBLED (O.S.)	
2-51355	SIDE PLATE, RIGHT, ASSEMBLED (O.S. - SUP. BY 2-51503)	
2-51356	TABULATOR BLADE LOWER COMB & ESCAPEMENT OPERATING BAIL BRACKET, ASSEMBLED - 14 AND 16 SPACE - 10 KEY TAB	
2-51356	TABULATOR BLADE LOWER COMB & ESCAPEMENT OPERATING BAIL BRACKET, ASSEMBLED - 14 AND 16 SPACE - 1 KEY TAB (O.S. - SUP. BY 2-54189)	
2-51356	TABULATOR BLADE LOWER COMB & ESCAPEMENT OPERATING BAIL BRACKET, ASSEMBLED - 6, 8, 9 1/3, 10 AND 12 SPACE - 10 KEY TAB (O.S. - SUP. BY 2-54170)	
2-51357	SIDE COVER, LEFT, ASSEMBLED - 11" TO 20" CARRIAGES (O.S. - SUP. BY 2-51459)	
2-51358	CARRIAGE END COVER SCREW (O.S.)	
2-51359	SIDE COVER, RIGHT, ASSEMBLED - 11" TO 20" CARRIAGES (O.S. - SUP. BY 2-51460)	
2-51360	BASE SCREW	
2-51361	TOP COVER ASSEMBLED (O.S. - SUP. BY 2-51447)	
2-51363	REAR COVER ASSEMBLED	
2-51364	TOP COVER DETENT SPRING (O.S.)	
2-51365	FRONT PANEL - 1 KEY TABULATOR (O.S. - SUP. BY 2-51504)	
2-51366	CARRIAGE END COVER, LEFT (O.S. - SUP. BY 2-51501)	
2-51367	CARRIAGE END COVER, RIGHT (O.S. - SUP. BY 2-51502)	
2-51370	PLATEN LOCK COVER, LEFT	
2-51371	PLATEN LOCK COVER, RIGHT	
2-51376	BASE SCREW WASHER	
2-51380	BASE SCREW (O.S. - SUP. BY 2-51360)	
2-51383	NAME PLATE	
2-51385	FRONT PANEL - 10 KEY TABULATOR (O.S. - SUP. BY 2-51505)	
2-51395	FRAME BACK COMPLETE	
2-51396	PAPER SIDE GUIDE (O.S. - SUP. BY 2-51473)	
2-51401	PAPER SIDE GUIDE WAY ROD - 11" CARRIAGE	
2-51402	PAPER SIDE GUIDE WAY ROD - 13" CARRIAGE	
2-51403	PAPER SIDE GUIDE WAY ROD - 15" CARRIAGE	
2-51406	TOP COVER APRON, LEFT (O.S. - SUP. BY 2-51457)	
2-51407	TOP COVER APRON, RIGHT (O.S. - SUP. BY 2-51458)	
2-51409	TOP COVER STUD GROMMET (O.S.)	
2-51410	TOP COVER ANGLE PLATE GROMMET (O.S.)	
2-51411	SIDE PLATE GROMMET	
2-51412	SIDE AND REAR COVER GROMMET (O.S.)	
2-51419	SIDE COVER, LEFT, ASSEMBLED, - 27" AND 32" CARRIAGES (O.S. - SUP. BY 2-51461)	
2-51420	SIDE COVER, RIGHT, ASSEMBLED - 27" AND 32" CARRIAGES (O.S. - SUP. BY 2-51462)	
2-51421	PAPER SIDE GUIDE WAY ROD - 20" CARRIAGE	
2-51423	PAPER SIDE GUIDE WAY ROD - 27" CARRIAGE	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-51424	PAPER SIDE GUIDE WAY ROD - 32" CARRIAGE	
2-51430	SIDE PLATE SUPPORT BRACKET	
2-51431	PAPER TABLE ASSEMBLED - 11" CARRIAGE (SPECIFY SPACING) (O.S. - SUP. BY 2-51491)	
2-51432	PAPER TABLE ASSEMBLED - 13" CARRIAGE (SPECIFY SPACING) (O.S. - SUP. BY 2-51492)	
2-51433	PAPER TABLE ASSEMBLED - 15" CARRIAGE (SPECIFY SPACING) (O.S. - SUP. BY 2-51493)	
2-51434	PAPER TABLE ASSEMBLED - 20" CARRIAGE (SPECIFY SPACING) (O.S. - SUP. BY 2-51494)	
2-51436	PAPER TABLE ASSEMBLED - 27" CARRIAGE (SPECIFY SPACING) (O.S. - SUP. BY 2-51496)	
2-51437	PAPER TABLE ASSEMBLED - 32" CARRIAGE (SPECIFY SPACING) (O.S. - SUP. BY 2-51497)	
2-51438	SIDE PLATE LEFT, ASSEMBLED - 46 KEY MACHINE	
2-51438	SIDE PLATE LEFT, ASSEMBLED (O.S. 42 AND 44 KEY MACHINES) (SUP. BY 2-51472)	
2-51443	REAR COVER SCREW	
2-51445	SIDE COVER BRACKET, LEFT (O.S.)	
2-51446	SIDE COVER BRACKET, RIGHT (O.S.)	
2-51447	TOP COVER ASSEMBLED*	
2-51448	TOP COVER LATCH, LEFT, COMPLETE	
2-51449	TOP COVER LATCH, RIGHT, COMPLETE	
2-51457	TOP COVER APRON, LEFT	
2-51458	TOP COVER APRON, RIGHT	
2-51459	SIDE COVER, LEFT, ASSEMBLED - 11" TO 20" CARRIAGES	
2-51460	SIDE COVER, RIGHT, ASSEMBLED - 11" TO 20" CARRIAGES	
2-51461	SIDE COVER, LEFT, ASSEMBLED, - 27" AND 32" CARRIAGES	
2-51462	SIDE COVER, RIGHT, ASSEMBLED - 27" AND 32" CARRIAGES	
2-51464	TOP COVER LATCH SCREW	
2-51472	SIDE PLATE LEFT, ASSEMBLED - 42 AND 44 KEY MACHINES	
2-51473	PAPER SIDE GUIDE	
2-51491	PAPER TABLE ASSEMBLED - 11" CARRIAGE (SPECIFY SPACING)	
2-51492	PAPER TABLE ASSEMBLED - 13" CARRIAGE (SPECIFY SPACING)	
2-51493	PAPER TABLE ASSEMBLED - 15" CARRIAGE (SPECIFY SPACING)	
2-51494	PAPER TABLE ASSEMBLED - 20" CARRIAGE (SPECIFY SPACING)	
2-51496	PAPER TABLE ASSEMBLED - 27" CARRIAGE (SPECIFY SPACING)	
2-51497	PAPER TABLE ASSEMBLED - 32" CARRIAGE (SPECIFY SPACING)	
2-51499	MARGIN STOP RACK BRACKET SCREW - 15" TO 32" CARRIAGES	
2-51499	PAPER TABLE REAR COVER SUPPORT SCREW - 32" CARRIAGE	
2-51501	CARRIAGE END COVER, LEFT	
2-51502	CARRIAGE END COVER, RIGHT	
2-51503	SIDE PLATE, RIGHT, ASSEMBLED	
2-51504	FRONT PANEL - 1 KEY TABULATOR	
2-51505	FRONT PANEL - 10 KEY TABULATOR	
2-51507	FRAME BACK, ASSEM., COMPLETE WITH ESCAPEMENT & BACK SPACE PAWL - 1 KEY TAB (SPECIFY SPACING)	
2-51801	KEY LEVER AND TYPE BAR BELL CRANK BRACKET - 46 KEY MACHINE	
2-51801	KEY LEVER AND TYPE BAR BELL CRANK BRACKET - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-51943)	
2-51807	KEY LEVER FULCRUM WIRE	
2-51807	TYPE BAR BELL CRANK FULCRUM WIRE	
2-51808	KEY LEVER COMB - 42 AND 46 KEY MACHINES	
2-51809	KEY LEVER COMB - 44 KEY MACHINE	
2-51811	SPACE KEY ASSEMBLED	
2-51816	KEY LEVER ASSEMBLED # 1 - 42 AND 44 KEY MACHINES	
2-51817	KEY LEVER ASSEMBLED # 2 - 42 AND 44 KEY MACHINES	
2-51818	KEY LEVER ASSEMBLED # 3 - 42 AND 44 KEY MACHINES	
2-51819	KEY LEVER ASSEMBLED # 4 - 42 AND 44 KEY MACHINES	
2-51820	KEY LEVER ASSEMBLED # 5 - 42 AND 44 KEY MACHINES	
2-51821	KEY LEVER ASSEMBLED # 6 - 42 AND 44 KEY MACHINES	
2-51822	KEY LEVER ASSEMBLED # 7 - 42 AND 44 KEY MACHINES	
2-51823	KEY LEVER ASSEMBLED # 8 - 42 AND 44 KEY MACHINES	
2-51824	KEY LEVER ASSEMBLED # 9 - 42 AND 44 KEY MACHINES	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-51825	KEY LEVER ASSEMBLED #10 - 42 AND 44 KEY MACHINES	_____
2-51826	KEY LEVER ASSEMBLED #11 - 42 AND 44 KEY MACHINES	_____
2-51827	KEY LEVER ASSEMBLED #12 - 42 AND 44 KEY MACHINES	_____
2-51828	KEY LEVER ASSEMBLED #13 - 42 AND 44 KEY MACHINES	_____
2-51829	KEY LEVER ASSEMBLED #14 - 42 AND 44 KEY MACHINES	_____
2-51830	KEY LEVER ASSEMBLED #15 - 42 AND 44 KEY MACHINES	_____
2-51831	KEY LEVER ASSEMBLED #16 - 42 AND 44 KEY MACHINES	_____
2-51832	KEY LEVER ASSEMBLED #17 - 42 AND 44 KEY MACHINES	_____
2-51833	KEY LEVER ASSEMBLED #18 - 42 AND 44 KEY MACHINES	_____
2-51834	KEY LEVER ASSEMBLED #19 - 42 AND 44 KEY MACHINES	_____
2-51835	KEY LEVER ASSEMBLED #20 - 42 AND 44 KEY MACHINES	_____
2-51836	KEY LEVER ASSEMBLED #21 - 42 AND 44 KEY MACHINES	_____
2-51837	KEY LEVER ASSEMBLED #22 - 42 AND 44 KEY MACHINES	_____
2-51838	KEY LEVER ASSEMBLED #23 - 42 AND 44 KEY MACHINES	_____
2-51839	KEY LEVER ASSEMBLED #24 - 42 AND 44 KEY MACHINES	_____
2-51840	KEY LEVER ASSEMBLED #25 - 42 AND 44 KEY MACHINES	_____
2-51841	KEY LEVER ASSEMBLED #26 - 42 AND 44 KEY MACHINES	_____
2-51842	KEY LEVER ASSEMBLED #27 - 42 AND 44 KEY MACHINES	_____
2-51843	KEY LEVER ASSEMBLED #28 - 42 AND 44 KEY MACHINES	_____
2-51844	KEY LEVER ASSEMBLED #29 - 42 AND 44 KEY MACHINES	_____
2-51845	KEY LEVER ASSEMBLED #30 - 42 AND 44 KEY MACHINES	_____
2-51846	KEY LEVER ASSEMBLED #31 - 42 AND 44 KEY MACHINES	_____
2-51847	KEY LEVER ASSEMBLED #32 - 42 AND 44 KEY MACHINES	_____
2-51848	KEY LEVER ASSEMBLED #33 - 42 AND 44 KEY MACHINES	_____
2-51849	KEY LEVER ASSEMBLED #34 - 42 AND 44 KEY MACHINES	_____
2-51850	KEY LEVER ASSEMBLED #35 - 42 AND 44 KEY MACHINES	_____
2-51851	KEY LEVER ASSEMBLED #36 - 42 AND 44 KEY MACHINES	_____
2-51852	KEY LEVER ASSEMBLED #37 - 42 AND 44 KEY MACHINES	_____
2-51853	KEY LEVER ASSEMBLED #38 - 42 AND 44 KEY MACHINES	_____
2-51854	KEY LEVER ASSEMBLED #39 - 42 AND 44 KEY MACHINES	_____
2-51855	KEY LEVER ASSEMBLED #40 - 42 AND 44 KEY MACHINES	_____
2-51856	KEY LEVER ASSEMBLED #41 - 42 AND 44 KEY MACHINES	_____
2-51857	KEY LEVER ASSEMBLED #42 - 42 AND 44 KEY MACHINES	_____
2-51858	KEY LEVER ASSEMBLED #40U - 44 KEY MACHINE	_____
2-51859	KEY LEVER ASSEMBLED #43U - 44 KEY MACHINE	_____
2-51861	KEY TENSION REGULATOR LEVER ASSEMBLED	_____
2-51863	KEY TENSION REGULATOR DETENT	_____
2-51866	SPACE KEY SPRING	_____
2-51867	SPACE BAR (GREEN)	_____
2-51868	KEY TENSION REGULATOR DETENT SPRING	_____
2-51870	KEY TENSION REGULATOR LEVER SLIDE SCREW - 42 AND 44 KEY MACHINES	_____
2-51871	KEY LEVER ASSEMBLED # 1V - 46 KEY MACHINE	_____
2-51872	KEY LEVER ASSEMBLED # 2V - 46 KEY MACHINE	_____
2-51873	KEY LEVER ASSEMBLED # 3V - 46 KEY MACHINE	_____
2-51874	KEY LEVER ASSEMBLED # 4V - 46 KEY MACHINE	_____
2-51875	KEY LEVER ASSEMBLED # 5V - 46 KEY MACHINE	_____
2-51876	KEY LEVER ASSEMBLED # 6V - 46 KEY MACHINE	_____
2-51877	KEY LEVER ASSEMBLED # 7V - 46 KEY MACHINE	_____
2-51878	KEY LEVER ASSEMBLED # 8V - 46 KEY MACHINE	_____
2-51879	KEY LEVER ASSEMBLED # 9V - 46 KEY MACHINE	_____
2-51880	KEY LEVER ASSEMBLED #10V - 46 KEY MACHINE	_____
2-51881	KEY LEVER ASSEMBLED #11V - 46 KEY MACHINE	_____
2-51882	KEY LEVER ASSEMBLED #12V - 46 KEY MACHINE	_____
2-51883	KEY LEVER ASSEMBLED #13V - 46 KEY MACHINE	_____
2-51884	KEY LEVER ASSEMBLED #14V - 46 KEY MACHINE	_____

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-51885	KEY LEVER ASSEMBLED #15V - 46 KEY MACHINE	
2-51886	KEY LEVER ASSEMBLED #16V - 46 KEY MACHINE	
2-51887	KEY LEVER ASSEMBLED #17V - 46 KEY MACHINE	
2-51888	KEY LEVER ASSEMBLED #18V - 46 KEY MACHINE	
2-51889	KEY LEVER ASSEMBLED #19V - 46 KEY MACHINE	
2-51890	KEY LEVER ASSEMBLED #20V - 46 KEY MACHINE	
2-51891	KEY LEVER ASSEMBLED #21V - 46 KEY MACHINE	
2-51892	KEY LEVER ASSEMBLED #22V - 46 KEY MACHINE	
2-51893	KEY LEVER ASSEMBLED #23V - 46 KEY MACHINE	
2-51894	KEY LEVER ASSEMBLED #24V - 46 KEY MACHINE	
2-51895	KEY LEVER ASSEMBLED #25V - 46 KEY MACHINE	
2-51896	KEY LEVER ASSEMBLED #26V - 46 KEY MACHINE	
2-51897	KEY LEVER ASSEMBLED #27V - 46 KEY MACHINE	
2-51898	KEY LEVER ASSEMBLED #28V - 46 KEY MACHINE	
2-51899	KEY LEVER ASSEMBLED #29V - 46 KEY MACHINE	
2-51900	KEY LEVER ASSEMBLED #30V - 46 KEY MACHINE	
2-51901	KEY LEVER ASSEMBLED #31V - 46 KEY MACHINE	
2-51902	KEY LEVER ASSEMBLED #32V - 46 KEY MACHINE	
2-51903	KEY LEVER ASSEMBLED #33V - 46 KEY MACHINE	
2-51904	KEY LEVER ASSEMBLED #34V - 46 KEY MACHINE	
2-51905	KEY LEVER ASSEMBLED #35V - 46 KEY MACHINE	
2-51906	KEY LEVER ASSEMBLED #36V - 46 KEY MACHINE	
2-51907	KEY LEVER ASSEMBLED #37V - 46 KEY MACHINE	
2-51908	KEY LEVER ASSEMBLED #38V - 46 KEY MACHINE	
2-51909	KEY LEVER ASSEMBLED #39V - 46 KEY MACHINE	
2-51910	KEY LEVER ASSEMBLED #40V - 46 KEY MACHINE	
2-51911	KEY LEVER ASSEMBLED #41V - 46 KEY MACHINE	
2-51912	KEY LEVER ASSEMBLED #42V - 46 KEY MACHINE	
2-51913	KEY LEVER ASSEMBLED #43V - 46 KEY MACHINE	
2-51914	KEY LEVER ASSEMBLED #44V - 46 KEY MACHINE	
2-51915	KEY LEVER ASSEMBLED #45V - 46 KEY MACHINE	
2-51916	KEY LEVER ASSEMBLED #46V - 46 KEY MACHINE	
2-51922	MOLDED KEY CAP - SPECIFY CHARACTER (GREEN) (O.S. - SUP. BY 2-52015)	
2-51923	SHIFT LEVER KEY CAP (GREEN) - 46 KEY MACHINE (O.S. - SUP. BY 2-52016)	
2-51927	MOLDED KEY CAP (SMALL SIZE, GREEN) FOR SPECIAL CHARACTERS (O.S. - SUP. BY 2-51967)	
2-51928	MOLDED KEY CAP (SMALL SIZE) BLANK (O.S. - SUP. BY 2-52017)	
2-51929	KEY LEVER UP STOP	
2-51930	KEY LEVER UP STOP CUSHION	
2-51932	SHIFT LEVER KEY CAP (GREEN) - 42 AND 44 KEY MACH. (O.S. - SUP. BY 2-51958)	
2-51933	TABULATOR KEY BAR SCREW	
2-51937	KEY LEVER UP STOP ASSEMBLED - 44 KEY MACHINE	
2-51938	DEAD KEY LEVER AND BELL CRANK SPRING - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52014)	
2-51938	DEAD KEY LEVER AND BELL CRANK SPRING - 46 KEY MACHINE	
2-51940	KEY LEVER BELL CRANK SPRING - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-42924)	
2-51940	KEY LEVER BELL CRANK SPRING - 46 KEY MACHINE	
2-51941	SPACE KEY SHAFT ARM BELL CRANK	
2-51943	KEY LEVER AND TYPE BAR BELL CRANK BRACKET - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-51952)	
2-51943	KEY LEVER AND TYPE BAR BELL CRANK BRACKET - 46 KEY MACHINE	
2-51944	KEY TENSION REGULATOR LEVER SLIDE ASSEMBLED - 42 AND 44 KEY MACHINES	
2-51945	KEY TENSION REGULATOR LEVER LINK ASSEMBLED - 42 AND 44 KEY MACHINES	
2-51946	KEY TENSION REGULATOR LEVER LINK BELL CRANK - 42 AND 44 KEY MACHINES	
2-51949	KEY LEVER AND TYPE BAR BELL CRANK SPRING ARM - 42 AND 44 KEY MACHINES	
2-51950	KEY LEVER AND TYPE BAR BELL CRANK SPRING ARM FULCRUM WIRE - 42 AND 44 KEY MACHINES	
2-51951	KEY LEVER AND TYPE BAR BELL CRANK SPRING ARM FULCRUM BRACKET - 42 AND 44 KEY MACHINES	
2-51952	KEY LEVER AND TYPE BAR BELL CRANK BRACKET - 42 AND 44 KEY MACHINES	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-51953	KEY TENSION REGULATOR LEVER SPRING - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-58118)	
2-51953	KEY TENSION REGULATOR LEVER SPRING - 46 KEY MACHINE	
2-5195	KEY TENSION SPRING HOOK, ASSEMBLED - 42 AND 44 KEY MACHINES (O.S.)	
2-51955	KEY TENSION SPRING HOOK ASSEMBLED - 46 KEY MACHINE	
2-51957	KEY LEVER KEY CAP (O.S. - SUP. BY 2-52015)	
2-51957	MARGIN RELEASE KEY CAP (DOMESTIC SPECIFY INSCRIPTION) 44-46 KEY MACH. (O.S. SUP. BY 2-52015)	
2-51957	MARGIN RELEASE KEY CAP (FOREIGN SPECIFY INSCRIPTION) 44-46 KEY MACH. (O.S. SUP. BY 2-52015)	
2-51957	SHIFT LOCK LEVER KEY CAP (GREEN) (O.S. - SUP. BY 2-52015)	
2-51958	BACK SPACE KEY CAP - 42 KEY MACHINE (O.S. - SUP. BY 2-52016)	
2-51958	SHIFT LEVER KEY CAP (GREEN) (O.S. - SUP. BY 2-52016)	
2-51959	BACK SPACE KEY CAP - 44 AND 46 KEY MACHINES (O.S. - SUP. BY 2-52017)	
2-51959	MARGIN SET KEY CAP (O.S. - SUP. BY 2-52017)	
2-51959	TABULATOR CLEAR KEY CAP (O.S. - SUP. BY 2-52017)	
2-51959	TABULATOR KEY CAP - 10 KEY TABULATOR (SPECIAL) (O.S. - SUP. BY 2-52017)	
2-51959	TABULATOR SET KEY CAP (O.S. - SUP. BY 2-52017)	
2-51959	TYPE BAR RESTORER KEY CAP (O.S. - SUP. BY 2-52017)	
2-51960	MARGIN RELEASE KEY CAP (DOMESTIC SPECIFY INSCRIPTION) 42 KEY MACHINE (O.S. SUP. BY 2-52018)	
2-51960	MARGIN RELEASE KEY CAP (FOREIGN SPECIFY INSCRIPTION) 42 KEY MACHINE (O.S. SUP. BY 2-52018)	
2-51967	MOLDED KEY CAP (SMALL SIZE) FOR SPECIAL CHARACTERS (O.S. - SUP. BY 2-52019)	
2-51968	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 1V	
2-51969	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 2V	
2-51970	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 3V	
2-51971	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 4V	
2-51972	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 5V	
2-51973	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 6V	
2-51974	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 7V	
2-51975	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 8V	
2-51976	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE # 9V	
2-51977	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #10V	
2-51978	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #11V	
2-51979	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #12V	
2-51980	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #13V	
2-51981	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #14V	
2-51982	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #15V	
2-51983	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #16V	
2-51984	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #17V	
2-51985	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #18V	
2-51986	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #19V	
2-51987	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #20V	
2-51988	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #21V	
2-51989	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #22V	
2-51990	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #23V	
2-51991	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #24V	
2-51992	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #25V	
2-51993	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #26V	
2-51994	KEY LEVERS, FOURTH ROW REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #27V	
2-51995	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #28V	
2-51996	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #29V	
2-51997	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #30V	
2-51998	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #31V	
2-51999	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #32V	
2-52000	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #33V	
2-52001	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #34V	
2-52002	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #35V	
2-52003	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #36V	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-52004	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #37V	
2-52005	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #38V	
2-52006	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #39V	
2-52007	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #40V	
2-52008	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #41V	
2-52009	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #42V	
2-52010	KEY LEVERS, FOURTH ROW, REAR, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #43V	
2-52011	KEY LEVERS, FIRST ROW, FRONT, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #44V	
2-52012	KEY LEVERS, THIRD ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #45V	
2-52013	KEY LEVERS, SECOND ROW, ASSEMBLED (MOLDED CAP STYLE) 46 KEY MACHINE #46V	
2-52014	KEY LEVER SPRING (DEAD KEYS) 42 AND 44 KEY MACHINES	
2-52015	KEY LEVER KEY CAP - SPECIFY CHARACTER (GREEN)	
2-52015	MARGIN RELEASE KEY CAP (DOMESTIC SPECIFY INSCRIPTION) 44 AND 46 KEY MACHINES	
2-52015	MARGIN RELEASE KEY CAP (FOREIGN SPECIFY INSCRIPTION) 44 AND 46 KEY MACHINES	
2-52015	SHIFT LOCK LEVER KEY CAP (GREEN)	
2-52016	BACK SPACE KEY CAP - 42 KEY MACHINE	
2-52016	SHIFT LEVER KEY CAP (GREEN)	
2-52017	BACK SPACE KEY CAP - 44 AND 46 KEY MACHINES	
2-52017	MARGIN SET KEY CAP (O.S.)	
2-52017	MOLDED KEY CAPS (SMALL SIZE) BLANK	
2-52017	TABULATOR CLEAR KEY CAP	
2-52017	TABULATOR KEY CAP - 10 KEY TABULATOR (SPECIAL)	
2-52017	TABULATOR SET KEY CAP	
2-52017	TYPE BAR RESTORER KEY CAP	
2-52018	MARGIN RELEASE KEY CAP (DOMESTIC SPECIFY INSCRIPTION) 42 KEY MACHINE	
2-52018	MARGIN RELEASE KEY CAP (FOREIGN SPECIFY INSCRIPTION) 42 KEY MACHINE	
2-52019	MOLDED KEY CAP (SMALL SIZE, GREEN) FOR SPECIAL CHARACTERS	
2-52020	SPACE KEY UP STOP FELT	
2-52021	KEY TENSION REGULATOR COLOR MARKER	
2-52022	SPACE BAR SCREW (O.S. - SUP. BY 2-52023)	
2-52023	SPACE BAR SCREW	
2-52300	TYPE BAR UNIVERSAL BAR OSCILLATOR ADJUSTING BUSHING	
2-52305	TYPE BAR UNIVERSAL BAR OSCILLATOR ASSEMBLED (O.S. - SUP. BY 2-52411)	
2-52348	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 1 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52661)	
2-52349	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 2 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52662)	
2-52350	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 3 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52663)	
2-52351	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 4 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52664)	
2-52352	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 5 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52665)	
2-52353	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 6 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52666)	
2-52354	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 7 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52667)	
2-52355	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 8 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52668)	
2-52356	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 9 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52669)	
2-52357	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #10 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52670)	
2-52358	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #11 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52671)	
2-52359	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #12 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52672)	
2-52360	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #13 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52673)	
2-52361	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #14 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52674)	
2-52362	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #15 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52675)	
2-52363	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #16 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52676)	
2-52364	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #17 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52677)	
2-52365	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #18 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52678)	
2-52366	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #19 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52679)	
2-52367	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #20 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52680)	
2-52368	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #21 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52681)	
2-52369	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #22 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52682)	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-52370	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #23 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52683)	_____
2-52371	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #24 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52684)	_____
2-52372	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #25 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52685)	_____
2-52373	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #26 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52686)	_____
2-52374	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #27 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52687)	_____
2-52375	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #28 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52688)	_____
2-52376	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #29 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52689)	_____
2-52377	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #30 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52690)	_____
2-52378	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #31 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52691)	_____
2-52379	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #32 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52692)	_____
2-52380	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #33 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52693)	_____
2-52381	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #34 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52694)	_____
2-52382	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #35 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52695)	_____
2-52383	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #36 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52696)	_____
2-52384	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #37 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52697)	_____
2-52385	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #38 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52698)	_____
2-52386	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #39 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52699)	_____
2-52387	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #40 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52700)	_____
2-52388	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #41 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52701)	_____
2-52389	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #42 - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-52702)	_____
2-52391	TYPE BAR RESTORER (O.S. - SUP. BY 2-52422)	_____
2-52397	TYPE BAR RESTORER KEY LEVER, ASSEMBLED	_____
2-52401	TYPE BAR UNIVERSAL BAR COMPLETE (O.S.)	_____
2-52402	TYPE BAR RESTORER SPRING	_____
2-52405	TYPE BAR SEGMENT #T3 - 42 KEY MACHINE - 40, 41 AND 42ND SLOTS NON-RADIAL	_____
2-52406	TYPE BAR SEGMENT #U - 42 AND 44 KEY MACHINES	_____
2-52407	TYPE BAR SEGMENT #U1 - 44 KEY MACHINE - 43RD SLOT NON-RADIAL	_____
2-52408	TYPE BAR SEGMENT #V - 46 KEY MACHINE	_____
2-52409	TYPE BAR RESTORER KEY CAP (GREEN) 1 KEY TABULATOR (O.S. - SUP. BY 2-51959)	_____
2-52411	TYPE BAR UNIVERSAL BAR OSCILLATOR ASSEMBLED	_____
2-52419	TYPE BAR UNIVERSAL BAR OSCILLATOR BRACKET ASSEMBLED	_____
2-52420	TYPE BAR UNIVERSAL BAR OSCILLATOR SPRING	_____
2-52422	TYPE BAR RESTORER	_____
2-52424	TYPE BAR SEGMENT #V2 - 46 KEY MACH. - 45TH & 46TH SLOTS NON-RADIAL, 1 TO 44 INCLUSIVE RADIAL	_____
2-52425	TYPE BAR SEGMENT #V1 - 46 KEY MACHINE - 46TH SLOT NON-RADIAL, 1 TO 45 INCLUSIVE RADIAL	_____
2-52426	TYPE BAR SEGMENT #105 - 42 KEY MACHINE (6 SPACE FOR #105 TYPE)	_____
2-52427	TYPE BAR SEGMENT #U2 - 44 KEY MACH. - 42ND & 43RD SLOTS NON-RADIAL, 0 TO 41 INCLUSIVE RADIAL	_____
2-52428	TYPE BAR SEGMENT #V3 - 46 KEY MACH. - 44-45-46TH SLOTS NON-RADIAL, 1 TO 43 INCLUSIVE RADIAL	_____
2-52429	TYPE BAR SEGMENT #V5 - 46 KEY MACH. - 42ND TO 46TH SLOTS INCL. NON-RADIAL, 1 TO 41 INCL. RAD.	_____
2-52436	TYPE BAR BELL CRANK SPRING (DEAD KEYS) 42 AND 44 KEY MACHINES	_____
2-52437	BELL RINGER SLIDE HOLD DOWN SPRING	_____
2-52437	TYPE BAR UNIVERSAL BAR SILENCER SPRING (O.S. - SUP. BY 2-52441)	_____
2-52439	TYPE BAR CUSHION BRACKET SCREW LOCK WASHER	_____
2-52441	TYPE BAR UNIVERSAL BAR SILENCER SPRING	_____
2-52442	TYPE BAR SEGMENT #V6 - 46 KEY MACHINE	_____
2-52443	TYPE BAR SEGMENT #V6 - COMPLETE WITH TYPE BARS - 46 KEY MACHINE	_____
2-52448	TYPE BAR BELL CRANK, ASSEMBLED #OU - 44 KEY MACHINE (O.S. - SUP. BY 2-52660)	_____
2-52450	TYPE BAR BELL CRANK, ASSEMBLED #43U - 44 KEY MACHINE (O.S. - SUP. BY 2-52703)	_____
2-52501	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 1V - 46 KEY MACHINE	_____
2-52502	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 2V - 46 KEY MACHINE	_____
2-52503	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 3V - 46 KEY MACHINE	_____
2-52504	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 4V - 46 KEY MACHINE	_____
2-52505	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 5V - 46 KEY MACHINE	_____
2-52506	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 6V - 46 KEY MACHINE	_____
2-52507	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 7V - 46 KEY MACHINE	_____

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-52508	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 8V - 46 KEY MACHINE	
2-52509	TYPE BAR BELL CRANK, LEFT, ASSEMBLED # 9V - 46 KEY MACHINE	
2-52510	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #10V - 46 KEY MACHINE	
2-52511	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #11V - 46 KEY MACHINE	
2-52512	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #12V - 46 KEY MACHINE	
2-52513	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #13V - 46 KEY MACHINE	
2-52514	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #14V - 46 KEY MACHINE	
2-52515	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #15V - 46 KEY MACHINE	
2-52516	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #16V - 46 KEY MACHINE	
2-52517	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #17V - 46 KEY MACHINE	
2-52518	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #18V - 46 KEY MACHINE	
2-52519	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #19V - 46 KEY MACHINE	
2-52520	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #20V - 46 KEY MACHINE	
2-52521	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #21V - 46 KEY MACHINE	
2-52522	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #22V - 46 KEY MACHINE	
2-52523	TYPE BAR BELL CRANK, LEFT, ASSEMBLED #23V - 46 KEY MACHINE	
2-52524	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #24V - 46 KEY MACHINE	
2-52525	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #25V - 46 KEY MACHINE	
2-52526	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #26V - 46 KEY MACHINE	
2-52527	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #27V - 46 KEY MACHINE	
2-52528	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #28V - 46 KEY MACHINE	
2-52529	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #29V - 46 KEY MACHINE	
2-52530	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #30V - 46 KEY MACHINE	
2-52531	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #31V - 46 KEY MACHINE	
2-52532	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #32V - 46 KEY MACHINE	
2-52533	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #33V - 46 KEY MACHINE	
2-52534	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #34V - 46 KEY MACHINE	
2-52535	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #35V - 46 KEY MACHINE	
2-52536	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #36V - 46 KEY MACHINE	
2-52537	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #37V - 46 KEY MACHINE	
2-52538	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #38V - 46 KEY MACHINE	
2-52539	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #39V - 46 KEY MACHINE	
2-52540	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #40V - 46 KEY MACHINE	
2-52541	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #41V - 46 KEY MACHINE	
2-52542	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #42V - 46 KEY MACHINE	
2-52543	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #43V - 46 KEY MACHINE	
2-52544	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #44V - 46 KEY MACHINE	
2-52545	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #45V - 46 KEY MACHINE	
2-52546	TYPE BAR BELL CRANK, RIGHT, ASSEMBLED #46V - 46 KEY MACHINE	
2-52548	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #U - 42 AND 44 KEY MACHINES - ALL SLOTS RADIAL	
2-52549	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V (46 KEY MACHINE) ALL SLOTS RADIAL	
2-52550	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #T3 (42 KEY MACHINE) 40 TO 42 SLOTS NON-RADIAL	
2-52551	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #105 (42 KEY MACHINE) 6 SPACE FOR #105 TYPE ALL NON-RADIAL SLOTS FOR REGULAR STYLE BARS	
2-52552	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #U1 (44 KEY MACHINE) 43RD SLOT NON-RADIAL	
2-52553	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #U2 (44 KEY MACHINE) 42ND AND 43RD NON-RADIAL	
2-52554	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V1 (46 KEY MACHINE) 46TH SLOT NON-RADIAL	
2-52555	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V2 (46 KEY MACHINE) 45TH & 46TH SLOTS NON-RAD.	
2-52556	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V3 (46 KEY MACHINE) 44 TO 46 SLOTS NON-RADIAL	
2-52557	TYPE BAR SEGMENT, ASSEM. WITH TYPE GUIDE #V5 (46 KEY MACH.) 42 TO 46 SLOTS INCL. NON-RADIAL	
2-52559	TYPE BAR SEGMENT, ASSEMBLED (42 KEY MACHINE) 42 RADIAL TYPE BARS	
2-52560	TYPE BAR SEGMENT, ASSEMBLED #U (44 KEY MACHINE) 44 RADIAL TYPE BARS	
2-52561	TYPE BAR SEGMENT, ASSEMBLED #V (46 KEY MACHINE) 46 RADIAL TYPE BARS	
2-52562	TYPE BAR SEGMENT, ASSEMBLED #T3 (42 KEY MACHINE) 40 TO 42 NON-RADIAL TYPE BARS OFFSET	
2-52563	TYPE BAR SEGMENT, ASSEMBLED #105 (42 KEY MACHINE) 42 NON-RADIAL TYPE BARS, NOT OFFSET 6 SPACE FOR #105 TYPE	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-52564	TYPE BAR SEGMENT, ASSEMBLED #U1 (44 KEY MACHINE) 43 SLOT NON-RADIAL TYPE BARS OFFSET	_____
2-52565	TYPE BAR SEGMENT, ASSEMBLED #U2 (44 KEY MACHINE) 42 & 43 SLOTS NON-RADIAL TYPE BARS OFFSET	_____
2-52566	TYPE BAR SEGMENT, ASSEMBLED #V1 (46 KEY MACHINE) 46TH SLOT NON-RADIAL TYPE BARS OFFSET	_____
2-52567	TYPE BAR SEGMENT, ASSEMBLED #V2 (46 KEY MACH.) 45TH & 46TH SLOTS NON-RADIAL TYPE BARS OFFSET	_____
2-52568	TYPE BAR SEGMENT, ASSEMBLED #V3 (46 KEY MACHINE) 44 TO 46 SLOTS NON-RADIAL TYPE BARS OFFSET	_____
2-52569	TYPE BAR SEGMENT, ASSEM. #V5 (46 KEY MACH.) 42 TO 46 INCL. SLOTS NON-RADIAL TYPE BARS OFFSET	_____
2-52582	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #U3 - 44 KEY MACHINE	_____
2-52583	TYPE BAR SEGMENT, COMPLETE #U3 - 44 KEY MACHINE	_____
2-52612	TYPE BAR BELL CRANK SPRING - 42 AND 44 KEY MACHINES	_____
2-52660	TYPE BAR BELL CRANK, ASSEMBLED #OU - 44 KEY MACHINE	_____
2-52661	TYPE BAR BELL CRANK, ASSEMBLED # 1 - 42 AND 44 KEY MACHINES	_____
2-52662	TYPE BAR BELL CRANK, ASSEMBLED # 2 - 42 AND 44 KEY MACHINES	_____
2-52663	TYPE BAR BELL CRANK, ASSEMBLED # 3 - 42 AND 44 KEY MACHINES	_____
2-52664	TYPE BAR BELL CRANK, ASSEMBLED # 4 - 42 AND 44 KEY MACHINES	_____
2-52665	TYPE BAR BELL CRANK, ASSEMBLED # 5 - 42 AND 44 KEY MACHINES	_____
2-52666	TYPE BAR BELL CRANK, ASSEMBLED # 6 - 42 AND 44 KEY MACHINES	_____
2-52667	TYPE BAR BELL CRANK, ASSEMBLED # 7 - 42 AND 44 KEY MACHINES	_____
2-52668	TYPE BAR BELL CRANK, ASSEMBLED # 8 - 42 AND 44 KEY MACHINES	_____
2-52669	TYPE BAR BELL CRANK, ASSEMBLED # 9 - 42 AND 44 KEY MACHINES	_____
2-52670	TYPE BAR BELL CRANK, ASSEMBLED #10 - 42 AND 44 KEY MACHINES	_____
2-52671	TYPE BAR BELL CRANK, ASSEMBLED #11 - 42 AND 44 KEY MACHINES	_____
2-52672	TYPE BAR BELL CRANK, ASSEMBLED #12 - 42 AND 44 KEY MACHINES	_____
2-52673	TYPE BAR BELL CRANK, ASSEMBLED #13 - 42 AND 44 KEY MACHINES	_____
2-52674	TYPE BAR BELL CRANK, ASSEMBLED #14 - 42 AND 44 KEY MACHINES	_____
2-52675	TYPE BAR BELL CRANK, ASSEMBLED #15 - 42 AND 44 KEY MACHINES	_____
2-52676	TYPE BAR BELL CRANK, ASSEMBLED #16 - 42 AND 44 KEY MACHINES	_____
2-52677	TYPE BAR BELL CRANK, ASSEMBLED #17 - 42 AND 44 KEY MACHINES	_____
2-52678	TYPE BAR BELL CRANK, ASSEMBLED #18 - 42 AND 44 KEY MACHINES	_____
2-52679	TYPE BAR BELL CRANK, ASSEMBLED #19 - 42 AND 44 KEY MACHINES	_____
2-52680	TYPE BAR BELL CRANK, ASSEMBLED #20 - 42 AND 44 KEY MACHINES	_____
2-52681	TYPE BAR BELL CRANK, ASSEMBLED #21 - 42 AND 44 KEY MACHINES	_____
2-52682	TYPE BAR BELL CRANK, ASSEMBLED #22 - 42 AND 44 KEY MACHINES	_____
2-52683	TYPE BAR BELL CRANK, ASSEMBLED #23 - 42 AND 44 KEY MACHINES	_____
2-52684	TYPE BAR BELL CRANK, ASSEMBLED #24 - 42 AND 44 KEY MACHINES	_____
2-52685	TYPE BAR BELL CRANK, ASSEMBLED #25 - 42 AND 44 KEY MACHINES	_____
2-52686	TYPE BAR BELL CRANK, ASSEMBLED #26 - 42 AND 44 KEY MACHINES	_____
2-52687	TYPE BAR BELL CRANK. ASSEMBLED #27 - 42 AND 44 KEY MACHINES	_____
2-52688	TYPE BAR BELL CRANK, ASSEMBLED #28 - 42 AND 44 KEY MACHINES	_____
2-52689	TYPE BAR BELL CRANK, ASSEMBLED #29 - 42 AND 44 KEY MACHINES	_____
2-52690	TYPE BAR BELL CRANK, ASSEMBLED #30 - 42 AND 44 KEY MACHINES	_____
2-52691	TYPE BAR BELL CRANK, ASSEMBLED #31 - 42 AND 44 KEY MACHINES	_____
2-52692	TYPE BAR BELL CRANK, ASSEMBLED #32 - 42 AND 44 KEY MACHINES	_____
2-52693	TYPE BAR BELL CRANK, ASSEMBLED #33 - 42 AND 44 KEY MACHINES	_____
2-52694	TYPE BAR BELL CRANK, ASSEMBLED #34 - 42 AND 44 KEY MACHINES	_____
2-52695	TYPE BAR BELL CRANK, ASSEMBLED #35 - 42 AND 44 KEY MACHINES	_____
2-52696	TYPE BAR BELL CRANK, ASSEMBLED #36 - 42 AND 44 KEY MACHINES	_____
2-52697	TYPE BAR BELL CRANK, ASSEMBLED #37 - 42 AND 44 KEY MACHINES	_____
2-52698	TYPE BAR BELL CRANK, ASSEMBLED #38 - 42 AND 44 KEY MACHINES	_____
2-52699	TYPE BAR BELL CRANK, ASSEMBLED #39 - 42 AND 44 KEY MACHINES	_____
2-52700	TYPE BAR BELL CRANK, ASSEMBLED #40 - 42 AND 44 KEY MACHINES	_____
2-52701	TYPE BAR BELL CRANK, ASSEMBLED #41 - 42 AND 44 KEY MACHINES	_____
2-52702	TYPE BAR BELL CRANK, ASSEMBLED #42 - 42 AND 44 KEY MACHINES	_____
2-52703	TYPE BAR BELL CRANK, ASSEMBLED #43U - 44 KEY MACHINE	_____
2-52750	TYPE BAR BELL CRANK, ASSEMBLED # 1V - 46 KEY MACHINE (FOREIGN ONLY)	_____
2-52751	TYPE BAR BELL CRANK, ASSEMBLED # 2V - 46 KEY MACHINE (FOREIGN ONLY)	_____

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-52752	TYPE BAR BELL CRANK, ASSEMBLED # 3V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52753	TYPE BAR BELL CRANK, ASSEMBLED # 4V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52754	TYPE BAR BELL CRANK, ASSEMBLED # 5V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52755	TYPE BAR BELL CRANK, ASSEMBLED # 6V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52756	TYPE BAR BELL CRANK, ASSEMBLED # 7V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52757	TYPE BAR BELL CRANK, ASSEMBLED # 8V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52758	TYPE BAR BELL CRANK, ASSEMBLED # 9V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52759	TYPE BAR BELL CRANK, ASSEMBLED #10V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52760	TYPE BAR BELL CRANK, ASSEMBLED #11V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52761	TYPE BAR BELL CRANK, ASSEMBLED #12V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52762	TYPE BAR BELL CRANK, ASSEMBLED #13V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52763	TYPE BAR BELL CRANK, ASSEMBLED #14V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52764	TYPE BAR BELL CRANK, ASSEMBLED #15V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52765	TYPE BAR BELL CRANK, ASSEMBLED #16V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52766	TYPE BAR BELL CRANK, ASSEMBLED #17V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52767	TYPE BAR BELL CRANK, ASSEMBLED #18V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52768	TYPE BAR BELL CRANK, ASSEMBLED #19V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52769	TYPE BAR BELL CRANK, ASSEMBLED #20V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52770	TYPE BAR BELL CRANK, ASSEMBLED #21V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52771	TYPE BAR BELL CRANK, ASSEMBLED #22V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52772	TYPE BAR BELL CRANK, ASSEMBLED #23V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52773	TYPE BAR BELL CRANK, ASSEMBLED #24V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52774	TYPE BAR BELL CRANK, ASSEMBLED #25V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52775	TYPE BAR BELL CRANK, ASSEMBLED #26V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52776	TYPE BAR BELL CRANK, ASSEMBLED #27V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52777	TYPE BAR BELL CRANK, ASSEMBLED #28V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52778	TYPE BAR BELL CRANK, ASSEMBLED #29V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52779	TYPE BAR BELL CRANK, ASSEMBLED #30V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52780	TYPE BAR BELL CRANK, ASSEMBLED #31V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52781	TYPE BAR BELL CRANK, ASSEMBLED #32V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52782	TYPE BAR BELL CRANK, ASSEMBLED #33V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52783	TYPE BAR BELL CRANK, ASSEMBLED #34V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52784	TYPE BAR BELL CRANK, ASSEMBLED #35V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52785	TYPE BAR BELL CRANK, ASSEMBLED #36V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52786	TYPE BAR BELL CRANK, ASSEMBLED #37V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52787	TYPE BAR BELL CRANK, ASSEMBLED #38V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52788	TYPE BAR BELL CRANK, ASSEMBLED #39V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52789	TYPE BAR BELL CRANK, ASSEMBLED #40V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52790	TYPE BAR BELL CRANK, ASSEMBLED #41V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52791	TYPE BAR BELL CRANK, ASSEMBLED #42V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52792	TYPE BAR BELL CRANK, ASSEMBLED #43V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52793	TYPE BAR BELL CRANK, ASSEMBLED #44V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52794	TYPE BAR BELL CRANK, ASSEMBLED #45V - 46 KEY MACHINE (FOREIGN ONLY)	
2-52795	TYPE BAR BELL CRANK, ASSEMBLED #46V - 46 KEY MACHINE (FOREIGN ONLY)	
2-53300	SEGMENT SHIFT STOP SCREW	
2-53303	SHIFT LEVER SHAFT END SCREW	
2-53304	SEGMENT SHIFT ROCKER, ASSEMBLED	
2-53310	SHIFT LEVER LEFT, COMPLETE - 42 KEY MACHINE	
2-53311	SHIFT LEVER RIGHT, COMPLETE - 42 AND 44 KEY MACHINES	
2-53312	SHIFT LEVER LEFT, ASSEMBLED - 44 KEY MACHINE	
2-53313	SHIFT LEVER LEFT, ASSEMBLED - 46 KEY MACHINE	
2-53314	SHIFT LOCK LATCH STRIKE	
2-53315	SHIFT TOGGLE CUSHION	
2-53316	SHIFT TOGGLE, ASSEMBLED (O.S. - SUP. BY 2-53340)	
2-53327	SHIFT TOGGLE YIELD LINK ECCENTRIC	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-53329	SHIFT TOGGLE LINK LONG, ECCENTRIC SPACER	
2-53330	SHIFT TOGGLE CUSHION ECCENTRIC	
2-53334	SHIFT TOGGLE YIELD SPRING	
2-53339	SHIFT TOGGLE LINK LONG, ECCENTRIC	
2-53339	SHIFT TOGGLE LINK SHORT, ECCENTRIC	
2-53340	SHIFT TOGGLE ASSEMBLED	
2-53344	SEGMENT SHIFT LOCK SCREW	
2-53345	SHIFT TOGGLE SPRING	
2-53346	SHIFT TOGGLE SPRING ANCHOR SCREW STUD	
2-53502	BACK SPACE ARM LEVER	
2-53505	BACK SPACE LEVER ASSEMBLED - 42 AND 46 KEY MACHINES	
2-53506	BACK SPACE LEVER ASSEMBLED - 44 KEY MACHINE	
2-53508	BACK SPACE PAWL - 6 SPACE - ASSEMBLED	
2-53509	BACK SPACE PAWL - 8 SPACE - ASSEMBLED	
2-53510	BACK SPACE PAWL - 9 1/3 SPACE - ASSEMBLED	
2-53511	BACK SPACE PAWL - 10 SPACE - ASSEMBLED	
2-53512	BACK SPACE PAWL - 12 SPACE - ASSEMBLED	
2-53513	BACK SPACE PAWL - 14 SPACE - ASSEMBLED	
2-53514	BACK SPACE PAWL - 16 SPACE - ASSEMBLED	
2-53515	BACK SPACE PAWL STUD WASHER	
2-53518	BACK SPACE PAWL SPRING	
2-53519	BACK SPACE KEY CAP (GREEN) 42 AND 46 KEY MACHINES (O.S.)	
2-53520	BACK SPACE ARM LEVER SPRING	
2-53701	SPRING DRUM BODY ASSEMBLED (O.S.)	
2-53703	SPRING DRUM DETENT PAWL ASSEMBLED	
2-53705	CARRIAGE RETURN SPRING DRUM COMPLETE - 20" CARRIAGE (O.S. SUP. BY 2-53711)	
2-53707	SPRING DRUM BACK, ASSEMBLED	
2-53711	SPRING DRUM ASSEMBLED	
2-53712	SPRING DRUM ARBOR ASSEMBLED	
2-53715	SPRING DRUM GEAR ASSEMBLED	
2-53718	SPRING DRUM BRACKET ASSEMBLED	
2-53905	BELL RINGER ASSEMBLED (O.S. - SUP. BY 2-53910)	
2-53906	BELL RINGER SPRING (O.S. - SUP. BY 2-53916)	
2-53907	BELL RINGER PLATE SCREW, LOWER (O.S.)	
2-53910	BELL SLIDE ASSEMBLED	
2-53911	BELL SLIDE CAM	
2-53915	BELL SLIDE RETAINING RING	
2-53915	LINE SPACE RATCHET DETENT ROLL RETAINING RING	
2-53915	MARGIN RELEASE KEY LEVER LINK RETAINING RING	
2-53916	BELL SLIDE SPRING (O.S. - SUP. BY 2-53918)	
2-53918	BELL SLIDE SPRING	
2-54000	TABULATOR FRICTION BRACKET	
2-54001	TABULATOR BELL CRANK SPRING ANCHOR	
2-54016	TABULATOR BLADE UPPER COMB - 6 SPACE - 10 KEY TAB	
2-54017	TABULATOR BLADE UPPER COMB - 8 SPACE - 10 KEY TAB	
2-54018	TABULATOR BLADE UPPER COMB - 9 1/3 SPACE - 10 KEY TAB	
2-54019	TABULATOR BLADE UPPER COMB - 10 SPACE - 10 KEY TAB	
2-54020	TABULATOR BLADE UPPER COMB - 12 SPACE - 10 KEY TAB	
2-54021	TABULATOR BLADE UPPER COMB - 14 SPACE - 10 KEY TAB	
2-54022	TABULATOR BLADE UPPER COMB - 16 SPACE - 10 KEY TAB	
2-54023	TABULATOR KEY SHAFT BRACE - 10 KEY TABULATOR	
2-54024	TABULATOR KEY SHAFT RETAINER	
2-54025	TABULATOR STOP RACK SUPPORT - 15" TO 32" CARRIAGES (O.S. - SUP. BY 2-55462)	
2-54033	TABULATOR FRICTION STUD ARM, COMPLETE	
2-54040	TABULATOR BELL CRANK SPRING - 1 AND 10 KEY TABULATOR	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-54041	TABULATOR STOP RACK ADJUSTING SCREW	
2-54043	TABULATOR KEY ASSEMBLED	
2-54044	TABULATOR KEY UP STOP	
2-54045	TABULATOR KEY BAR (GREEN) 1 KEY TABULATOR (O.S. - SUP. BY 2-54186)	
2-54102	TABULATOR SET KEY CAP (GREEN) 1 KEY TABULATOR (O.S. - SUP. BY 2-51959)	
2-54103	TABULATOR CLEAR KEY CAP (GREEN) 1 KEY TABULATOR (O.S. - SUP. BY 2-51959)	
2-54118	TABULATOR STOP RACK WITH STOPS COMPLETE - 11" CARRIAGE - 6 SPACE	
2-54119	TABULATOR STOP RACK WITH STOPS COMPLETE - 13" CARRIAGE - 6 SPACE	
2-54120	TABULATOR STOP RACK WITH STOPS COMPLETE - 15" CARRIAGE - 6 SPACE	
2-54121	TABULATOR STOP RACK WITH STOPS COMPLETE - 20" CARRIAGE - 6 SPACE	
2-54123	TABULATOR STOP RACK WITH STOPS COMPLETE - 27" CARRIAGE - 6 SPACE	
2-54124	TABULATOR STOP RACK WITH STOPS COMPLETE - 32" CARRIAGE - 6 SPACE	
2-54125	TABULATOR STOP RACK WITH STOPS COMPLETE - 11" CARRIAGE - 8 AND 16 SPACE	
2-54126	TABULATOR STOP RACK WITH STOPS COMPLETE - 13" CARRIAGE - 8 AND 16 SPACE	
2-54127	TABULATOR STOP RACK WITH STOPS COMPLETE - 15" CARRIAGE - 8 AND 16 SPACE	
2-54128	TABULATOR STOP RACK WITH STOPS COMPLETE - 20" CARRIAGE - 8 AND 16 SPACE	
2-54130	TABULATOR STOP RACK WITH STOPS COMPLETE - 27" CARRIAGE - 8 AND 16 SPACE	
2-54131	TABULATOR STOP RACK WITH STOPS COMPLETE - 32" CARRIAGE - 8 AND 16 SPACE	
2-54132	TABULATOR STOP RACK WITH STOPS COMPLETE - 11" CARRIAGE - 9 1/3 SPACE	
2-54133	TABULATOR STOP RACK WITH STOPS COMPLETE - 13" CARRIAGE - 9 1/3 SPACE	
2-54134	TABULATOR STOP RACK WITH STOPS COMPLETE - 15" CARRIAGE - 9 1/3 SPACE	
2-54135	TABULATOR STOP RACK WITH STOPS COMPLETE - 20" CARRIAGE - 9 1/3 SPACE	
2-54137	TABULATOR STOP RACK WITH STOPS COMPLETE - 27" CARRIAGE - 9 1/3 SPACE	
2-54138	TABULATOR STOP RACK WITH STOPS COMPLETE - 32" CARRIAGE - 9 1/3 SPACE	
2-54139	TABULATOR STOP RACK WITH STOPS COMPLETE - 11" CARRIAGE - 10 SPACE	
2-54140	TABULATOR STOP RACK WITH STOPS COMPLETE - 13" CARRIAGE - 10 SPACE	
2-54141	TABULATOR STOP RACK WITH STOPS COMPLETE - 15" CARRIAGE - 10 SPACE	
2-54142	TABULATOR STOP RACK WITH STOPS COMPLETE - 20" CARRIAGE - 10 SPACE	
2-54144	TABULATOR STOP RACK WITH STOPS COMPLETE - 27" CARRIAGE - 10 SPACE	
2-54145	TABULATOR STOP RACK WITH STOPS COMPLETE - 32" CARRIAGE - 10 SPACE	
2-54146	TABULATOR STOP RACK WITH STOPS COMPLETE - 11" CARRIAGE - 12 SPACE	
2-54147	TABULATOR STOP RACK WITH STOPS COMPLETE - 13" CARRIAGE - 12 SPACE	
2-54148	TABULATOR STOP RACK WITH STOPS COMPLETE - 15" CARRIAGE - 12 SPACE	
2-54149	TABULATOR STOP RACK WITH STOPS COMPLETE - 20" CARRIAGE - 12 SPACE	
2-54151	TABULATOR STOP RACK WITH STOPS COMPLETE - 27" CARRIAGE - 12 SPACE	
2-54152	TABULATOR STOP RACK WITH STOPS COMPLETE - 32" CARRIAGE - 12 SPACE	
2-54153	TABULATOR STOP RACK WITH STOPS COMPLETE - 11" CARRIAGE - 14 SPACE	
2-54154	TABULATOR STOP RACK WITH STOPS COMPLETE - 13" CARRIAGE - 14 SPACE	
2-54155	TABULATOR STOP RACK WITH STOPS COMPLETE - 15" CARRIAGE - 14 SPACE	
2-54156	TABULATOR STOP RACK WITH STOPS COMPLETE - 20" CARRIAGE - 14 SPACE	
2-54158	TABULATOR STOP RACK WITH STOPS COMPLETE - 27" CARRIAGE - 14 SPACE	
2-54159	TABULATOR STOP RACK WITH STOPS COMPLETE - 32" CARRIAGE - 14 SPACE	
2-54169	TABULATOR FRICTION BAIL SPRING	
2-54170	TABULATOR BLADE LOWER COMB & ESCAPEMENT OPERATING BAIL BRACKET, ASSEMBLED - 6, 8, 9 1/3, 10, 12 SPACE - 10 KEY TAB	
2-54171	TABULATOR STOP DETENT ROD - 11" CARRIAGE	
2-54172	TABULATOR STOP DETENT ROD - 13" CARRIAGE	
2-54173	TABULATOR STOP DETENT ROD - 15" CARRIAGE	
2-54174	TABULATOR STOP DETENT ROD - 20" CARRIAGE	
2-54176	TABULATOR STOP DETENT ROD - 27" CARRIAGE	
2-54177	TABULATOR STOP DETENT ROD - 32" CARRIAGE	
2-54178	TABULATOR BELL CRANK SPACER (O.S.)	
2-54179	TABULATOR BELL CRANK SHAFT	
2-54184	TABULATOR STOP SET ASSEMBLED	
2-54186	TABULATOR KEY BAR - 1 KEY TABULATOR	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-54188	TABULATOR BLADE UPPER COMB - 1 KEY TAB	
2-54189	TABULATOR BLADE LOWER COMB & ESCAPEMENT OPERATING BAIL BRACKET, ASSEMBLED - 1 KEY TAB	
2-55000	CARRIAGE END LEFT, ASSEMBLED (O.S. - SUP. BY 2-55428)	
2-55001	CARRIAGE END RIGHT, ASSEMBLED (O.S. - SUP. BY 2-55429)	
2-55004	CARRIAGE SUPPORT BRACKET, LEFT - 11" TO 20" CARRIAGE	
2-55005	CARRIAGE SUPPORT BRACKET, RIGHT - 11" TO 20" CARRIAGE	
2-55007	FEED ROLL SUPPORT BRACKET, RIGHT FRONT MOUNTING SCREW	
2-55008	CARRIAGE ROLL RAIL LOWER ECCENTRIC SCREW	
2-55009	CARRIAGE ROLL RAIL LOWER ECCENTRIC (O.S. - SUP. BY 2-55324)	
2-55010	CARRIAGE ROLL RAIL, ASSEMBLED - 11" CARRIAGE	
2-55011	CARRIAGE ROLL RAIL, ASSEMBLED - 13" CARRIAGE	
2-55012	CARRIAGE ROLL RAIL, ASSEMBLED - 15" CARRIAGE	
2-55013	CARRIAGE ROLL RAIL, ASSEMBLED - 20" CARRIAGE	
2-55015	CARRIAGE ROLL RAIL, ASSEMBLED - 27" CARRIAGE	
2-55016	CARRIAGE ROLL RAIL, ASSEMBLED - 32" CARRIAGE	
2-55038	CARRIAGE RAIL ASSEMBLED - 11" CARRIAGE	
2-55039	CARRIAGE RAIL ASSEMBLED - 13" CARRIAGE	
2-55040	CARRIAGE RAIL ASSEMBLED - 15" CARRIAGE	
2-55041	CARRIAGE RAIL ASSEMBLED - 20" CARRIAGE	
2-55043	CARRIAGE RAIL ASSEMBLED - 27" CARRIAGE	
2-55044	CARRIAGE RAIL ASSEMBLED - 32" CARRIAGE	
2-55045	CARRIAGE TAPE HOOK (O.S. - SUP. BY 2-55460)	
2-55048	PAPER SCALE ARM SUPPORT SPRING	
2-55058	PAPER SCALE ARM SPRING LINK PIVOT SCREW (O.S.)	
2-55059	PAPER SCALE ARM SHAFT CLAMP	
2-55093	FEED RACK SUPPORT - 15" TO 32" CARRIAGES (O.S. - SUP. BY 2-57596)	
2-55094	CARRIAGE SUPPORT RAIL SCREW (O.S. - SUP. BY 2-40133)	
2-55095	CARRIAGE SUPPORT RAIL, REAR - 11" CARRIAGE (O.S. - SUP. BY 2-55476)	
2-55096	CARRIAGE SUPPORT RAIL, REAR - 13" CARRIAGE (O.S. - SUP. BY 2-55477)	
2-55097	CARRIAGE SUPPORT RAIL, REAR - 15" CARRIAGE (O.S. - SUP. BY 2-55478)	
2-55098	CARRIAGE SUPPORT RAIL, REAR - 20" CARRIAGE (O.S. - SUP. BY 2-55479)	
2-55100	CARRIAGE SUPPORT RAIL, REAR - 27" CARRIAGE (O.S. - SUP. BY 2-55481)	
2-55101	CARRIAGE SUPPORT RAIL, REAR - 32" CARRIAGE (O.S. - SUP. BY 2-55482)	
2-55102	FEED AND MARGIN STOP RACK, 10 SPACE, ASSEMBLED - 11" CARRIAGE (O.S.)	
2-55103	FEED AND MARGIN STOP RACK, 10 SPACE, ASSEMBLED - 13" CARRIAGE (O.S.)	
2-55104	FEED AND MARGIN STOP RACK, 10 SPACE, ASSEMBLED - 15" CARRIAGE (O.S.)	
2-55105	FEED AND MARGIN STOP RACK, 10 SPACE, ASSEMBLED - 20" CARRIAGE (O.S.)	
2-55107	FEED AND MARGIN STOP RACK, 10 SPACE, ASSEMBLED - 27" CARRIAGE (O.S.)	
2-55108	FEED AND MARGIN STOP RACK, 10 SPACE, ASSEMBLED - 32" CARRIAGE (O.S.)	
2-55109	FEED AND MARGIN STOP RACK, 12 SPACE, ASSEMBLED - 11" CARRIAGE (O.S.)	
2-55110	FEED AND MARGIN STOP RACK, 12 SPACE, ASSEMBLED - 13" CARRIAGE (O.S.)	
2-55111	FEED AND MARGIN STOP RACK, 12 SPACE, ASSEMBLED - 15" CARRIAGE (O.S.)	
2-55112	FEED AND MARGIN STOP RACK, 12 SPACE, ASSEMBLED - 20" CARRIAGE (O.S.)	
2-55114	FEED AND MARGIN STOP RACK, 12 SPACE, ASSEMBLED - 27" CARRIAGE (O.S.)	
2-55115	FEED AND MARGIN STOP RACK, 12 SPACE, ASSEMBLED - 32" CARRIAGE (O.S.)	
2-55116	FEED AND MARGIN STOP RACK, 6 SPACE, ASSEMBLED - 11" CARRIAGE (O.S.)	
2-55117	FEED AND MARGIN STOP RACK, 6 SPACE, ASSEMBLED - 13" CARRIAGE (O.S.)	
2-55118	FEED AND MARGIN STOP RACK, 6 SPACE, ASSEMBLED - 15" CARRIAGE (O.S.)	
2-55119	FEED AND MARGIN STOP RACK, 6 SPACE, ASSEMBLED - 20" CARRIAGE (O.S.)	
2-55121	FEED AND MARGIN STOP RACK, 6 SPACE, ASSEMBLED - 27" CARRIAGE (O.S.)	
2-55122	FEED AND MARGIN STOP RACK, 6 SPACE, ASSEMBLED - 32" CARRIAGE (O.S.)	
2-55123	FEED AND MARGIN STOP RACK, 8 AND 16 SPACE, ASSEMBLED - 11" CARRIAGE (O.S.)	
2-55124	FEED AND MARGIN STOP RACK, 8 AND 16 SPACE, ASSEMBLED - 13" CARRIAGE (O.S.)	
2-55125	FEED AND MARGIN STOP RACK, 8 AND 16 SPACE, ASSEMBLED - 15" CARRIAGE (O.S.)	
2-55126	FEED AND MARGIN STOP RACK, 8 AND 16 SPACE, ASSEMBLED - 20" CARRIAGE (O.S.)	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-55128	FEED AND MARGIN STOP RACK, 8 AND 16 SPACE, ASSEMBLED - 27" CARRIAGE (O.S.)	
2-55129	FEED AND MARGIN STOP RACK, 8 AND 16 SPACE, ASSEMBLED - 32" CARRIAGE (O.S.)	
2-55130	FEED AND MARGIN STOP RACK, 9 1/3 SPACE, ASSEMBLED - 11" CARRIAGE (O.S.)	
2-55131	FEED AND MARGIN STOP RACK, 9 1/3 SPACE, ASSEMBLED - 13" CARRIAGE (O.S.)	
2-55132	FEED AND MARGIN STOP RACK, 9 1/3 SPACE, ASSEMBLED - 15" CARRIAGE (O.S.)	
2-55133	FEED AND MARGIN STOP RACK, 9 1/3 SPACE, ASSEMBLED - 20" CARRIAGE (O.S.)	
2-55135	FEED AND MARGIN STOP RACK, 9 1/3 SPACE, ASSEMBLED - 27" CARRIAGE (O.S.)	
2-55136	FEED AND MARGIN STOP RACK, 9 1/3 SPACE, ASSEMBLED - 32" CARRIAGE (O.S.)	
2-55137	FEED AND MARGIN STOP RACK, 14 SPACE, ASSEMBLED - 11" CARRIAGE (O.S.)	
2-55138	FEED AND MARGIN STOP RACK, 14 SPACE, ASSEMBLED - 13" CARRIAGE (O.S.)	
2-55139	FEED AND MARGIN STOP RACK, 14 SPACE, ASSEMBLED - 15" CARRIAGE (O.S.)	
2-55140	FEED AND MARGIN STOP RACK, 14 SPACE, ASSEMBLED - 20" CARRIAGE (O.S.)	
2-55142	FEED AND MARGIN STOP RACK, 14 SPACE, ASSEMBLED - 27" CARRIAGE (O.S.)	
2-55143	FEED AND MARGIN STOP RACK, 14 SPACE, ASSEMBLED - 32" CARRIAGE (O.S.)	
2-55151	CARRIAGE ROLL RETAINER FIXED RACK - 11" CARRIAGE	
2-55152	CARRIAGE ROLL RETAINER FIXED RACK - 13" CARRIAGE	
2-55153	CARRIAGE ROLL RETAINER FIXED RACK - 15" CARRIAGE	
2-55154	CARRIAGE ROLL RETAINER FIXED RACK - 20" CARRIAGE	
2-55156	CARRIAGE ROLL RETAINER FIXED RACK - 27" CARRIAGE	
2-55157	CARRIAGE ROLL RETAINER FIXED RACK - 32" CARRIAGE	
2-55158	CARRIAGE RAIL CLAMP SCREW	
2-55159	PAPER SCALE ARM SPRING - 11" TO 15" CARRIAGES (O.S. - SUP. BY 2-55434)	
2-55160	BELL SLIDE CAM SCREW	
2-55160	CARRIAGE RELEASE BLADE SUPPORT SCREW	
2-55160	CARRIAGE ROLL RETAINER FIXED RACK SCREW	
2-55160	MARGIN STOP SCALE SCREW	
2-55165	CARRIAGE SUPPORT CHANNEL, LEFT, ASSEMBLED - 27" AND 32" CARRIAGES	
2-55166	CARRIAGE SUPPORT CHANNEL, RIGHT, ASSEMBLED - 27" AND 32" CARRIAGES	
2-55171	CARRIAGE ROLL RETAINER BRACKET ASSEMBLED	
2-55184	CARRIAGE ROLL RETAINER COMPLETE - 11" CARRIAGE	
2-55185	CARRIAGE ROLL RETAINER COMPLETE - 13" CARRIAGE	
2-55186	CARRIAGE ROLL RETAINER COMPLETE - 15" CARRIAGE	
2-55187	CARRIAGE ROLL RETAINER COMPLETE - 20" CARRIAGE	
2-55189	CARRIAGE ROLL RETAINER COMPLETE - 27" CARRIAGE	
2-55190	CARRIAGE ROLL RETAINER COMPLETE - 32" CARRIAGE	
2-55193	CARRIAGE SUPPORT RAIL, REAR, BRACKET (O.S.)	
2-55195	CARRIAGE SUPPORT RAIL, REAR, BRACKET ROLLER SCREW (O.S. - SUP. BY 2-55484)	
2-55196	CARRIAGE SUPPORT RAIL, REAR, BRACKET ROLLER (O.S.)	
2-55197	CARRIAGE RELEASE LEVER, LEFT	
2-55198	CARRIAGE RELEASE LEVER, RIGHT	
2-55199	PAPER SCALE ARM SUPPORT CAM GUIDE	
2-55211	CARRIAGE RELEASE BLADE ASSEMBLED - 11" CARRIAGE	
2-55212	CARRIAGE RELEASE BLADE ASSEMBLED - 13" CARRIAGE	
2-55213	CARRIAGE RELEASE BLADE ASSEMBLED - 15" CARRIAGE (O.S. - SUP. BY 2-55452)	
2-55214	CARRIAGE RELEASE BLADE ASSEMBLED - 20" CARRIAGE (O.S. - SUP. BY 2-55453)	
2-55216	CARRIAGE RELEASE BLADE ASSEMBLED - 27" CARRIAGE (O.S. - SUP. BY 2-55455)	
2-55217	CARRIAGE RELEASE BLADE ASSEMBLED - 32" CARRIAGE (O.S. - SUP. BY 2-55456)	
2-55218	CARRIAGE RELEASE BLADE SPRING	
2-55219	PAPER SCALE ARM SHAFT ASSEMBLED - 11" CARRIAGE (O.S. - SUP. BY 2-55438)	
2-55220	PAPER SCALE ARM SHAFT ASSEMBLED - 13" CARRIAGE (O.S. - SUP. BY 2-55439)	
2-55221	PAPER SCALE ARM SHAFT ASSEMBLED - 15" CARRIAGE (O.S. - SUP. BY 2-55440)	
2-55222	PAPER SCALE ARM SHAFT ASSEMBLED - 20" CARRIAGE (O.S. - SUP. BY 2-55441)	
2-55224	PAPER SCALE ARM SHAFT ASSEMBLED - 27" CARRIAGE (O.S. - SUP. BY 2-55443)	
2-55225	PAPER SCALE ARM SHAFT ASSEMBLED - 32" CARRIAGE (O.S. - SUP. BY 2-55444)	
2-55233	CARRIAGE ROLL RAIL LOWER SCREW - 27" AND 32" CARRIAGES	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-55233	CARRIAGE SUPPORT BRACKET SCREW	
2-55235	PAPER SCALE ARM SPRING - 20" TO 32" CARRIAGES (O.S. - SUP. BY 2-55435)	
2-55251	PAPER BAIL SCALE - 6 SPACE - 27" CARRIAGE	
2-55252	PAPER BAIL SCALE - 8 SPACE - 27" CARRIAGE	
2-55253	PAPER BAIL SCALE - 9 1/3 SPACE - 27" CARRIAGE	
2-55254	PAPER BAIL SCALE - 10 SPACE - 27" CARRIAGE	
2-55255	PAPER BAIL SCALE - 12 SPACE - 27" CARRIAGE	
2-55256	PAPER BAIL SCALE - 14 SPACE - 27" CARRIAGE	
2-55257	PAPER BAIL SCALE - 16 SPACE - 27" CARRIAGE	
2-55258	PAPER BAIL SCALE - 6 SPACE - 32" CARRIAGE	
2-55259	PAPER BAIL SCALE - 8 SPACE - 32" CARRIAGE	
2-55260	PAPER BAIL SCALE - 9 1/3 SPACE - 32" CARRIAGE	
2-55261	PAPER BAIL SCALE - 10 SPACE - 32" CARRIAGE	
2-55262	PAPER BAIL SCALE - 12 SPACE - 32" CARRIAGE	
2-55263	PAPER BAIL SCALE - 14 SPACE - 32" CARRIAGE	
2-55264	PAPER BAIL SCALE - 16 SPACE - 32" CARRIAGE	
2-55265	PAPER BAIL SCALE - 6 SPACE - 11" CARRIAGE	
2-55266	PAPER BAIL SCALE - 8 SPACE - 11" CARRIAGE	
2-55267	PAPER BAIL SCALE - 9 1/3 SPACE - 11" CARRIAGE	
2-55268	PAPER BAIL SCALE - 10 SPACE - 11" CARRIAGE	
2-55269	PAPER BAIL SCALE - 12 SPACE - 11" CARRIAGE	
2-55270	PAPER BAIL SCALE - 14 SPACE - 11" CARRIAGE	
2-55271	PAPER BAIL SCALE - 16 SPACE - 11" CARRIAGE	
2-55272	PAPER BAIL SCALE - 6 SPACE - 13" CARRIAGE	
2-55273	PAPER BAIL SCALE - 8 SPACE - 13" CARRIAGE	
2-55274	PAPER BAIL SCALE - 9 1/3 SPACE - 13" CARRIAGE	
2-55275	PAPER BAIL SCALE - 10 SPACE - 13" CARRIAGE	
2-55276	PAPER BAIL SCALE - 12 SPACE - 13" CARRIAGE	
2-55277	PAPER BAIL SCALE - 14 SPACE - 13" CARRIAGE	
2-55278	PAPER BAIL SCALE - 16 SPACE - 13" CARRIAGE	
2-55279	PAPER BAIL SCALE - 6 SPACE - 15" CARRIAGE	
2-55280	PAPER BAIL SCALE - 8 SPACE - 15" CARRIAGE	
2-55281	PAPER BAIL SCALE - 9 1/3 SPACE - 15" CARRIAGE	
2-55282	PAPER BAIL SCALE - 10 SPACE - 15" CARRIAGE	
2-55283	PAPER BAIL SCALE - 12 SPACE - 15" CARRIAGE	
2-55284	PAPER BAIL SCALE - 14 SPACE - 15" CARRIAGE	
2-55285	PAPER BAIL SCALE - 16 SPACE - 15" CARRIAGE	
2-55286	PAPER BAIL SCALE - 6 SPACE - 20" CARRIAGE	
2-55287	PAPER BAIL SCALE - 8 SPACE - 20" CARRIAGE	
2-55288	PAPER BAIL SCALE - 9 1/3 SPACE - 20" CARRIAGE	
2-55289	PAPER BAIL SCALE - 10 SPACE - 20" CARRIAGE	
2-55290	PAPER BAIL SCALE - 12 SPACE - 20" CARRIAGE	
2-55291	PAPER BAIL SCALE - 14 SPACE - 20" CARRIAGE	
2-55292	PAPER BAIL SCALE - 16 SPACE - 20" CARRIAGE	
2-55313	CARRIAGE BED REAR MOUNTING SCREW	
2-55314	CARRIAGE END MOUNTING SCREW	
2-55321	ALIGNING SCALE BRACKET SPACER, HEAVY DUTY (O.S.) - SPECIAL EQUIPMENT	
2-55323	PAPER TROUGH SUPPORT BRACKET SPRING	
2-55324	CARRIAGE ROLL RAIL LOWER ECCENTRIC - 11" TO 20" CARRIAGES	
2-55327	CARRIAGE SCALE - 6 SPACE - 11" CARRIAGE	
2-55328	CARRIAGE SCALE - 8 SPACE - 11" CARRIAGE	
2-55329	CARRIAGE SCALE - 9 1/3 SPACE - 11" CARRIAGE	
2-55330	CARRIAGE SCALE - 10 SPACE - 11" CARRIAGE	
2-55331	CARRIAGE SCALE - 12 SPACE - 11" CARRIAGE	
2-55332	CARRIAGE SCALE - 14 SPACE - 11" CARRIAGE	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-55333	CARRIAGE SCALE - 16 SPACE - 11" CARRIAGE	
2-55334	CARRIAGE SCALE - 6 SPACE - 13" CARRIAGE	
2-55335	CARRIAGE SCALE - 8 SPACE - 13" CARRIAGE	
2-55336	CARRIAGE SCALE - 9 1/3 SPACE - 13" CARRIAGE	
2-55337	CARRIAGE SCALE - 10 SPACE - 13" CARRIAGE	
2-55338	CARRIAGE SCALE - 12 SPACE - 13" CARRIAGE	
2-55339	CARRIAGE SCALE - 14 SPACE - 13" CARRIAGE	
2-55340	CARRIAGE SCALE - 16 SPACE - 13" CARRIAGE	
2-55341	CARRIAGE SCALE - 6 SPACE - 15" CARRIAGE	
2-55342	CARRIAGE SCALE - 8 SPACE - 15" CARRIAGE	
2-55343	CARRIAGE SCALE - 9 1/3 SPACE - 15" CARRIAGE	
2-55344	CARRIAGE SCALE - 10 SPACE - 15" CARRIAGE	
2-55345	CARRIAGE SCALE - 12 SPACE - 15" CARRIAGE	
2-55346	CARRIAGE SCALE - 14 SPACE - 15" CARRIAGE	
2-55347	CARRIAGE SCALE - 16 SPACE - 15" CARRIAGE	
2-55348	CARRIAGE SCALE - 6 SPACE - 20" CARRIAGE	
2-55349	CARRIAGE SCALE - 8 SPACE - 20" CARRIAGE	
2-55350	CARRIAGE SCALE - 9 1/3 SPACE - 20" CARRIAGE	
2-55351	CARRIAGE SCALE - 10 SPACE - 20" CARRIAGE	
2-55352	CARRIAGE SCALE - 12 SPACE - 20" CARRIAGE	
2-55353	CARRIAGE SCALE - 14 SPACE - 20" CARRIAGE	
2-55354	CARRIAGE SCALE - 16 SPACE - 20" CARRIAGE	
2-55362	CARRIAGE SCALE - 6 SPACE - 27" CARRIAGE	
2-55363	CARRIAGE SCALE - 8 SPACE - 27" CARRIAGE	
2-55364	CARRIAGE SCALE - 9 1/3 SPACE - 27" CARRIAGE	
2-55365	CARRIAGE SCALE - 10 SPACE - 27" CARRIAGE	
2-55366	CARRIAGE SCALE - 12 SPACE - 27" CARRIAGE	
2-55367	CARRIAGE SCALE - 14 SPACE - 27" CARRIAGE	
2-55368	CARRIAGE SCALE - 16 SPACE - 27" CARRIAGE	
2-55369	CARRIAGE SCALE - 6 SPACE - 32" CARRIAGE	
2-55370	CARRIAGE SCALE - 8 SPACE - 32" CARRIAGE	
2-55371	CARRIAGE SCALE - 9 1/3 SPACE - 32" CARRIAGE	
2-55372	CARRIAGE SCALE - 10 SPACE - 32" CARRIAGE	
2-55373	CARRIAGE SCALE - 12 SPACE - 32" CARRIAGE	
2-55374	CARRIAGE SCALE - 14 SPACE - 32" CARRIAGE	
2-55375	CARRIAGE SCALE - 16 SPACE - 32" CARRIAGE	
2-55383	FEED AND MARGIN STOP RACK, ROLLER SLEEVE, LOCK NUT (O.S.)	
2-55384	FEED AND MARGIN STOP RACK, ROLLER ECCENTRIC SCREW (O.S.)	
2-55385	FEED AND MARGIN STOP RACK ROLLER (O.S.)	
2-55386	FEED AND MARGIN STOP RACK ROLLER SLEEVE (O.S.)	
2-55387	PAPER SCALE ARM LINK ASSEMBLED (O.S.)	
2-55388	CARRIAGE COMPLETE WITH PLATEN, 11" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET (O.S. - SUP. BY 2-55502)	
2-55389	CARRIAGE COMPLETE WITH PLATEN, 13" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET (O.S. - SUP. BY 2-55503)	
2-55390	CARRIAGE COMPLETE WITH PLATEN, 15" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET (O.S. - SUP. BY 2-55504)	
2-55391	CARRIAGE COMPLETE WITH PLATEN, 20" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET (O.S. - SUP. BY 2-55505)	
2-55393	CARRIAGE COMPLETE WITH PLATEN, 27" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET (O.S. - SUP. BY 2-55507)	
2-55394	CARRIAGE COMPLETE WITH PLATEN, 32" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET (O.S. - SUP. BY 2-55508)	
2-55395	PAPER TROUGH, ASSEMBLED - 11" CARRIAGE	
2-55396	PAPER TROUGH, ASSEMBLED - 13" CARRIAGE	
2-55397	PAPER TROUGH, ASSEMBLED - 15" CARRIAGE	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-55398	PAPER TROUGH, LEFT, ASSEMBLED - 20" CARRIAGE	
2-55399	PAPER TROUGH, RIGHT, ASSEMBLED - 20" CARRIAGE	
2-55402	PAPER TROUGH, LEFT, ASSEMBLED - 27" CARRIAGE	
2-55403	PAPER TROUGH, RIGHT, ASSEMBLED - 27" CARRIAGE	
2-55404	PAPER TROUGH, LEFT, ASSEMBLED - 32" CARRIAGE	
2-55405	PAPER TROUGH, CENTER, ASSEMBLED - 32" CARRIAGE	
2-55406	PAPER TROUGH, RIGHT, ASSEMBLED - 32" CARRIAGE	
2-55411	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 11" CARRIAGE (O.S. - SUP. BY 2-55445)	
2-55412	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 13" CARRIAGE (O.S. - SUP. BY 2-55446)	
2-55413	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 15" CARRIAGE (O.S. - SUP. BY 2-55447)	
2-55414	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 20" CARRIAGE (O.S. - SUP. BY 2-55448)	
2-55416	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 27" CARRIAGE (O.S. - SUP. BY 2-55450)	
2-55417	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 32" CARRIAGE (O.S. - SUP. BY 2-55451)	
2-55428	CARRIAGE END, LEFT, ASSEMBLED (O.S. - SUP. BY 2-55463)	
2-55429	CARRIAGE END, RIGHT, ASSEMBLED (O.S. - SUP. BY 2-55464)	
2-55434	PAPER SCALE DETENT SPRING - 11" TO 15" CARRIAGES	
2-55435	PAPER SCALE DETENT SPRING - 20" TO 32" CARRIAGES	
2-55438	PAPER SCALE ARM SHAFT ASSEMBLED - 11" CARRIAGE	
2-55439	PAPER SCALE ARM SHAFT ASSEMBLED - 13" CARRIAGE	
2-55440	PAPER SCALE ARM SHAFT ASSEMBLED - 15" CARRIAGE	
2-55441	PAPER SCALE ARM SHAFT ASSEMBLED - 20" CARRIAGE	
2-55443	PAPER SCALE ARM SHAFT ASSEMBLED - 27" CARRIAGE	
2-55444	PAPER SCALE ARM SHAFT ASSEMBLED - 32" CARRIAGE	
2-55445	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 11" CARRIAGE	
2-55446	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 13" CARRIAGE	
2-55447	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 15" CARRIAGE	
2-55448	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 20" CARRIAGE	
2-55450	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 27" CARRIAGE	
2-55451	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 32" CARRIAGE	
2-55452	CARRIAGE RELEASE BLADE ASSEMBLED - 15" CARRIAGE	
2-55453	CARRIAGE RELEASE BLADE ASSEMBLED - 20" CARRIAGE	
2-55455	CARRIAGE RELEASE BLADE ASSEMBLED - 27" CARRIAGE	
2-55456	CARRIAGE RELEASE BLADE ASSEMBLED - 32" CARRIAGE	
2-55460	CARRIAGE TAPE HOOK	
2-55461	ALIGNING SCALE BRACKET, ASSEMBLED	
2-55462	CARRIAGE RELEASE BLADE SUPPORT - 15" TO 32" CARRIAGES	
2-55463	CARRIAGE END LEFT, ASSEMBLED	
2-55464	CARRIAGE END RIGHT, ASSEMBLED	
2-55465	PAPER BAIL SCALE SCREW	
2-55468	CARRIAGE END STOP SCREW	
2-55469	PAPER TABLE REAR COVER SUPPORT SCREW - 15", 20" AND 27" CARRIAGES	
2-55476	CARRIAGE SUPPORT RAIL - 11" CARRIAGE	
2-55477	CARRIAGE SUPPORT RAIL - 13" CARRIAGE	
2-55478	CARRIAGE SUPPORT RAIL - 15" CARRIAGE	
2-55479	CARRIAGE SUPPORT RAIL - 20" CARRIAGE	
2-55481	CARRIAGE SUPPORT RAIL - 27" CARRIAGE	
2-55482	CARRIAGE SUPPORT RAIL - 32" CARRIAGE	
2-55483	CARRIAGE SUPPORT RAIL NUT PLATE - 15" TO 32" CARRIAGES	
2-55484	CARRIAGE SUPPORT RAIL ROLLER STUD	
2-55485	CARRIAGE SUPPORT RAIL ROLLER, UPPER	
2-55486	CARRIAGE SUPPORT RAIL ROLLER STUD WASHER	
2-55487	CARRIAGE SUPPORT RAIL ROLLER WASHER	
2-55488	FEED RACK - 6, 8, 9 1/3, 10, 14, 16 SPACE - 11" CARRIAGE	
2-55489	FEED RACK - 6, 8, 9 1/3, 10, 14, 16 SPACE - 13" CARRIAGE	
	FEED RACK - 6, 8, 9 1/3, 10, 14, 16 SPACE - 15" CARRIAGE	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-55490	FEED RACK - 6, 8, 9 1/3, 10, 14, 16 SPACE - 20" CARRIAGE	
2-55492	FEED RACK - 6, 8, 9 1/3, 10, 14, 16 SPACE - 27" CARRIAGE	
2-55493	FEED RACK - 6, 8, 9 1/3, 10, 14, 16 SPACE - 32" CARRIAGE	
2-55494	FEED RACK - 12 SPACE - 11" CARRIAGE	
2-55495	FEED RACK - 12 SPACE - 13" CARRIAGE	
2-55496	FEED RACK - 12 SPACE - 15" CARRIAGE	
2-55497	FEED RACK - 12 SPACE - 20" CARRIAGE	
2-55499	FEED RACK - 12 SPACE - 27" CARRIAGE	
2-55500	FEED RACK - 12 SPACE - 32" CARRIAGE	
2-55501	CARRIAGE SUPPORT RAIL ROLLER, LOWER	
2-55502	CARRIAGE COMPLETE WITH PLATEN, 11" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET	
2-55503	CARRIAGE COMPLETE WITH PLATEN, 13" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET	
2-55504	CARRIAGE COMPLETE WITH PLATEN, 15" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET	
2-55505	CARRIAGE COMPLETE WITH PLATEN, 20" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET	
2-55507	CARRIAGE COMPLETE WITH PLATEN, 27" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET	
2-55508	CARRIAGE COMPLETE WITH PLATEN, 32" - SPECIFY LETTER SPACING, PLATEN GRADE NUMBER AND RATCHET	
2-56002	PLATEN LOCK, LEFT	
2-56003	PLATEN LOCK, RIGHT	
2-56008	PLATEN LOCK SPRING	
2-56010	CLUTCH OPERATING PLUNGER BUTTON, ASSEMBLED	
2-56012	PLATEN ROLL END BUSHING SUPPORT	
2-56013	PLATEN LOCK SCREW, LEFT	
2-56014	PLATEN LOCK ECCENTRIC	
2-56015	LINE SPACE REGULATOR DETENT ASSEMBLED (O.S. - SUP. BY 2-57091)	
2-56016	PLATEN SHAFT BUSHING, LEFT	
2-56017	PLATEN SHAFT BUSHING, RIGHT	
2-56019	PLATEN ROLL KNOB, LEFT, ASSEMBLED (GRAY) (O.S. - SUP. BY 2-56053)	
2-56053	PLATEN ROLL KNOB, LEFT, ASSEMBLED (GREEN)	
2-56103	PLATEN ROLL KNOB, RIGHT, ASSEMBLED (GREEN)	
2-56181	FEED RACK SUPPORT SCREW - 15" TO 32" CARRIAGES (O.S.)	
2-56181	PLATEN LOCK SCREW, RIGHT	
2-56182	PLATEN ROLL ASSEMBLED - GRADE 2C - 11" CARRIAGE	
2-56183	PLATEN ROLL ASSEMBLED - GRADE 2C - 13" CARRIAGE	
2-56184	PLATEN ROLL ASSEMBLED - GRADE 2C - 15" CARRIAGE	
2-56185	PLATEN ROLL ASSEMBLED - GRADE 3C - 11" CARRIAGE	
2-56186	PLATEN ROLL ASSEMBLED - GRADE 3C - 13" CARRIAGE	
2-56187	PLATEN ROLL ASSEMBLED - GRADE 3C - 15" CARRIAGE	
2-56188	PLATEN ROLL ASSEMBLED - GRADE 4C - 11" CARRIAGE	
2-56189	PLATEN ROLL ASSEMBLED - GRADE 4C - 13" CARRIAGE	
2-56190	PLATEN ROLL ASSEMBLED - GRADE 4C - 15" CARRIAGE	
2-56191	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 2C - 11" CARRIAGE	
2-56192	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 2C - 13" CARRIAGE	
2-56193	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 2C - 15" CARRIAGE	
2-56194	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2C - 11" CARRIAGE	
2-56195	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2C - 13" CARRIAGE	
2-56196	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2C - 15" CARRIAGE	
2-56197	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 2C - 11" CARRIAGE	
2-56198	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 2C - 13" CARRIAGE	
2-56199	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 2C - 15" CARRIAGE	
2-56200	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2C - 11" CARRIAGE	
2-56201	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2C - 13" CARRIAGE	
2-56202	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2C - 15" CARRIAGE	
2-56203	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 3C - 11" CARRIAGE	
2-56204	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 3C - 13" CARRIAGE	
2-56205	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 3C - 15" CARRIAGE	

REMINGTON STANDARD TYPEWRITER

PART NO.

DESCRIPTION

CABINET LOCATION

2-56206	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3C - 11" CARRIAGE	_____
2-56207	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3C - 13" CARRIAGE	_____
2-56208	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3C - 15" CARRIAGE	_____
2-56209	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 3C - 11" CARRIAGE	_____
2-56210	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 3C - 13" CARRIAGE	_____
2-56211	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 3C - 15" CARRIAGE	_____
2-56212	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3C - 11" CARRIAGE	_____
2-56213	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3C - 13" CARRIAGE	_____
2-56214	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3C - 15" CARRIAGE	_____
2-56215	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 4C - 11" CARRIAGE	_____
2-56216	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 4C - 13" CARRIAGE	_____
2-56217	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 4C - 15" CARRIAGE	_____
2-56218	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4C - 11" CARRIAGE	_____
2-56219	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4C - 13" CARRIAGE	_____
2-56220	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4C - 15" CARRIAGE	_____
2-56221	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 4C - 11" CARRIAGE	_____
2-56222	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 4C - 13" CARRIAGE	_____
2-56223	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 4C - 15" CARRIAGE	_____
2-56224	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4C - 11" CARRIAGE	_____
2-56225	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4C - 13" CARRIAGE	_____
2-56226	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4C - 15" CARRIAGE	_____
2-56227	PLATEN ROLL ASSEMBLED - GRADE 2 - 20" CARRIAGE	_____
2-56229	PLATEN ROLL ASSEMBLED - GRADE 2 - 27" CARRIAGE	_____
2-56230	PLATEN ROLL ASSEMBLED - GRADE 2 - 32" CARRIAGE	_____
2-56231	PLATEN ROLL ASSEMBLED - GRADE 3 - 20" CARRIAGE	_____
2-56233	PLATEN ROLL ASSEMBLED - GRADE 3 - 27" CARRIAGE	_____
2-56234	PLATEN ROLL ASSEMBLED - GRADE 3 - 32" CARRIAGE	_____
2-56235	PLATEN ROLL ASSEMBLED - GRADE 4 - 20" CARRIAGE	_____
2-56237	PLATEN ROLL ASSEMBLED - GRADE 4 - 27" CARRIAGE	_____
2-56238	PLATEN ROLL ASSEMBLED - GRADE 4 - 32" CARRIAGE	_____
2-56239	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 2 - 20" CARRIAGE	_____
2-56241	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 2 - 27" CARRIAGE	_____
2-56242	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 2 - 32" CARRIAGE	_____
2-56243	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2 - 20" CARRIAGE	_____
2-56245	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2 - 27" CARRIAGE	_____
2-56246	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2 - 32" CARRIAGE	_____
2-56247	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 2 - 20" CARRIAGE	_____
2-56249	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 2 - 27" CARRIAGE	_____
2-56250	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 2 - 32" CARRIAGE	_____
2-56251	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2 - 20" CARRIAGE	_____
2-56253	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2 - 27" CARRIAGE	_____
2-56254	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 2 - 32" CARRIAGE	_____
2-56255	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 3 - 20" CARRIAGE	_____
2-56257	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 3 - 27" CARRIAGE	_____
2-56258	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 3 - 32" CARRIAGE	_____
2-56259	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3 - 20" CARRIAGE	_____
2-56261	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3 - 27" CARRIAGE	_____
2-56262	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3 - 32" CARRIAGE	_____
2-56263	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 3 - 20" CARRIAGE	_____
2-56265	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 3 - 27" CARRIAGE	_____
2-56266	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 3 - 32" CARRIAGE	_____
2-56267	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3 - 20" CARRIAGE	_____
2-56269	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3 - 27" CARRIAGE	_____
2-56270	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 3 - 32" CARRIAGE	_____
2-56271	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 4 - 20" CARRIAGE	_____

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-56273	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 4 - 27" CARRIAGE	
2-56274	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - GRADE 4 - 32" CARRIAGE	
2-56275	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4 - 20" CARRIAGE	
2-56277	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4 - 27" CARRIAGE	
2-56278	PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4 - 32" CARRIAGE	
2-56279	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 4 - 20" CARRIAGE	
2-56281	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 4 - 27" CARRIAGE	
2-56282	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - GRADE 4 - 32" CARRIAGE	
2-56283	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4 - 20" CARRIAGE	
2-56285	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4 - 27" CARRIAGE	
2-56286	PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL, SPECIFY TEETH - GRADE 4 - 32" CARRIAGE	
2-56307	PLATEN END BUSHING SUPPORT SCREW, RIGHT	
2-57000	LINE SPACE LEVER BRACKET	
2-57001	LINE SPACE GAUGE (1-2-3) (O.S. - SUP. BY 2-57022)	
2-57002	LINE SPACE REGULATOR - 30 TOOTH	
2-57003	LINE SPACE LEVER STOP SPRING	
2-57004	LINE SPACE DETENT SPRING ANCHOR	
2-57005	LINE SPACE GAUGE - 20 TO 25 TEETH (1-2) (O.S. - SUP. BY 2-57023)	
2-57006	LINE SPACE GAUGE - 39 TO 41 TEETH (1-2-3-4) (O.S. - SUP. BY 2-57024)	
2-57007	LINE SPACE GAUGE - 42 TO 51 TEETH (2-3-4-5) (O.S. - SUP. BY 2-57025)	
2-57008	LINE SPACE GAUGE - 52 TOOTH (2-3-4-5) (O.S. - SUP. BY 2-57026)	
2-57009	LINE SPACE GAUGE - 57 TO 65 TEETH (2-3-4-5-6) (O.S. - SUP. BY 2-57027)	
2-57010	LINE SPACE PAWL ARM	
2-57013	LINE SPACE RATCHET DETENT RELEASE LEVER	
2-57014	LINE SPACE RATCHET DETENT RELEASE LEVER SCREW (O.S.)	
2-57015	LINE SPACE RATCHET DETENT ARM BEARING (O.S. - SUP. BY 2-57090)	
2-57017	ALIGNING SCALE BRACKET, HEAVY DUTY, SCREW (O.S.) - SPECIAL EQUIPMENT	
2-57018	LINE SPACE REGULATOR DETENT BUSHING (O.S. - SUP. BY 2-57092)	
2-57019	LINE SPACE LEVER STUD	
2-57020	LINE SPACE RATCHET DETENT RELEASE LEVER WASHER (O.S.)	
2-57021	LINE SPACE PAWL ARM SPRING	
2-57022	LINE SPACE GAUGE - GREEN - 26 TO 37 TEETH (STAMPING 1-2-3)	
2-57023	LINE SPACE GAUGE - GREEN - 20 TO 25 TEETH (STAMPING 1-2)	
2-57024	LINE SPACE GAUGE - GREEN - 39 TO 41 TEETH (STAMPING 1-2-3-4)	
2-57025	LINE SPACE GAUGE - GREEN - 42 TO 51 TEETH (STAMPING 2-3-4-5)	
2-57026	LINE SPACE GAUGE - GREEN - 52 TOOTH (STAMPING 2-3-4-5)	
2-57027	LINE SPACE GAUGE - GREEN - 57 TO 65 TEETH (STAMPING 2-3-4-5-6)	
2-57032	LINE SPACE RATCHET DETENT LEVER SPRING - 20 TO 44 TEETH - 11" TO 15" CARRIAGES	
2-57033	LINE SPACE RATCHET DETENT LEVER SPRING - 45 TO 65 TEETH - 11" TO 15" CARRIAGES	
2-57033	LINE SPACE RATCHET DETENT LEVER SPRING - 20" TO 32" CARRIAGES	
2-57034	LINE SPACE LEVER STUD KEEPER	
2-57034	TYPE BAR RESTORER KEEPER	
2-57035	LINE SPACE LEVER	
2-57041	LINE SPACE PAWL ARM COMPLETE - 20 TOOTH	
2-57042	LINE SPACE PAWL ARM COMPLETE - 21 TOOTH	
2-57043	LINE SPACE PAWL ARM COMPLETE - 22 TOOTH	
2-57044	LINE SPACE PAWL ARM COMPLETE - 23 TOOTH	
2-57046	LINE SPACE PAWL ARM COMPLETE - 25 TOOTH	
2-57047	LINE SPACE PAWL ARM COMPLETE - 26 AND 36 TEETH	
2-57048	LINE SPACE PAWL ARM COMPLETE - 27 TOOTH	
2-57049	LINE SPACE PAWL ARM COMPLETE - 28 TOOTH	
2-57050	LINE SPACE PAWL ARM COMPLETE - 29 TOOTH	
2-57051	LINE SPACE PAWL ARM COMPLETE - 35, 37, 42 AND 52 TEETH	
2-57052	LINE SPACE PAWL ARM COMPLETE - 31 TOOTH	
2-57053	LINE SPACE PAWL ARM COMPLETE - 32 TOOTH	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-57054	LINE SPACE PAWL ARM COMPLETE - 33 TOOTH	
2-57060	LINE SPACE PAWL ARM COMPLETE - 34, 39 AND 44 TEETH	
2-57061	LINE SPACE PAWL ARM COMPLETE - 40 AND 51 TEETH	
2-57062	LINE SPACE PAWL ARM COMPLETE - 41 TOOTH	
2-57066	LINE SPACE PAWL ARM COMPLETE - 45 AND 50 TEETH	
2-57078	LINE SPACE PAWL ARM COMPLETE - 57 TOOTH	
2-57079	LINE SPACE PAWL ARM COMPLETE - 58 TOOTH	
2-57081	LINE SPACE PAWL ARM COMPLETE - 60 TOOTH	
2-57086	LINE SPACE PAWL ARM COMPLETE - 65 TOOTH	
2-57087	LINE SPACE PAWL ARM SCREW STUD	
2-57089	LINE SPACE PAWL ARM, ASSEMBLED	
2-57090	LINE SPACE RATCHET DETENT ARM ECCENTRIC SCREW	
2-57091	LINE SPACE REGULATOR DETENT, ASSEMBLED	
2-57092	LINE SPACE REGULATOR DETENT BUSHING	
2-57093	LINE SPACE REGULATOR DETENT ARM SPACER	
2-57093	SPACE BAR UPSTOP SPACER	
2-57094	LINE SPACE PAWL SPRING - 30 TOOTH	
2-57096	LINE SPACE PAWL - 30 TOOTH	
2-57097	LINE SPACE PAWL ARM COMPLETE - 30 TOOTH	
2-57100	PAPER FEED ROLL ARM, LEFT, ASSEMBLED (O.S. - SUP. BY 2-57128)	
2-57101	PAPER FEED ROLL ARM, RIGHT, ASSEMBLED (O.S. - SUP. BY 2-57128)	
2-57102	PAPER FEED ROLL ARM, REAR, LEFT, ASSEMBLED (O.S. - SUP. BY 2-57130)	
2-57103	PAPER FEED ROLL ARM, REAR, RIGHT, ASSEMBLED (O.S. - SUP. BY 2-57130)	
2-57106	PAPER FEED ROLL RELEASE LEVER	
2-57107	FEED ROLL SPRING ADJUSTING SCREW	
2-57108	PAPER FEED ROLL ARM FULCRUM SHAFT (O.S. - SUP. BY 2-57127)	
2-57109	FRONT FEED ROLL SPRING	
2-57111	REAR FEED ROLL SPRING	
2-57112	REAR FEED ROLL CENTER SPRING - 20" CARRIAGE	
2-57113	PAPER FEED ROLL RELEASE SHAFT ASSEMBLED - 11" CARRIAGE	
2-57114	PAPER FEED ROLL RELEASE SHAFT ASSEMBLED - 13" CARRIAGE	
2-57115	PAPER FEED ROLL RELEASE SHAFT ASSEMBLED - 15" CARRIAGE	
2-57116	PAPER FEED ROLL RELEASE SHAFT ASSEMBLED - 20" CARRIAGE	
2-57118	PAPER FEED ROLL RELEASE SHAFT ASSEMBLED - 27" CARRIAGE	
2-57119	PAPER FEED ROLL RELEASE SHAFT ASSEMBLED - 32" CARRIAGE	
2-57123	PAPER FEED ROLL ARM REAR, ASSEMBLED, LEFT, CENTER - 20" CARRIAGE (O.S. - SUP. BY 2-57129)	
2-57124	PAPER FEED ROLL ARM REAR, ASSEMBLED, RIGHT, CENTER - 20" CARRIAGE (O.S. - SUP. BY 2-57129)	
2-57126	PAPER FEED ROLL, FRONT ASSEMBLED - 11" TO 32" CARRIAGES	
2-57127	PAPER FEED ROLL ARM FULCRUM SHAFT	
2-57128	PAPER FEED ROLL ARM, FRONT	
2-57129	PAPER FEED ROLL ARM, REAR, CENTER - 20" CARRIAGE	
2-57130	PAPER FEED ROLL ARM, REAR	
2-57201	ESCAPEMENT ROCKER BRACKET ASSEMBLED (O.S. - SUP. BY 2-57229)	
2-57202	ESCAPEMENT ROCKER BRACKET MOUNTING SCREW	
2-57203	ESCAPEMENT ROCKER SUPPORT PLATE (O.S.)	
2-57204	ESCAPEMENT BRACKET SILENCER	
2-57205	ESCAPEMENT ROCKER SPRING	
2-57211	ESCAPEMENT OPERATING BAIL COMPLETE - 1 KEY TABULATOR	
2-57212	ESCAPEMENT ROCKER STOP SCREW, LOWER	
2-57214	ESCAPEMENT OPERATING BAIL COMPLETE - 10 KEY TABULATOR	
2-57216	ESCAPEMENT LOOSE DOG, ASSEMBLED	
2-57218	ESCAPEMENT WHEEL ASSEMBLED - 6 SPACE	
2-57219	ESCAPEMENT WHEEL ASSEMBLED - 8 SPACE	
2-57220	ESCAPEMENT WHEEL ASSEMBLED - 9 1/3 SPACE	
2-57221	ESCAPEMENT WHEEL ASSEMBLED - 10 SPACE	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-57222	ESCAPEMENT WHEEL ASSEMBLED - 14 SPACE	
2-57223	ESCAPEMENT WHEEL ASSEMBLED - 16 SPACE	
2-57225	ESCAPEMENT WHEEL ASSEMBLED - 12 SPACE	
2-57226	ESCAPEMENT WHEEL BEARING SCREW	
2-57229	ESCAPEMENT ROCKER BRACKET, ASSEMBLED	
2-57230	ESCAPEMENT WHEEL BEARING SCREW WASHER	
2-57501	MARGIN STOP SEPARATOR (O.S.)	
2-57504	MARGIN STOP ASSEMBLED (O.S. - SUP. BY 2-57550)	
2-57509	MARGIN SET KEY LEVER ASSEMBLED (O.S.)	
2-57512	MARGIN SET BELL CRANK LINK ASSEMBLED (O.S.)	
2-57516	MARGIN RELEASE BELL CRANK ASSEMBLED (O.S.)	
2-57517	MARGIN RELEASE KEY LEVER ASSEMBLED (O.S. - SUP. BY 2-57660)	
2-57521	MARGIN SET AND RELEASE CAM SHAFT, ASSEMBLED (O.S. - SUP. BY 2-57543)	
2-57522	MARGIN SET AND RELEASE CAM SHAFT SCREW (O.S. - SUP. BY 3-7103)	
2-57523	MARGIN STOP SET AND RELEASE BLADE LINK (O.S. - SUP. BY 2-57666)	
2-57524	MARGIN STOP, SET AND RELEASE BLADE LINK ECCENTRIC (O.S.)	
2-57525	MARGIN SET AND RELEASE STOP (O.S.)	
2-57534	MARGIN SET BELL CRANK SPRING (O.S.)	
2-57535	MARGIN RELEASE CAM SPRING (O.S.)	
2-57536	MARGIN SET AND RELEASE EQUALIZER SPRING (O.S.)	
2-57537	MARGIN BLADE BUFFER SPRING (O.S. - SUP. BY 2-57618)	
2-57538	MARGIN RELEASE KEY LEVER SPRING	
2-57539	MARGIN SET KEY CAP (GREEN) 1 KEY TABULATOR (O.S. - SUP. BY 2-51959)	
2-57540	MARGIN RELEASE KEY CAP (GREEN) 42 AND 46 KEY MACHINE (O.S.)	
2-57541	MARGIN BLADE BUFFER CUSHION	
2-57542	MARGIN BLADE BUFFER CUSHION SCREW	
2-57543	MARGIN SET AND RELEASE CAM SHAFT ASSEMBLED (O.S. - SUP. BY 2-57665)	
2-57544	MARGIN STOP, SET, RELEASE BLADE, ASSEMBLED (O.S. - SUP. BY 2-57551)	
2-57550	MARGIN STOP, COMPLETE (O.S. - SUP. BY 2-57602, LEFT AND 2-57603, RIGHT)	
2-57551	MARGIN STOP, SET, RELEASE BLADE, ASSEMBLED (O.S. - SUP. BY 2-57667)	
2-57553	MARGIN STOP RACK - 6 SPACE - 11" CARRIAGE	
2-57554	MARGIN STOP RACK - 6 SPACE - 13" CARRIAGE	
2-57555	MARGIN STOP RACK - 6 SPACE - 15" CARRIAGE	
2-57556	MARGIN STOP RACK - 6 SPACE - 20" CARRIAGE	
2-57558	MARGIN STOP RACK - 6 SPACE - 27" CARRIAGE	
2-57559	MARGIN STOP RACK - 6 SPACE - 32" CARRIAGE	
2-57560	MARGIN STOP RACK - 8 AND 16 SPACE - 11" CARRIAGE	
2-57561	MARGIN STOP RACK - 8 AND 16 SPACE - 13" CARRIAGE	
2-57562	MARGIN STOP RACK - 8 AND 16 SPACE - 15" CARRIAGE	
2-57563	MARGIN STOP RACK - 8 AND 16 SPACE - 20" CARRIAGE	
2-57565	MARGIN STOP RACK - 8 AND 16 SPACE - 27" CARRIAGE	
2-57566	MARGIN STOP RACK - 8 AND 16 SPACE - 32" CARRIAGE	
2-57567	MARGIN STOP RACK - 9 1/3 SPACE - 11" CARRIAGE	
2-57568	MARGIN STOP RACK - 9 1/3 SPACE - 13" CARRIAGE	
2-57569	MARGIN STOP RACK - 9 1/3 SPACE - 15" CARRIAGE	
2-57570	MARGIN STOP RACK - 9 1/3 SPACE - 20" CARRIAGE	
2-57572	MARGIN STOP RACK - 9 1/3 SPACE - 27" CARRIAGE	
2-57573	MARGIN STOP RACK - 9 1/3 SPACE - 32" CARRIAGE	
2-57574	MARGIN STOP RACK - 10 SPACE - 11" CARRIAGE	
2-57575	MARGIN STOP RACK - 10 SPACE - 13" CARRIAGE	
2-57576	MARGIN STOP RACK - 10 SPACE - 15" CARRIAGE	
2-57577	MARGIN STOP RACK - 10 SPACE - 20" CARRIAGE	
2-57579	MARGIN STOP RACK - 10 SPACE - 27" CARRIAGE	
2-57580	MARGIN STOP RACK - 10 SPACE - 32" CARRIAGE	
2-57581	MARGIN STOP RACK - 12 SPACE - 11" CARRIAGE	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-57582	MARGIN STOP RACK - 12 SPACE - 13" CARRIAGE	_____
2-57583	MARGIN STOP RACK - 12 SPACE - 15" CARRIAGE	_____
2-57584	MARGIN STOP RACK - 12 SPACE - 20" CARRIAGE	_____
2-57586	MARGIN STOP RACK - 12 SPACE - 27" CARRIAGE	_____
2-57587	MARGIN STOP RACK - 12 SPACE - 32" CARRIAGE	_____
2-57588	MARGIN STOP RACK - 14 SPACE - 11" CARRIAGE	_____
2-57589	MARGIN STOP RACK - 14 SPACE - 13" CARRIAGE	_____
2-57590	MARGIN STOP RACK - 14 SPACE - 15" CARRIAGE	_____
2-57591	MARGIN STOP RACK - 14 SPACE - 20" CARRIAGE	_____
2-57593	MARGIN STOP RACK - 14 SPACE - 27" CARRIAGE	_____
2-57594	MARGIN STOP RACK - 14 SPACE - 32" CARRIAGE	_____
2-57595	MARGIN STOP RACK SPACER - 15" TO 32" CARRIAGES	_____
2-57596	MARGIN STOP RACK BRACKET - 15" TO 32" CARRIAGES	_____
2-57597	MARGIN STOP SLIDE SPRING	_____
2-57602	MARGIN STOP ASSEMBLED, LEFT	_____
2-57603	MARGIN STOP ASSEMBLED, RIGHT	_____
2-57618	MARGIN BLADE BUFFER SPRING	_____
2-57619	MARGIN STOP SCALE ASSEMBLED - 8 SPACE - 13" CARRIAGE	_____
2-57620	MARGIN STOP SCALE ASSEMBLED - 9 1/3 SPACE - 13" CARRIAGE	_____
2-57621	MARGIN STOP SCALE ASSEMBLED - 10 SPACE - 13" CARRIAGE	_____
2-57622	MARGIN STOP SCALE ASSEMBLED - 12 SPACE - 13" CARRIAGE	_____
2-57623	MARGIN STOP SCALE ASSEMBLED - 14 SPACE - 13" CARRIAGE	_____
2-57624	MARGIN STOP SCALE ASSEMBLED - 16 SPACE - 13" CARRIAGE	_____
2-57625	MARGIN STOP SCALE ASSEMBLED - 6 SPACE - 15" CARRIAGE	_____
2-57626	MARGIN STOP SCALE ASSEMBLED - 8 SPACE - 15" CARRIAGE	_____
2-57627	MARGIN STOP SCALE ASSEMBLED - 9 1/3 SPACE - 15" CARRIAGE	_____
2-57628	MARGIN STOP SCALE ASSEMBLED - 10 SPACE - 15" CARRIAGE	_____
2-57629	MARGIN STOP SCALE ASSEMBLED - 12 SPACE - 15" CARRIAGE	_____
2-57630	MARGIN STOP SCALE ASSEMBLED - 14 SPACE - 15" CARRIAGE	_____
2-57631	MARGIN STOP SCALE ASSEMBLED - 16 SPACE - 15" CARRIAGE	_____
2-57632	MARGIN STOP SCALE ASSEMBLED - 6 SPACE - 20" CARRIAGE	_____
2-57633	MARGIN STOP SCALE ASSEMBLED - 8 SPACE - 20" CARRIAGE	_____
2-57634	MARGIN STOP SCALE ASSEMBLED - 9 1/3 SPACE - 20" CARRIAGE	_____
2-57635	MARGIN STOP SCALE ASSEMBLED - 10 SPACE - 20" CARRIAGE	_____
2-57636	MARGIN STOP SCALE ASSEMBLED - 12 SPACE - 20" CARRIAGE	_____
2-57637	MARGIN STOP SCALE ASSEMBLED - 14 SPACE - 20" CARRIAGE	_____
2-57638	MARGIN STOP SCALE ASSEMBLED - 16 SPACE - 20" CARRIAGE	_____
2-57646	MARGIN STOP SCALE ASSEMBLED - 6 SPACE - 27" CARRIAGE	_____
2-57647	MARGIN STOP SCALE ASSEMBLED - 8 SPACE - 27" CARRIAGE	_____
2-57648	MARGIN STOP SCALE ASSEMBLED - 9 1/3 SPACE - 27" CARRIAGE	_____
2-57649	MARGIN STOP SCALE ASSEMBLED - 10 SPACE - 27" CARRIAGE	_____
2-57650	MARGIN STOP SCALE ASSEMBLED - 12 SPACE - 27" CARRIAGE	_____
2-57651	MARGIN STOP SCALE ASSEMBLED - 14 SPACE - 27" CARRIAGE	_____
2-57652	MARGIN STOP SCALE ASSEMBLED - 16 SPACE - 27" CARRIAGE	_____
2-57653	MARGIN STOP SCALE ASSEMBLED - 6 SPACE - 32" CARRIAGE	_____
2-57654	MARGIN STOP SCALE ASSEMBLED - 8 SPACE - 32" CARRIAGE	_____
2-57655	MARGIN STOP SCALE ASSEMBLED - 9 1/3 SPACE - 32" CARRIAGE	_____
2-57656	MARGIN STOP SCALE ASSEMBLED - 10 SPACE - 32" CARRIAGE	_____
2-57657	MARGIN STOP SCALE ASSEMBLED - 12 SPACE - 32" CARRIAGE	_____
2-57658	MARGIN STOP SCALE ASSEMBLED - 14 SPACE - 32" CARRIAGE	_____
2-57659	MARGIN STOP SCALE ASSEMBLED - 16 SPACE - 32" CARRIAGE	_____
2-57660	MARGIN RELEASE KEY LEVER, ASSEMBLED	_____
2-57662	MARGIN RELEASE KEY LEVER LINK	_____
2-57665	MARGIN RELEASE SHAFT, COMPLETE	_____
2-57666	MARGIN RELEASE BLADE LINK	_____

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-57667	MARGIN STOP RELEASE BLADE, ASSEMBLED	
2-57670	MARGIN STOP RACK BRACKET NUT PLATE - 15" TO 32" CARRIAGES	
2-57672	MARGIN STOP SCALE ASSEMBLED - 6 SPACE - 11" CARRIAGE	
2-57673	MARGIN STOP SCALE ASSEMBLED - 8 SPACE - 11" CARRIAGE	
2-57674	MARGIN STOP SCALE ASSEMBLED - 9 1/3 SPACE - 11" CARRIAGE	
2-57675	MARGIN STOP SCALE ASSEMBLED - 10 SPACE - 11" CARRIAGE	
2-57676	MARGIN STOP SCALE ASSEMBLED - 12 SPACE - 11" CARRIAGE	
2-57677	MARGIN STOP SCALE ASSEMBLED - 14 SPACE - 11" CARRIAGE	
2-57678	MARGIN STOP SCALE ASSEMBLED - 16 SPACE - 11" CARRIAGE	
2-57679	MARGIN STOP SCALE ASSEMBLED - 6 SPACE - 13" CARRIAGE	
2-58000	RIBBON ACTUATOR ARM BRACKET ASSEMBLED	
2-58004	RIBBON DRIVE RATCHET (O.S.)	
2-58018	RIBBON CONTROL LEVER DETENT SPRING SPACER	
2-58021	RIBBON CONTROL SHAFT ARM, ASSEMBLED	
2-58024	RIBBON CONTROL SHAFT LEVER ASSEMBLED	
2-58033	KEY TENSION REGULATOR LEVER KNOB	
2-58033	RIBBON CONTROL LEVER KNOB	
2-58033	RIBBON DRIVE SHAFT SHIFT LEVER KNOB	
2-58036	RIBBON UNIVERSAL BAR ASSEMBLED - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-58107)	
2-58037	RIBBON LIFT PUSH LINK BELL CRANK ASSEMBLED	
2-58038	RIBBON CONTROL LEVER COMPLETE	
2-58039	RIBBON SPOOL SHAFT BRACKET, LEFT AND RIGHT	
2-58046	RIBBON DRIVE SHAFT ASSEMBLED (O.S. - SUP. BY 2-58098)	
2-58064	RIBBON DRIVE SHAFT SHIFT LEVER	
2-58070	RIBBON FEED TOGGLE ARM, ASSEMBLED (O.S.)	
2-58073	RIBBON FEED LINK (O.S.)	
2-58081	RIBBON DRIVE SHAFT DETENT COLLAR	
2-58085	RIBBON FEED PAWL ARM COMPLETE (O.S.)	
2-58086	RIBBON REVERSE DETENT PLATE ASSEMBLED (O.S. - SUP. BY 2-58100)	
2-58087	RIBBON SPOOL SHAFT PINION (O.S. - SUP. BY 2-42310)	
2-58088	RIBBON RETAINING PAWL SPRING (O.S.)	
2-58094	RIBBON ACTUATOR ARM UP STOP LOCK SPRING	
2-58098	RIBBON DRIVE SHAFT, ASSEMBLED	
2-58100	RIBBON REVERSE DETENT PLATE, ASSEMBLED	
2-58107	RIBBON UNIVERSAL BAR, ASSEMBLED - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-58130)	
2-58107	RIBBON UNIVERSAL BAR, ASSEMBLED - 46 KEY MACHINE	
2-58110	SPRING DRUM PINION SHAFT	
2-58111	SPRING DRUM PINION SHAFT WASHER, REAR	
2-58113	SPRING DRUM PINION SUPPORT BRACKET, ASSEMBLED	
2-58115	SPRING DRUM PINION SUPPORT BRACKET SPRING	
2-58118	RIBBON UNIVERSAL BAR SPRING - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-58128)	
2-58119	RIBBON DRIVE GEAR BUSHING	
2-58120	RIBBON DRIVE GEAR THRUST BUSHING	
2-58121	RIBBON DRIVE GEAR BUSHING NUT	
2-58122	RIBBON DRIVE GEAR, ASSEMBLED	
2-58128	RIBBON UNIVERSAL BAR SPRING - 42 AND 44 KEY MACHINES (O.S. - SUP. BY 2-58132)	
2-58130	RIBBON UNIVERSAL BAR ASSEMBLED - 42 AND 44 KEY MACHINES	
2-58132	RIBBON UNIVERSAL BAR SPRING - 42 AND 44 KEY MACHINES	
2-58133	RIBBON COLOR MARKER	
2-58501	LINE LOCK OPERATING LEVER (O.S. - SUP. BY 2-58511)	
2-58502	LINE LOCK PUSH BAR	
2-58503	LINE LOCK UNIVERSAL BAR	
2-58507	LINE LOCK ADJUSTING PLATE ECCENTRIC	
2-58508	LINE LOCK ADJUSTING PLATE (O.S. - SUP. BY 2-58512)	
2-58509	LINE LOCK BELL CRANK SPRING	

REMINGTON STANDARD TYPEWRITER

PART NO.	DESCRIPTION	CABINET LOCATION
2-58510	LINE LOCK UNIVERSAL BAR SPRING	_____
2-58511	LINE LOCK OPERATING LEVER	_____
2-58512	LINE LOCK ADJUSTING PLATE	_____
2-58720	LINE SPACE REGULATOR - 20 TOOTH	_____
2-58721	LINE SPACE REGULATOR - 21 TOOTH	_____
2-58722	LINE SPACE REGULATOR - 22 TOOTH	_____
2-58723	LINE SPACE REGULATOR - 23 TOOTH	_____
2-58725	LINE SPACE REGULATOR - 25 TOOTH	_____
2-58726	LINE SPACE REGULATOR - 26 TOOTH	_____
2-58727	LINE SPACE REGULATOR - 27 TOOTH	_____
2-58728	LINE SPACE REGULATOR - 28 TOOTH	_____
2-58729	LINE SPACE REGULATOR - 29 TOOTH	_____
2-58731	LINE SPACE REGULATOR - 31 TOOTH	_____
2-58732	LINE SPACE REGULATOR - 32 TOOTH	_____
2-58733	LINE SPACE REGULATOR - 33 TOOTH	_____
2-58734	LINE SPACE REGULATOR - 34 TOOTH	_____
2-58735	LINE SPACE REGULATOR - 35 TOOTH	_____
2-58736	LINE SPACE REGULATOR - 36 TOOTH	_____
2-59737	LINE SPACE REGULATOR - 37 TOOTH	_____
2-58739	LINE SPACE REGULATOR - 39 TOOTH	_____
2-58740	LINE SPACE REGULATOR - 40 TOOTH	_____
2-58741	LINE SPACE REGULATOR - 41 TOOTH	_____
2-58742	LINE SPACE REGULATOR - 42 TOOTH	_____
2-58744	LINE SPACE REGULATOR - 44 TOOTH	_____
2-58745	LINE SPACE REGULATOR - 45 TOOTH	_____
2-58751	LINE SPACE REGULATOR - 51 TOOTH	_____
2-58752	LINE SPACE REGULATOR - 52 TOOTH	_____
2-58757	LINE SPACE REGULATOR - 57 TOOTH	_____
2-58758	LINE SPACE REGULATOR - 58 TOOTH	_____
2-58760	LINE SPACE REGULATOR - 60 TOOTH	_____
2-58765	LINE SPACE REGULATOR - 65 TOOTH	_____
2-58766	LINE SPACE RATCHET DETENT ROLL RETAINING RING, SMALL	_____
2-58769	LINE SPACE RATCHET DETENT ARM ASSEMBLED, COMPLETE - SPECIFY NO. OF RATCHET TEETH REQUIRED	_____

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
ACCESSORIES

PART NO.	DESCRIPTION	CABINET LOCATION
2-40108	RUBBER FOOT DESK FASTENER SCREW	_____
2-40424	FRAME SUPPORT NUT - 27" AND 32" CARRIAGES	_____
2-40934	FRAME SUPPORT SPACER - 27" AND 32" CARRIAGES	_____
2-50000	RUBBER FOOT DESK FASTENER, FRONT	_____
2-50001	RUBBER FOOT DESK FASTENER, REAR	_____
2-50002	RUBBER FOOT SPACING WASHER (O.S.)	_____
2-50003	RUBBER FOOT SHELL BAND	_____
2-50021	TYPEWRITER FOOT SCREW, REAR - 27" AND 32" CARRIAGES	_____
2-51377	TYPEWRITER FOOT SHELL	_____
2-51378	TYPEWRITER FOOT SCREW	_____
2-51379	TYPEWRITER FOOT RUBBER	_____
2-51426	FRAME SUPPORT SCREW - 27" AND 32" CARRIAGES	_____
2-58630	ACCESSORY ENVELOPE, ASSEMBLED - 11", 13", 15" AND 20" CARRIAGES (DOMESTIC) MADE UP OF THE FOLLOWING -	_____
2-51377	TYPEWRITER FOOT SHELL	
2-51378	TYPEWRITER FOOT SCREW	
2-51379	TYPEWRITER FOOT RUBBER	
2-58631	ACCESSORY ENVELOPE, ASSEMBLED - 27" AND 32" CARRIAGES (DOMESTIC) MADE UP OF THE FOLLOWING -	_____
2-40424	FRAME SUPPORT NUT	
2-50021	TYPEWRITER FOOT SCREW, REAR	
2-51377	TYPEWRITER FOOT SHELL	
2-51378	TYPEWRITER FOOT SCREW, FRONT	
2-51379	TYPEWRITER FOOT RUBBER	
2-51426	FRAME SUPPORT SCREW	
2-58632	ACCESSORY BOX, ASSEMBLED - 11", 13", 15" AND 20" CARRIAGES (FOREIGN) MADE UP OF THE FOLLOWING -	_____
2-40108	RUBBER FOOT DESK FASTENER SCREW	
2-44251	TYPE BRUSH	
2-44253	BOTTLE OF OIL (IN CARTON)	
2-44254	TYPEWRITER BRUSH	
2-44256	TOUCH OILER	
2-50000	RUBBER FOOT DESK FASTENER, FRONT	
2-50001	RUBBER FOOT DESK FASTENER, REAR	
2-50003	RUBBER FOOT SHELL BAND	
2-51377	TYPEWRITER FOOT SHELL	
2-51378	TYPEWRITER FOOT SCREW	
2-51379	TYPEWRITER FOOT RUBBER	
2-58633	ACCESSORY BOX, ASSEMBLED - 27" AND 32" CARRIAGES (FOREIGN) MADE UP OF THE FOLLOWING -	_____
2-40108	RUBBER FOOT DESK FASTENER SCREW	
2-40424	FRAME SUPPORT NUT	
2-44251	TYPE BRUSH	
2-44253	BOTTLE OF OIL (IN CARTON)	
2-44254	TYPEWRITER BRUSH	
2-44256	TOUCH OILER	
2-50000	RUBBER FOOT DESK FASTENER, FRONT	
2-50001	RUBBER FOOT DESK FASTENER, REAR	
2-50003	RUBBER FOOT SHELL BAND	
2-50021	TYPEWRITER FOOT SCREW, REAR	
2-51377	TYPEWRITER FOOT SHELL	
2-51378	TYPEWRITER FOOT SCREW, FRONT	
2-51379	TYPEWRITER FOOT RUBBER	
2-51426	FRAME SUPPORT SCREW	

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
ACCESSORIES (CONTINUED)

PART NO.	DESCRIPTION	CABINET LOCATION
2-58634	ACCESSORY BOX, ASSEMBLED - 11", 13", 15" AND 20" CARRIAGES (SWITZERLAND) MADE UP OF THE FOLLOWING -	
2-44251	TYPE BRUSH	
2-44253	BOTTLE OF OIL (IN CARTON)	
2-44254	TYPEWRITER BRUSH	
2-44256	TOUCH OILER	
2-51377	TYPEWRITER FOOT SHELL	
2-51378	TYPEWRITER FOOT SCREW	
2-51379	TYPEWRITER FOOT RUBBER	
2-58635	ACCESSORY BOX, ASSEMBLED - 11", 13", 15" AND 20" CARRIAGES (FOREIGN - SPECIAL) MADE UP OF THE FOLLOWING -	
2-40108	RUBBER FOOT DESK FASTENER SCREW	
2-44256	TOUCH OILER	
2-50000	RUBBER FOOT DESK FASTENER, FRONT	
2-50001	RUBBER FOOT DESK FASTENER, REAR	
2-50003	RUBBER FOOT SHELL BAND	
2-51377	TYPEWRITER FOOT SHELL	
2-51378	TYPEWRITER FOOT SCREW	
2-51379	TYPEWRITER FOOT RUBBER	
2-58636	ACCESSORY BOX, ASSEMBLED - 27" AND 32" CARRIAGES (FOREIGN - SPECIAL) MADE UP OF THE FOLLOWING -	
2-40108	RUBBER FOOT DESK FASTENER SCREW	
2-40424	FRAME SUPPORT NUT	
2-44256	TOUCH OILER	
2-50000	RUBBER FOOT DESK FASTENER, FRONT	
2-50001	RUBBER FOOT DESK FASTENER, REAR	
2-50003	RUBBER FOOT SHELL BAND	
2-50021	TYPEWRITER FOOT SCREW, REAR	
2-51377	TYPEWRITER FOOT SHELL	
2-51378	TYPEWRITER FOOT SCREW, FRONT	
2-51379	TYPEWRITER FOOT RUBBER	
2-51426	FRAME SUPPORT SCREW	
DESK MOUNTING AND EXTENSION FEET		
2-50002	DESK MOUNTING PLATE WASHER	
2-50007	DESK MOUNTING PLATE	
2-50014	TYPEWRITER FOOT EXTENSION - $\frac{1}{2}$ "	
2-50015	TYPEWRITER FOOT EXTENSION - 1"	
2-50021	DESK MOUNTING PLATE FOOT SCREW	

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT

CARD ATTACHMENT PLATEN ROLL - AUTOMATIC DUPLEX

PART NO.	DESCRIPTION	CABINET LOCATION
2-40110	CARD ATTACHMENT PLATEN ROLL CUP RETAINER COLLAR SCREW	
2-40965	CARD ATTACHMENT PLATEN ROLL CUP WASHER	
2-45102	CARD ATTACHMENT PLATEN ROLL CUP	
2-46400	CARD PLATEN ROLL CAM ASSEMBLED	
2-46431	CARD ATTACHMENT PLATEN ROLL CUP RETAINER COLLAR	
2-46432	CARD ATTACHMENT STRIP SCREW	
2-46433	CARD ATTACHMENT PLATEN ROLL HEAD SCREW - 11" TO 20" CARRIAGES	
2-46434	CARD ATTACHMENT PLATEN ROLL SHAFT SCREW - 11" TO 20" CARRIAGES	
2-50023	CARD PLATEN ROLL WITHOUT KNOBS & RATCHET-11" AUTOMATIC DUPLEX WITH 1, 8" INBUILT CARD STRIP	
2-50024	CARD PLATEN ROLL WITHOUT KNOBS & RATCHET-13" AUTOMATIC DUPLEX WITH 1, 8" INBUILT CARD STRIP	
2-50025	CARD PLATEN ROLL WITHOUT KNOBS & RATCHET-15" AUTOMATIC DUPLEX WITH 2, 5" INBUILT CARD STRIPS	
2-50026	CARD PLATEN ROLL WITHOUT KNOBS & RATCHET-20" AUTOMATIC DUPLEX WITH 3, 5" INBUILT CARD STRIPS	
2-50027	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS-11" AUTOMATIC DUPLEX WITH 1, 8" INBUILT CARD STRIP	
2-50028	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS-13" AUTOMATIC DUPLEX WITH 1, 8" INBUILT CARD STRIP	
2-50029	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS-15" AUTOMATIC DUPLEX WITH 2, 5" INBUILT CARD STRIPS	
2-50030	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS-20" AUTOMATIC DUPLEX WITH 3, 5" INBUILT CARD STRIPS	
2-50031	CARD PLATEN ROLL COMPLETE WITH KNOBS - 11" AUTOMATIC DUPLEX WITH 1, 8" INBUILT CARD STRIP	
2-50032	CARD PLATEN ROLL COMPLETE WITH KNOBS - 13" AUTOMATIC DUPLEX WITH 1, 8" INBUILT CARD STRIP	
2-50033	CARD PLATEN ROLL COMPLETE WITH KNOBS - 15" AUTOMATIC DUPLEX WITH 2, 5" INBUILT CARD STRIPS	
2-50034	CARD PLATEN ROLL COMPLETE WITH KNOBS - 20" AUTOMATIC DUPLEX WITH 3, 5" INBUILT CARD STRIPS	
2-50035	PAPER SCALE ARM SUPPORT CAM GUIDE - 11" TO 20" CARRIAGES - AUTOMATIC DUPLEX FEED	
2-50036	CARD PLATEN ROLL ASSEM. WITHOUT KNOBS & RAT.-13" AUTO. DUPLEX WITH 1, 10" INBUILT CARD STRIP	
2-50037	CARD PLATEN ROLL COMPLETE, WITHOUT KNOBS-13" AUTOMATIC DUPLEX WITH 1, 10" INBUILT CARD STRIP	
2-50038	CARD PLATEN ROLL COMPLETE WITH KNOBS-13" AUTO. DUPLEX FEED WITH 1, 10" INBUILT CARD STRIP	

CARD PLATEN ROLL - DETACHABLE CLAMP

2-40092	CARD CLAMP CATCH SCREW FOR CARD PLATEN DETACHABLE CLAMP	
2-44790	DOUBLE EDGE CARD CLAMP - 11" CARRIAGE	
2-44791	DOUBLE EDGE CARD CLAMP - 13" CARRIAGE	
2-44792	DOUBLE EDGE CARD CLAMP - 15" CARRIAGE	
2-44793	DOUBLE EDGE CARD CLAMP - 20" CARRIAGE	
2-44797	CARD CLAMP CATCH, ASSEMBLED	
2-44798	CARD CLAMP CENTER GUIDE	
2-44799	CARD CLAMP SIDE GUIDE	
2-50044	CARD PLATEN ROLL ASSEMBLED - SPECIAL DETACHABLE CLAMP (SPECIFY GRADE) 11" CARRIAGE	
2-50045	CARD PLATEN ROLL ASSEMBLED - SPECIAL DETACHABLE CLAMP (SPECIFY GRADE) 13" CARRIAGE	
2-50046	CARD PLATEN ROLL ASSEMBLED - SPECIAL DETACHABLE CLAMP (SPECIFY GRADE) 15" CARRIAGE	
2-50047	CARD PLATEN ROLL ASSEMBLED - SPECIAL DETACHABLE CLAMP (SPECIFY GRADE) 20" CARRIAGE	
2-50048	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL DETACHABLE CLAMP (SPEC. TEETH & GRADE) 11"	
2-50049	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL DETACHABLE CLAMP (SPEC. TEETH & GRADE) 13"	
2-50050	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL DETACHABLE CLAMP (SPEC. TEETH & GRADE) 15"	
2-50051	CARD PLATEN ROLL COMPLETE WITHOUT KNOBS - SPECIAL DETACHABLE CLAMP (SPEC. TEETH & GRADE) 20"	
2-50052	CARD PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL DETACHABLE CLAMP (SPECIFY TEETH & GRADE) 11"	
2-50053	CARD PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL DETACHABLE CLAMP (SPECIFY TEETH & GRADE) 13"	
2-50054	CARD PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL DETACHABLE CLAMP (SPECIFY TEETH & GRADE) 15"	
2-50055	CARD PLATEN ROLL COMPLETE WITH KNOBS - SPECIAL DETACHABLE CLAMP (SPECIFY TEETH & GRADE) 20"	

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
DUPLEX ESCAPEMENT - HALF SPACE MECHANISM
BENGALI - BURMESE - GURMUKHI

PART NO.	DESCRIPTION	CABINET LOCATION
2-40004	HALF SPACE UNIVERSAL BAR STOP MOUNTING SCREW	
2-40040	HALF SPACE SELECTOR COMB SUPPORT BAR MOUNTING SCREW	
2-40092	HALF SPACE SELECTOR COMB MOUNTING SCREW	
2-40118	HALF SPACE UNIVERSAL BAR BELL CRANK ADJUSTMENT SCREW	
2-40408	ESCAPEMENT LOOSE DOG STOP SCREW NUT	
2-40408	HALF SPACE STOP BRACKET SCREW NUT	
2-40409	HALF SPACE STOP ACTUATOR DOWN STOP SCREW NUT	
2-40409	HALF SPACE UNIVERSAL BAR LINK SCREW NUT	
2-41167	SPACE KEY PUSH LINK, ASSEMBLED - 6 SPACE	
2-41169	SPACE KEY PUSH LINK, ASSEMBLED - 8 AND 16 SPACE	
2-42771	ESCAPEMENT ROCKER, ASSEMBLED - 6 SPACE	
2-42772	ESCAPEMENT ROCKER, COMPLETE - 6 SPACE	
2-42782	ESCAPEMENT LOOSE DOG RELEASE, COMPLETE	
2-42784	ESCAPEMENT ROCKER, ASSEMBLED - 10 SPACE	
2-42785	ESCAPEMENT ROCKER, COMPLETE - 10 SPACE	
2-42795	ESCAPEMENT LOOSE DOG, ASSEMBLED	
2-42798	ESCAPEMENT LOOSE DOG GUIDE	
2-42799	HALF SPACE STOP, ASSEMBLED	
2-42908	ESCAPEMENT LOOSE DOG SPRING - 10 SPACE	
2-42939	HALF SPACE UNIVERSAL BAR BELL CRANK SPRING	
2-42940	HALF SPACE STOP SPRING	
2-42941	ESCAPEMENT LOOSE DOG SPRING - 8 AND 16 SPACE	
2-42942	HALF SPACE STOP ACTUATOR ARM SPRING	
2-42945	TABULATOR BLADE RETAINING WIRE SLEEVE	
2-48065	HALF SPACE UNIVERSAL BAR LINK SCREW	
2-48113	HALF SPACE STOP BRACKET SCREW	
2-48113	ESCAPEMENT LOOSE DOG STOP SCREW - 10 SPACE	
2-48124	HALF SPACE STOP ACTUATOR DOWN STOP SCREW	
2-48127	ESCAPEMENT ROCKER STOP SCREW, UPPER	
2-48128	ESCAPEMENT LOOSE DOG STOP SCREW, LONG - 8 AND 16 SPACE	
2-49501	HALF SPACE SELECTOR COMB	
2-49502	HALF SPACE SELECTOR FULCRUM WIRE	
2-49503	HALF SPACE SELECTOR COMB SUPPORT BAR	
2-49505	HALF SPACE SELECTOR, NO. 22 LEVER, SECOND ROW	
2-49506	HALF SPACE SELECTOR, NO. 21 LEVER, THIRD ROW	
2-49508	HALF SPACE UNIVERSAL BAR LINK, ASSEMBLED	
2-49510	HALF SPACE UNIVERSAL BAR, ASSEMBLED	
2-49516	ESCAPEMENT SPACE KEY ARM	
2-49517	ESCAPEMENT ROCKER, COMPLETE	
2-50147	SHIFT LEVER, LEFT, ASSEMBLED - 44 KEY MACHINE	
2-50149	SHIFT LEVER, RIGHT, COMPLETE	
2-50150	KEY LEVER, NO. 21, THIRD ROW, ASSEMBLED	
2-50151	KEY LEVER, NO. 22, SECOND ROW, ASSEMBLED	
2-50152	SIDE PLATE, LEFT, ASSEMBLED	
2-50153	SIDE PLATE, RIGHT, ASSEMBLED	
2-50154	TABULATOR BLADE UPPER COMB	
2-50155	TABULATOR BLADE LOWER COMB & ESCAPEMENT OPERATING BAIL BRACKET, ASSEMBLED	
2-50156	TABULATOR KEY UP STOP	
2-50157	HALF SPACE STOP ACTUATOR, ASSEMBLED	
2-50158	HALF SPACE UNIVERSAL BAR STOP	
2-50159	LINE LOCK UNIVERSAL BAR	
2-53521	BACK SPACE PAWL - NO. 6A - 6 SPACE	
2-53522	BACK SPACE PAWL - NO. 10A - 10 SPACE	
2-57206	ESCAPEMENT ROCKER BRACKET, ASSEMBLED (O.S. - SUP. BY 2-57233)	
2-57207	ESCAPEMENT ROCKER SPRING	
2-57209	ESCAPEMENT LOOSE DOG SILENCER	
2-57227	ESCAPEMENT WHEEL, ASSEMBLED - 10 SPACE	
2-57233	ESCAPEMENT ROCKER BRACKET, ASSEMBLED	

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
FLEXOPRINT CARD PLATEN

PART NO.	DESCRIPTION	CABINET LOCATION
4-10505	FLEXOPRINT PLATEN STOP SET SCREW	_____
4-18853	FLEXOPRINT PLATEN HANDLE, ASSEMBLED	_____
4-18858	FLEXOPRINT PLATEN HANDLE LOCKING SCREW	_____
4-18872	FLEXOPRINT PLATEN HANDLE SCREW	_____
4-18874	FLEXOPRINT PLATEN HANDLE KNOB	_____
4-18886	FLEXOPRINT PLATEN HANDLE SPACER	_____
4-18887	FLEXOPRINT PLATEN HANDLE STOP	_____
4-20020	PLATEN ROLL CARD HOLDER WASHER	_____
4-20021	PLATEN ROLL CARD HOLDER SCREW	_____
4-20022	PLATEN ROLL CARD STOP	_____
4-20038	PLATEN ROLL CARD HOLDER - 11" CARRIAGE	_____
4-20039	PLATEN ROLL CARD HOLDER - 13" CARRIAGE	_____
4-20040	PLATEN ROLL CARD HOLDER - 15" CARRIAGE	_____
4-20041	PLATEN ROLL CARD HOLDER - 20" CARRIAGE	_____
4-20042	PLATEN ROLL CARD HOLDER - 27" CARRIAGE	_____
4-20044	ALIGNING SCALE, ASSEMBLED - 6 SPACE	_____
4-20045	ALIGNING SCALE, ASSEMBLED - 8 SPACE	_____
4-20046	ALIGNING SCALE, ASSEMBLED - 9 1/3 SPACE	_____
4-20047	ALIGNING SCALE, ASSEMBLED - 10 SPACE	_____
4-20048	ALIGNING SCALE, ASSEMBLED - 12 SPACE	_____
4-20049	ALIGNING SCALE, ASSEMBLED - 14 SPACE	_____
4-20050	ALIGNING SCALE, ASSEMBLED - 16 SPACE	_____
2-40092	TOP COVER APRON SCREW	_____
2-40215	FLEXOPRINT PLATEN STOP SCREW, LONG	_____
2-50360	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C, 30T RATCHET - 11" CARRIAGE	_____
2-50361	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C, 30T RATCHET - 13" CARRIAGE	_____
2-50362	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C, 30T RATCHET - 15" CARRIAGE	_____
2-50363	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C, 30T RATCHET - 20" CARRIAGE	_____
2-50365	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C, 30T RATCHET - 27" CARRIAGE	_____
2-50367	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C, 30T RATCHET - 11" CARRIAGE	_____
2-50368	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C, 30T RATCHET - 13" CARRIAGE	_____
2-50369	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C, 30T RATCHET - 15" CARRIAGE	_____
2-50370	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C, 30T RATCHET - 20" CARRIAGE	_____
2-50372	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C, 30T RATCHET - 27" CARRIAGE	_____
2-50374	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C - 11" CARRIAGE (SPECIFY RATCHET)	_____
2-50375	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C - 13" CARRIAGE (SPECIFY RATCHET)	_____
2-50376	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C - 15" CARRIAGE (SPECIFY RATCHET)	_____
2-50377	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C - 20" CARRIAGE (SPECIFY RATCHET)	_____
2-50379	PLATEN ROLL COMPLETE WITHOUT KNOBS - GRADE 3C - 27" CARRIAGE (SPECIFY RATCHET)	_____
2-50381	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C - 11" CARRIAGE (SPECIFY RATCHET)	_____
2-50382	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C - 13" CARRIAGE (SPECIFY RATCHET)	_____
2-50383	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C - 15" CARRIAGE (SPECIFY RATCHET)	_____
2-50384	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C - 20" CARRIAGE (SPECIFY RATCHET)	_____
2-50386	PLATEN ROLL COMPLETE WITH KNOBS - GRADE 3C - 27" CARRIAGE (SPECIFY RATCHET)	_____
2-50396	PAPER TROUGH WITHOUT WINDOWS - 11" CARRIAGE	_____
2-50398	PAPER TROUGH WITHOUT WINDOWS - 13" CARRIAGE	_____
2-50400	PAPER TROUGH WITHOUT WINDOWS - 15" CARRIAGE	_____
2-50402	PAPER TROUGH WITHOUT WINDOWS, LEFT - 20" CARRIAGE	_____
2-50404	PAPER TROUGH WITHOUT WINDOWS, RIGHT - 20" CARRIAGE	_____
2-50410	PAPER TROUGH WITHOUT WINDOWS, LEFT - 27" CARRIAGE	_____
2-50412	PAPER TROUGH WITHOUT WINDOWS, RIGHT - 27" CARRIAGE	_____
2-50415	PLATEN STOP SCREW	_____
2-50416	CARRIAGE END, RIGHT, ASSEMBLED	_____
2-50423	PLATEN ROLL KNOB, LEFT, ASSEMBLED	_____
2-50424	VARIABLE LINE SPACE PLUNGER BUTTON, ASSEMBLED	_____
2-50426	CARRIAGE END COVER, RIGHT	_____
2-50427	ALIGNING SCALE BRACKET	_____

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
PAGE END INDICATOR

PART NO.	DESCRIPTION	CABINET LOCATION
2-40040	SEMAPHORE LEVER BRACKET MOUNTING SCREW - PAGE END INDICATOR	_____
2-40216	PAPER SCALE ARM SHAFT CLAMP SCREW - 11" TO 32" CARRIAGES - PAGE END INDICATOR	_____
2-40410	SEMAPHORE INDICATOR STOP NUT - PAGE END INDICATOR	_____
2-50056	PAPER TROUGH, ASSEMBLED - PAGE END INDICATOR - 11" CARRIAGE	_____
2-50057	PAPER TROUGH, ASSEMBLED - PAGE END INDICATOR - 13" CARRIAGE	_____
2-50058	PAPER TROUGH, ASSEMBLED - PAGE END INDICATOR - 15" CARRIAGE	_____
2-50059	PAPER TROUGH LEFT, ASSEMBLED - PAGE END INDICATOR - 20" CARRIAGE	_____
2-50061	PAPER TROUGH LEFT, ASSEMBLED - PAGE END INDICATOR - 27" CARRIAGE	_____
2-50062	PAPER TROUGH LEFT, ASSEMBLED - PAGE END INDICATOR - 32" CARRIAGE	_____
2-50064	PAPER TABLE, ASSEMBLED - 11" CARRIAGE - PAGE END INDICATOR	_____
2-50065	PAPER TABLE, ASSEMBLED - 13" CARRIAGE - PAGE END INDICATOR	_____
2-50066	PAPER TABLE, ASSEMBLED - 15" CARRIAGE - PAGE END INDICATOR	_____
2-50067	PAPER TABLE, ASSEMBLED - 20" CARRIAGE - PAGE END INDICATOR	_____
2-50069	PAPER TABLE, ASSEMBLED - 27" CARRIAGE - PAGE END INDICATOR	_____
2-50070	PAPER TABLE, ASSEMBLED - 32" CARRIAGE - PAGE END INDICATOR	_____
2-50071	CARRIAGE END, LEFT, ASSEMBLED - PAGE END INDICATOR	_____
2-50072	SEMAPHORE INDICATOR STOP - PAGE END INDICATOR	_____
2-51368	PAPER TABLE ASSEMBLED - 11" CARRIAGE - PAGE END INDICATOR (O.S. - SUP. BY 2-50064)	_____
2-51387	PAPER TABLE ASSEMBLED - 13" CARRIAGE - PAGE END INDICATOR (O.S. - SUP. BY 2-50065)	_____
2-51388	PAPER TABLE ASSEMBLED - 15" CARRIAGE - PAGE END INDICATOR (O.S. - SUP. BY 2-50066)	_____
2-51389	PAPER TABLE ASSEMBLED - 20" CARRIAGE - PAGE END INDICATOR (O.S. - SUP. BY 2-50067)	_____
2-51391	PAPER TABLE ASSEMBLED - 27" CARRIAGE - PAGE END INDICATOR (O.S. - SUP. BY 2-50069)	_____
2-51392	PAPER TABLE ASSEMBLED - 32" CARRIAGE - PAGE END INDICATOR (O.S. - SUP. BY 2-50070)	_____
2-55000	CARRIAGE END LEFT, ASSEMBLED - PAGE END INDICATOR	_____
2-56005	SEMAPHORE INDICATOR, ASSEMBLED - PAGE END INDICATOR	_____
2-56007	SEMAPHORE LEVER BRACKET, ASSEMBLED - PAGE END INDICATOR	_____
2-56052	SEMAPHORE SPRING - PAGE END INDICATOR	_____
2-56057	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 2C - 11" CARRIAGE	_____
2-56058	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 2C - 13" CARRIAGE	_____
2-56059	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 2C - 15" CARRIAGE	_____
2-56060	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2C - 11"	_____
2-56061	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2C - 13"	_____
2-56062	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2C - 15"	_____
2-56063	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2C - 11"	_____
2-56064	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2C - 13"	_____
2-56065	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2C - 15"	_____
2-56066	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2C - 11"	_____
2-56067	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2C - 13"	_____
2-56068	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2C - 15"	_____
2-56069	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2C - 11"	_____
2-56070	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2C - 13"	_____
2-56071	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2C - 15"	_____
2-56083	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 2 - 20" CARRIAGE	_____
2-56085	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 2 - 27" CARRIAGE	_____
2-56086	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 2 - 32" CARRIAGE	_____
2-56087	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2 - 20"	_____
2-56089	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2 - 27"	_____
2-56090	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2 - 32"	_____
2-56091	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2 - 20"	_____
2-56093	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2 - 27"	_____
2-56094	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2 - 32"	_____
2-56095	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2 - 20"	_____
2-56097	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2 - 27"	_____
2-56098	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 2 - 32"	_____
2-56099	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2 - 20"	_____

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
PAGE END INDICATOR (CONTINUED)

PART NO.	DESCRIPTION	CABINET LOCATION
2-56101	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2 - 27"	_____
2-56102	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 2 - 32"	_____
2-56110	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 3C - 11" CARRIAGE	_____
2-56111	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 3C - 13" CARRIAGE	_____
2-56112	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 3C - 15" CARRIAGE	_____
2-56113	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 4C - 11" CARRIAGE	_____
2-56114	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 4C - 13" CARRIAGE	_____
2-56115	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 4C - 15"	_____
2-56116	PLATEN ROLL COMP. WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3C - 11"	_____
2-56117	PLATEN ROLL COMP. WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3C - 13"	_____
2-56118	PLATEN ROLL COMP. WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3C - 15"	_____
2-56119	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3C - 11"	_____
2-56120	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3C - 13"	_____
2-56121	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3C - 15"	_____
2-56122	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3C - 11"	_____
2-56123	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3C - 13"	_____
2-56124	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3C - 15"	_____
2-56125	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3C - 11"	_____
2-56126	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3C - 13"	_____
2-56127	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3C - 15"	_____
2-56128	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4C - 11"	_____
2-56129	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4C - 13"	_____
2-56130	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4C - 15"	_____
2-56131	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4C - 11"	_____
2-56132	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4C - 13"	_____
2-56133	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4C - 15"	_____
2-56134	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4C - 11"	_____
2-56135	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4C - 13"	_____
2-56136	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4C - 15"	_____
2-56137	PLATEN ROLL COMP. WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4C - 11"	_____
2-56138	PLATEN ROLL COMP. WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4C - 13"	_____
2-56139	PLATEN ROLL COMP. WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4C - 15"	_____
2-56141	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 3 - 20" CARRIAGE	_____
2-56143	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 3 - 27" CARRIAGE	•
2-56144	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 3 - 32" CARRIAGE	_____
2-56145	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 4 - 20" CARRIAGE	_____
2-56147	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 4 - 27" CARRIAGE	_____
2-56148	PLATEN ROLL ASSEMBLED - PAGE END INDICATOR - GRADE 4 - 32" CARRIAGE	_____
2-56149	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3 - 20"	_____
2-56151	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3 - 27"	_____
2-56152	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3 - 32"	_____
2-56153	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3 - 20"	_____
2-56155	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3 - 27"	_____
2-56156	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3 - 32"	_____
2-56157	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3 - 20"	_____
2-56159	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3 - 27"	_____
2-56160	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 3 - 32"	_____
2-56161	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3 - 20"	_____
2-56163	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3 - 27"	_____
2-56164	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 3 - 32"	_____
2-56165	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4 - 20"	_____
2-56167	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4 - 27"	_____
2-56168	PLATEN ROLL COMPLETE WITHOUT KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4 - 32"	_____
2-56169	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4 - 20"	_____
2-56171	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4 - 27"	_____

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT

PAGE END INDICATOR (CONTINUED)

PART NO.	DESCRIPTION	CABINET LOCATION
2-56172	PLATEN ROLL COMP. WITHOUT KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4 - 32"	_____
2-56173	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4 - 20"	_____
2-56175	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4 - 27"	_____
2-56176	PLATEN ROLL COMPLETE WITH KNOBS - REGULAR, 30 TOOTH - PAGE END INDICATOR - GRADE 4 - 32"	_____
2-56177	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4 - 20"	_____
2-56179	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4 - 27"	_____
2-56180	PLATEN ROLL COMPLETE WITH KNOBS - SPEC., SPECIFY TEETH - PAGE END INDICATOR - GRADE 4 - 32"	_____
2-57034	SEMAPHORE INDICATOR KEEPER - PAGE END INDICATOR	_____

PALM & THUMB TABULATOR

3-7103	PALM TABULATOR KEY ACTUATOR DRIVING STUD CLIP	_____
4-12957	PALM TABULATOR KEY LEVER SPACER	_____
2-40092	THUMB TABULATOR KEY LEVER SUPPORT PLATE SCREW	_____
2-40110	PALM TABULATOR KEY ACTUATOR COLLAR SET SCREW - 10 KEY TABULATOR	_____
2-40198	PALM TABULATOR KEY LEVER PIVOT SCREW	_____
2-40240	PALM TABULATOR KEY LOCATING COLLAR SCREW - 10 KEY TABULATOR	_____
2-40409	PALM TABULATOR KEY ACTUATOR BELL CRANK SCREW NUT	_____
2-40861	PALM TABULATOR FRAME, POSITION #1 LOCATING COLLAR - 10 KEY TABULATOR	_____
2-48820	PALM TABULATOR KEY ACTUATOR BELL CRANK SPACER	_____
2-50077	PALM TABULATOR KEY ACTUATOR ASSEMBLED - 1 KEY TABULATOR	_____
2-50078	PALM TABULATOR KEY ACTUATOR ASSEMBLED - 10 KEY TABULATOR	_____
2-50081	PALM TABULATOR KEY LEVER, RIGHT, ASSEMBLED	_____
2-50082	PALM TABULATOR KEY LEVER, LEFT, ASSEMBLED	_____
2-50085	PALM TABULATOR KEY ACTUATOR BELL CRANK, RIGHT, ASSEMBLED	_____
2-50086	PALM TABULATOR KEY ACTUATOR BELL CRANK, LEFT, ASSEMBLED	_____
2-50087	PALM TABULATOR KEY ACTUATOR SPRING	_____
2-50088	PALM TABULATOR KEY ACTUATOR BELL CRANK SCREW	_____
2-50089	PALM TABULATOR KEY LEVER SCREW PLATE	_____
2-50091	PALM TABULATOR CUSHION ECCENTRIC	_____
2-50092	PALM TABULATOR CUSHION SCREW	_____
2-50093	PALM TABULATOR KEY ASSEMBLED - 1 KEY TABULATOR	_____
2-50094	PALM TABULATOR KEY ASSEMBLED, POSITION #1 - 10 KEY TABULATOR	_____
2-50095	PALM TABULATOR SPACE KEY ASSEMBLED	_____
2-50097	PALM TABULATOR FRAME BASE ASSEMBLED - RIGHT HAND PALM TABULATOR	_____
2-50098	PALM TABULATOR FRAME BASE ASSEMBLED - LEFT HAND PALM TABULATOR	_____
2-50099	THUMB TABULATOR KEY LEVER, ASSEMBLED	_____
2-50101	THUMB TABULATOR CONNECTING LINK ASSEMBLED - 1 KEY TABULATOR	_____
2-50102	THUMB TABULATOR CONNECTING LINK ASSEMBLED - 10 KEY TABULATOR	_____
2-50103	THUMB TABULATOR SPACE KEY UP STOP	_____
2-50104	THUMB TABULATOR BELL CRANK ASSEMBLED	_____
2-50107	PALM TABULATOR KEY ACTUATOR COLLAR - 10 KEY TABULATOR	_____
2-51956	PALM TABULATOR CUSHION	_____
2-57034	PALM TABULATOR KEY LEVER STUD KEEPER	_____

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
SIAMESE

PART NO.	DESCRIPTION	CABINET LOCATION
2-41795	TYPE BAR DEAD KEY OFFSET ASSEM. WITH TYPE - SIAMESE No. 8 - 8 SPACE (SPEC. TYPE & KEYBOARD)	
2-41796	TYPE BAR DEAD KEY OFFSET ASSEM. WITH TYPE - SIAMESE No. 10 - 10 SPACE (SPEC. TYPE & KEYBOARD)	
2-41797	TYPE BAR DEAD KEY OFFSET ASSEM. WITH TYPE - SIAMESE No. 12 - 12 SPACE (SPEC. TYPE & KEYBOARD)	
2-50119	KEY LEVER ASSEMBLED #19 VS	
2-50120	KEY LEVER ASSEMBLED #20 VS	
2-50121	KEY LEVER ASSEMBLED #21 VS	
2-50122	KEY LEVER ASSEMBLED #22 VS	
2-50124	KEY LEVER ASSEMBLED #24 VS	
2-50125	KEY LEVER ASSEMBLED #25 VS	
2-50126	KEY LEVER ASSEMBLED #26 VS	
2-50127	KEY LEVER ASSEMBLED #27 VS	
2-50128	KEY LEVER ASSEMBLED #28 VS	
2-50129	KEY LEVER ASSEMBLED #29 VS	
2-50130	KEY LEVER ASSEMBLED #30 VS	
2-50131	KEY LEVER ASSEMBLED #31 VS	
2-50132	KEY LEVER ASSEMBLED #32 VS	
2-50133	KEY LEVER ASSEMBLED #33 VS	
2-50134	KEY LEVER ASSEMBLED #34 VS	
2-50135	KEY LEVER ASSEMBLED #35 VS	
2-50136	KEY LEVER ASSEMBLED #36 VS	
2-50137	KEY LEVER ASSEMBLED #37 VS	
2-50138	KEY LEVER ASSEMBLED #38 VS	
2-50139	KEY LEVER ASSEMBLED #39 VS	
2-50140	KEY LEVER ASSEMBLED #40 VS	
2-50141	KEY LEVER ASSEMBLED #41 VS	
2-50142	KEY LEVER ASSEMBLED #42 VS	
2-50143	KEY LEVER ASSEMBLED #43 VS	
2-50144	KEY LEVER ASSEMBLED #44 VS	
2-50145	KEY LEVER ASSEMBLED #45 VS	
2-50219	TYPE BAR BELL CRANK ASSEMBLED #19 VS	
2-50220	TYPE BAR BELL CRANK ASSEMBLED #20 VS	
2-50221	TYPE BAR BELL CRANK ASSEMBLED #21 VS	
2-50222	TYPE BAR BELL CRANK ASSEMBLED #22 VS	
2-50223	TYPE BAR BELL CRANK ASSEMBLED #23 VS	
2-50224	TYPE BAR BELL CRANK ASSEMBLED #24 VS	
2-50225	TYPE BAR BELL CRANK ASSEMBLED #25 VS	
2-50226	TYPE BAR BELL CRANK ASSEMBLED #26 VS	
2-50227	TYPE BAR BELL CRANK ASSEMBLED #27 VS	
2-50228	TYPE BAR BELL CRANK ASSEMBLED #28 VS	
2-50229	TYPE BAR BELL CRANK ASSEMBLED #29 VS	
2-50230	TYPE BAR BELL CRANK ASSEMBLED #30 VS	
2-50231	TYPE BAR BELL CRANK ASSEMBLED #31 VS	
2-50232	TYPE BAR BELL CRANK ASSEMBLED #32 VS	
2-50233	TYPE BAR BELL CRANK ASSEMBLED #33 VS	
2-50234	TYPE BAR BELL CRANK ASSEMBLED #34 VS	
2-50235	TYPE BAR BELL CRANK ASSEMBLED #35 VS	
2-50236	TYPE BAR BELL CRANK ASSEMBLED #36 VS	
2-50237	TYPE BAR BELL CRANK ASSEMBLED #37 VS	
2-50238	TYPE BAR BELL CRANK ASSEMBLED #38 VS	
2-50239	TYPE BAR BELL CRANK ASSEMBLED #39 VS	
2-50240	TYPE BAR BELL CRANK ASSEMBLED #40 VS	
2-50241	TYPE BAR BELL CRANK ASSEMBLED #41 VS	
2-50242	TYPE BAR BELL CRANK ASSEMBLED #42 VS	
2-50243	TYPE BAR BELL CRANK ASSEMBLED #43 VS	
2-50244	TYPE BAR BELL CRANK ASSEMBLED #44 VS	
2-50245	TYPE BAR BELL CRANK ASSEMBLED #45 VS	

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT

STROKE COUNTER

PART NO.	DESCRIPTION	CABINET LOCATION
2-40079	COUNTER SCREW	
2-40114	COUNTER ESCAPEMENT ARM SCREW, LEFT	
2-40180	COUNTER LEVER LINK SCREW	
2-40200	COUNTER ESCAPEMENT ARM SCREW, RIGHT	
2-40407	COUNTER BRACKET SCREW NUT	
2-40408	COUNTER LEVER LINK SCREW NUT	
2-40409	COUNTER SCREW NUT	
2-40805	COUNTER LEVER CLIP	
2-40862	COUNTER LEVER LINK SCREW WASHER	
2-40941	COUNTER BACK LASH PAWL WASHER	
2-42863	COUNTER DRIVE PAWL SPRING	
2-42864	COUNTER BACK LASH PAWL SPRING	
2-42902	COUNTER LEVER LINK SPRING	
2-44300	COUNTER ESCAPEMENT ARM	
2-44305	COUNTER BRACKET COMPLETE	
2-44306	COUNTER LEVER COMPLETE	
2-44309	COUNTER - 50 TOOTH RATCHET AND SCREWS - 10 TO 1 RATIO	
2-44310	COUNTER - 50 TOOTH RATCHET AND SCREWS - 100 TO 1 RATIO	
2-44311	COUNTER - 50 TOOTH RATCHET AND SCREWS - 240 TO 1 RATIO	
2-44318	COUNTER COMPLETE - 10 TO 1 RATIO	
2-44319	COUNTER COMPLETE - 100 TO 1 RATIO	
2-44320	COUNTER COMPLETE - 240 TO 1 RATIO	
2-50008	COUNTER BRACKET SCREW	
2-50009	COUNTER ESCAPEMENT ROCKER BRACKET AND SUPPORT PLATE SCREW	
2-50010	COUNTER BRACKET SPACER	
2-50011	COUNTER ESCAPEMENT ROCKER SUPPORT PLATE	
2-50012	COUNTER MARGINAL STOP AND RELEASE BLADE LINK (O.S.)	
2-50013	COUNTER - CARRIAGE END COVER, RIGHT (O.S. - SUP.BY 2-50063)	
2-50063	COUNTER - CARRIAGE END COVER, RIGHT	

WESTERN UNION - BLACK KRINKLE FINISH
8 AND 10 SPACE - 11" CARRIAGE - 42 KEY MACHINE

2-50430	FRAME BASE ASSEMBLY	
2-50431	PLATEN LOCK COVER, LEFT	
2-50432	PLATEN LOCK COVER, RIGHT	
2-50433	TOP COVER, ASSEMBLED	
2-50436	TOP COVER APRON LEFT, ASSEMBLED	
2-50437	TOP COVER APRON RIGHT, ASSEMBLED	
2-50438	SIDE COVER LEFT, ASSEMBLED - 11" CARRIAGE	
2-50439	SIDE COVER RIGHT, ASSEMBLED - 11" CARRIAGE	
2-50440	CARRIAGE END COVER, LEFT	
2-50441	CARRIAGE END COVER, RIGHT	
2-50442	FRONT PANEL (WITHOUT TAB)	
2-50444	TIE BAR, ASSEMBLED (TABULATOR)	
2-50445	PAPER TABLE, ASSEMBLED - 11" CARRIAGE	
2-50447	MARGIN STOP SCALE, 8 SPACE - 11" CARRIAGE	
2-50448	MARGIN STOP SCALE, 10 SPACE - 11" CARRIAGE	
2-50449	ALIGNING SCALE BRACKET	
2-50450	KEY LEVER COMB	
2-50451	REAR COVER, ASSEMBLED	
2-50452	FRONT PANEL - 1 KEY TAB	

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
SPECIAL FOR SWITZERLAND - BRIGHT CHROME AND NICKEL PARTS
13" - 15" - 20" CARRIAGES - 60 TOOTH RATCHET - 1.6291 DIA. PLATENS

PART NO.	DESCRIPTION	CABINET LOCATION
2-50304	TYPE BAR GUIDE SCREW	_____
2-50306	TYPE BAR GUIDE	_____
2-50307	VARIABLE LINE SPACE COVER	_____
2-50308	LINE SPACE RATCHET - 60 TOOTH	_____
2-50309	FRONT PANEL SCREW	_____
2-50310	NAME PLATE	_____
2-50314	PAPER BAIL SCALE - 6 SPACE - 13" CARRIAGE	_____
2-50315	PAPER BAIL SCALE - 10 SPACE - 13" CARRIAGE	_____
2-50316	PAPER BAIL SCALE - 12 SPACE - 13" CARRIAGE	_____
2-50317	PAPER BAIL SCALE - 16 SPACE - 13" CARRIAGE	_____
2-50318	PAPER BAIL SCALE - 10 SPACE - 15" CARRIAGE	_____
2-50319	PAPER BAIL SCALE - 12 SPACE - 15" CARRIAGE	_____
2-50320	PAPER BAIL SCALE - 10 SPACE - 20" CARRIAGE	_____
2-50321	PAPER BAIL SCALE - 12 SPACE - 20" CARRIAGE	_____
2-50322	PAPER TROUGH, ASSEMBLED - 13" CARRIAGE	_____
2-50323	PAPER TROUGH, ASSEMBLED - 15" CARRIAGE	_____
2-50324	PAPER TROUGH, LEFT, ASSEMBLED - 20" CARRIAGE	_____
2-50325	PAPER TROUGH, RIGHT, ASSEMBLED - 20" CARRIAGE	_____
2-50326	LINE SPACE LEVER BRACKET	_____
2-50327	CARRIAGE END, LEFT, ASSEMBLED	_____
2-50328	CARRIAGE END, RIGHT, ASSEMBLED	_____
2-50329	PLATEN SHAFT BUSHING, LEFT	_____
2-50330	PLATEN SHAFT BUSHING, RIGHT	_____
2-50332	PLATEN ROLL KNOB, LEFT, ASSEMBLED	_____
2-50334	PLATEN ROLL KNOB, RIGHT, ASSEMBLED	_____
2-50342	PLATEN ROLL, ASSEMBLED (SPECIFY GRADE) - 13" CARRIAGE	_____
2-50343	PLATEN ROLL, ASSEMBLED (SPECIFY GRADE) - 15" CARRIAGE	_____
2-50344	PLATEN ROLL, ASSEMBLED (SPECIFY GRADE) - 20" CARRIAGE	_____
2-50345	KEY TENSION REGULATOR KNOB	_____
2-50345	RIBBON CONTROL LEVER KNOB	_____
2-50345	RIBBON DRIVE SHAFT SHIFT LEVER KNOB	_____
2-50346	LINE SPACE RATCHET COVER SCREW	_____
2-50347	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 13" CARRIAGE	_____
2-50348	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 15" CARRIAGE	_____
2-50349	CARRIAGE FEED ROLL SUPPORT BRACKET, ASSEMBLED - 20" CARRIAGE	_____
2-50355	PAPER BAIL SCALE - 6 SPACE - 20" CARRIAGE	_____

REMINGTON STANDARD TYPEWRITER
SPECIAL EQUIPMENT
TYPE BAR SEGMENT - RUBBER ANVIL

PART NO.	DESCRIPTION	CABINET LOCATION
2-43947	TYPE BAR RUBBER ANVIL (SPECIAL)	_____
2-43948	TYPE BAR ANVIL CLAMP (SPECIAL)	_____
2-48051	TYPE BAR ANVIL CLAMP SCREW (SPECIAL)	_____
2-48120	TYPE BAR ANVIL CLAMP SCREW, CENTER (SPECIAL)	_____
2-52430	TYPE BAR SEGMENT #VG - 46 KEY MACHINE - 34TH TO 46TH SLOTS INCLUSIVE NON-RADIAL, 1 TO 33 INCLUSIVE RADIAL - GUJARATI KEYBOARD #822	_____
2-52440	TYPE BAR SEGMENT #V5-8 - 46 KEY MACHINE - MALAYALAM KEYBOARD - 575 TYPE, 8 SPACE	_____
2-52558	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #VG - 46 KEY MACHINE - 34 TO 46 SLOTS INCLUSIVE NON-RADIAL - GUJARATI KEYBOARD #822	_____
2-52570	TYPE BAR SEGMENT, ASSEMBLED #VG - 46 KEY MACHINE - 34 TO 46 INCLUSIVE SLOTS NON-RADIAL, NOT OFFSET - GUJARATI KEYBOARD #822	_____
2-52571	TYPE BAR SEGMENT #UD - 42 AND 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52572	TYPE BAR SEGMENT #VD - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52573	TYPE BAR SEGMENT #T3D - 42 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52574	TYPE BAR SEGMENT #105D - 42 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52575	TYPE BAR SEGMENT #U1D - 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52576	TYPE BAR SEGMENT #U2D - 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52577	TYPE BAR SEGMENT #V1D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52578	TYPE BAR SEGMENT #V2D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52579	TYPE BAR SEGMENT #V3D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52580	TYPE BAR SEGMENT #V5D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52581	TYPE BAR SEGMENT #VGD - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52585	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #UD - 42 & 44 KEY MACH. - RUBBER ANVIL (SPECIAL)	_____
2-52586	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #VD - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52587	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #T3D - 42 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52588	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #105D - 42 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52589	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #U1D - 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52590	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #U2D - 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52591	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V1D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52592	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V2D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52593	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V3D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52594	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #V5D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52595	TYPE BAR SEGMENT, ASSEMBLED WITH TYPE GUIDE #VGD - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52598	TYPE BAR SEGMENT, ASSEMBLED - 42 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52599	TYPE BAR SEGMENT, ASSEMBLED #UD - 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52600	TYPE BAR SEGMENT, ASSEMBLED #VD - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52601	TYPE BAR SEGMENT, ASSEMBLED #T3D - 42 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52602	TYPE BAR SEGMENT, ASSEMBLED #105D - 42 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52603	TYPE BAR SEGMENT, ASSEMBLED #U1D - 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52604	TYPE BAR SEGMENT, ASSEMBLED #U2D - 44 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52605	TYPE BAR SEGMENT, ASSEMBLED #V1D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52606	TYPE BAR SEGMENT, ASSEMBLED #V2D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52607	TYPE BAR SEGMENT, ASSEMBLED #V3D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52608	TYPE BAR SEGMENT, ASSEMBLED #V5D - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____
2-52609	TYPE BAR SEGMENT, ASSEMBLED #VGD - 46 KEY MACHINE - RUBBER ANVIL (SPECIAL)	_____